



## WORKSHOP

### Binding AIO 5Channel Receiver

A1 - DSM2/X Version    B2 - FrSky D8 Version

Power up the receiver by plugging a suitable, charged 1S battery.

Wait until the LED flash on the PCB increases in frequency (8-10 seconds)

Switch on your Transmitter in Bind Mode.

When binding occurs the LED will return to the slower frequency flash, then solid light to indicate a signal is being received from the transmitter.

If you have a motor plugged into the receiver and find that the throttle control is not operating, reduce the trim on the throttle control on your transmitter.

The receiver locks the the throttle at startup and needs the throttle to be at it's lowest point to be activated. Sometimes when binding a new transmitter, the receiver won't unlock throttle with the trim neutral, so lowering the trim will activate the onboard brushed ESC.

PLEASE NOTE: Interference from electrical equipment nearby or metal structures can inhibit binding. Always try and find a low interference location to carry out binding.

