

10-12 Cummins EFI LIVE AUTOCAL installation instructions

**ENSURE THE VEHICLE'S BATTERY IS FULLY CHARGED
BEFORE ATTEMPTING TO PROGRAM VEHICLE.**

How to Flash Tunes Into Vehicle

1. Turn Key on, but NOT cranked.
2. Plug EFI LIVE AUTOCAL into trucks OBD2 port.
3. Scroll (right side button on AUTOCAL) until you see FULL 2 PATCH file.
4. Click ok.
5. It will ask you to License ECU, click ok.
6. Wait for download to complete, then turn ignition off, click ok and wait for countdown to complete.
7. Now turn key back on, scroll back to FULL 1, click ok.
8. Wait for download to complete, then turn ignition off, click ok and wait for countdown to complete.


If you did not order a CSP5 switch, how you would switch power levels is with key in run position or engine running scroll to switch tunes, click ok scroll to desired power level and hit okay and if it was done properly it will tell you tune switched successfully.

If for whatever reason the truck gives you an error code when flashing the FULL 1 File for the 6.7 Cummins, try flashing the Full 2 Patch file tune in and then go back and flash the FULL 1 CSP5DELETE tune back in.

If you are getting an error code or having any issues, please send us an email at DieselPerformanceTx@gmail.com and provide your trucks vin number with detailed information about you issue.

DO NOT DRIVE TRUCK WITH CSP5DELETE TUNE FOR ANY LENGTH OF TIME WITH DPF STILL ON TRUCK AND EGR PLUGS CONNECTED.

Cummins 6.7 only, disconnect EGR valve & Throttle valve plugs. See pictures on back side of instructions.

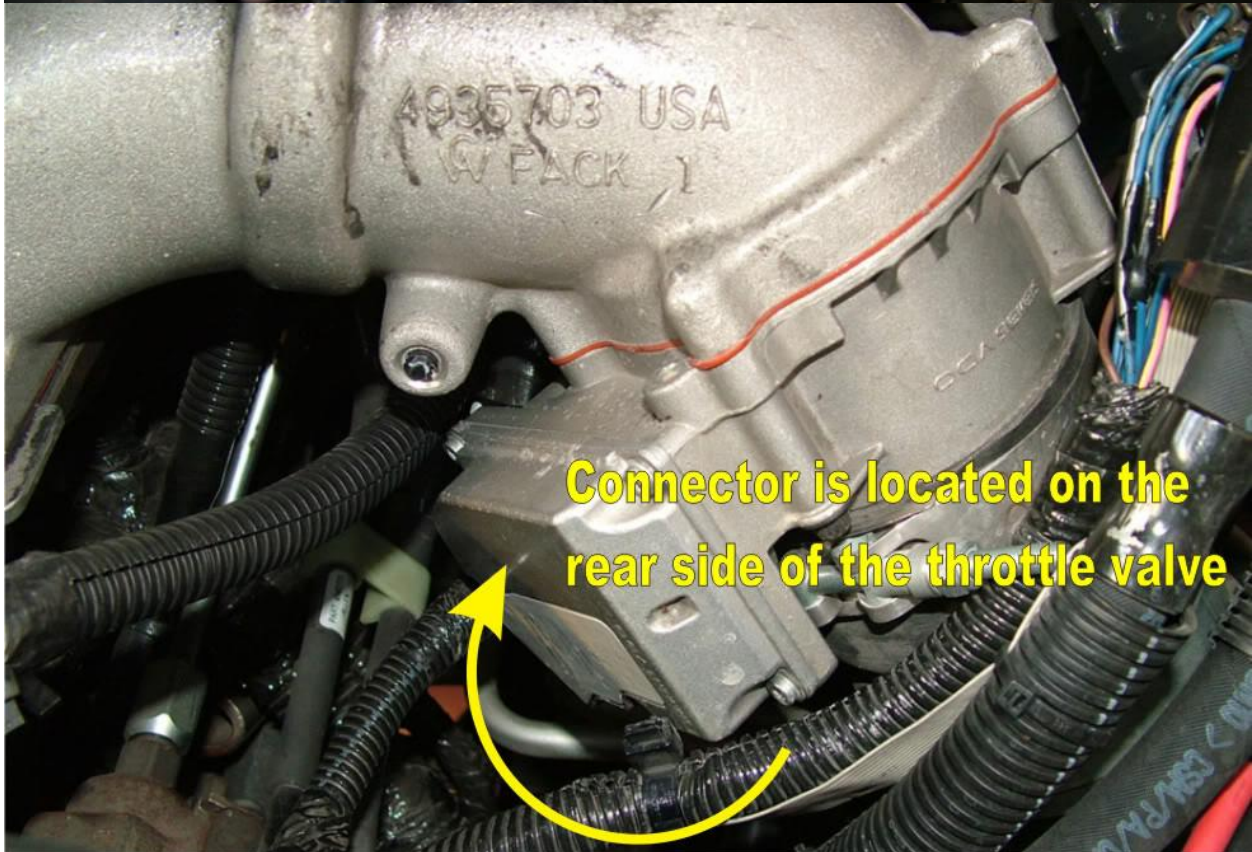

Connector is located on the rear side of the throttle valve