


**O. IMPORTANT! STABILITY RESET / IMPORTANT! RÉTABLISSEMENT DE LA STABILITÉ / WICHTIG! WIEDERHERSTELLEN DER STABILITÄT / IMPORTANTE! RIPRISTINO STABILITÀ / IMPORTANTE! RESTABLECIMIENTO DE ESTABILIDAD / BELANGRIJK! STABILITEIT RESETTEN / DŮLEŽITÉ! OPRAVA STABILITY**

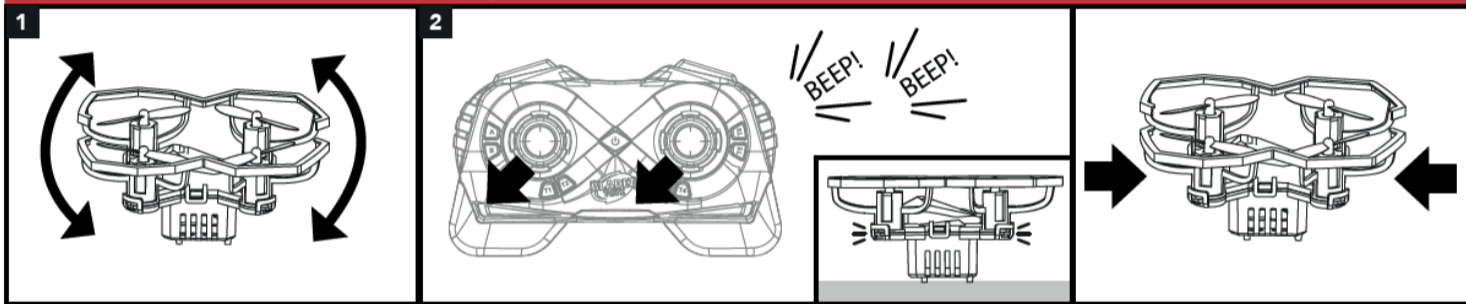

## STABILITY RESET

If the product becomes unstable, push both left and right joysticks to the bottom left position and hold for a few seconds. The handset will beep and the LED lights on the drone flash. Your drone is now reset and stable.