


ROTOR BLADE REPLACEMENT GUIDE


STEP 1

Identify the rotor blade that needs to be replaced.

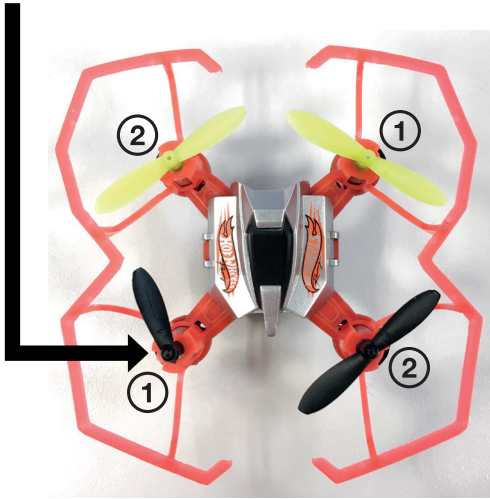


STEP 2

Remove by pulling the rotor blade in an upward direction.

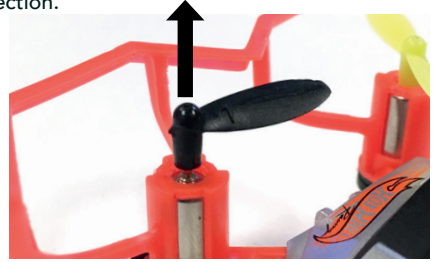


Troubleshooting:
If you are having difficulty removing the rotor blade, a pair of tweezers or small pliers will help to ease the rotor blade off.

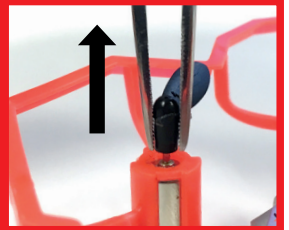



STEP 3

Select the correct replacement rotor blade ensuring the numbered blades are installed in the correct location as shown in the diagram below.

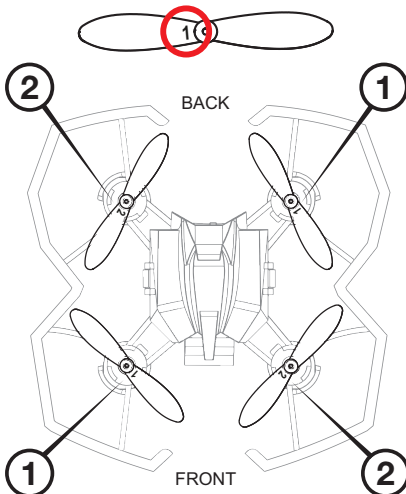


STEP 4

Firmly push the new rotor blade onto the motor pin. Ensure the rotor blade completely covers the motor pin to complete assembly.

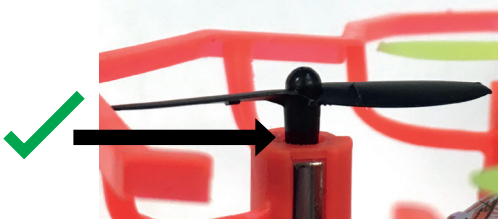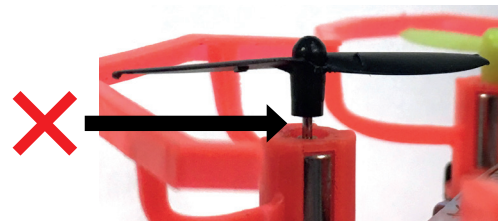

Troubleshooting: The rotor blades must be installed in the correct location for the drone to fly.

 **Warning!** If the rotor blade is not correctly installed it may fly off during flight.