


RUKKET HUNTING BLIND

RUKKET.COM / **RukketSports**

Please call us if you have any questions or concerns at **1-855-4RUKKET**
Please read our product safety warnings before setup

INCLUDED EQUIPMENT

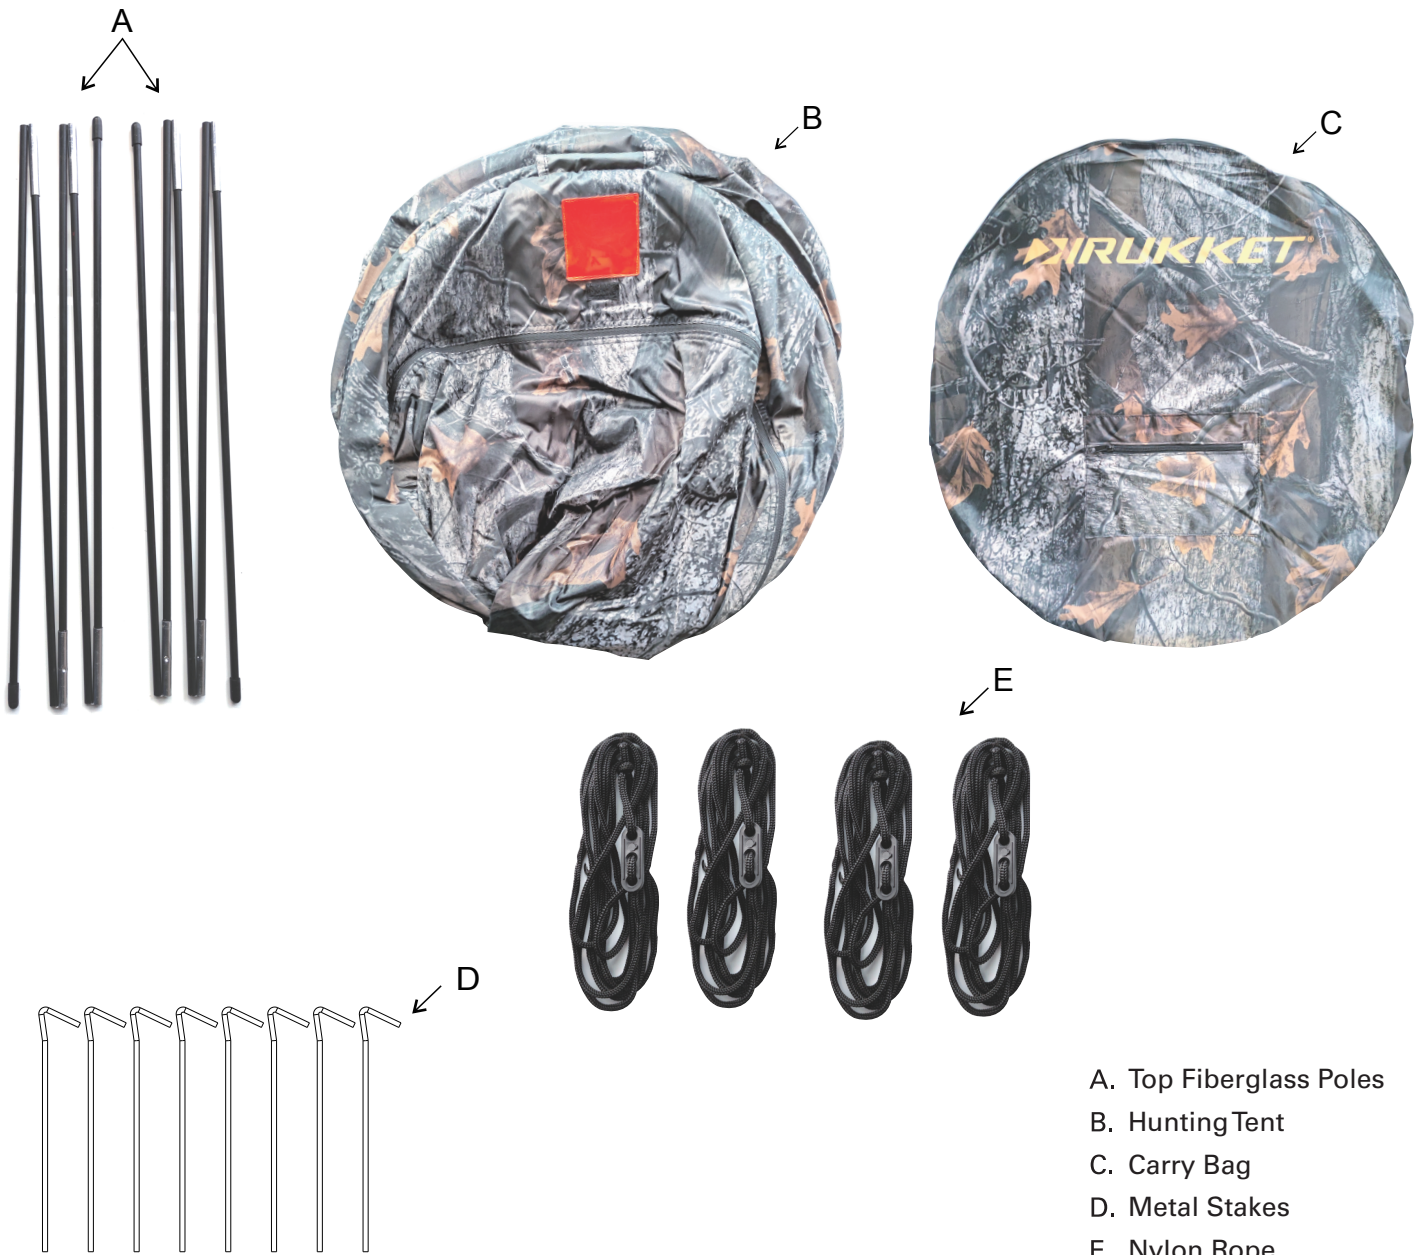

- A. Top Fiberglass Poles
- B. Hunting Tent
- C. Carry Bag
- D. Metal Stakes
- E. Nylon Rope

QUESTIONS? GIVE US A CALL! (1-855)-478-5538

RUKKET®

RUKKET HUNTING BLIND

STORAGE AND TIPS

- Store Blind in a cool dry place - free native brush, dirt and any debris
- Never store Blind wet or damp
- Avoid leaving Blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade
- To stop any leakage, use seam sealer on all seams and silicon spray on seams/ sidewalls
- To aid in folding Blind, be sure the window curtain is all the way up and secured

WARNING



KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC

The fabric may burn if left in continuous contact with any flame source. Your Blind's fabric will burn if it comes into contact with fire; it is not fireproof. **DO NOT** use candles, matches or open flames of any kind in or near a tent; **DO NOT** smoke in a tent; **DO NOT** store flammable liquids inside a tent; build campfires downwind and several feet away from the tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise **EXTREME** caution when using fuel- powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; **DO NOT** refuel lamps, heaters or stoves inside the tent; extinguish or turn off all lanterns before going to sleep.

SET UP



1. Remove Blind from case.



2. Hold one of 2 rings sets of steel.



3. Let other two pop open.




4. Spread the Blind and stake down. High wind tie-downs are included (if needed)

TAKE-DOWN INSTRUCTIONS

TIP: Be sure to remove all native brush, dirt, and debris **BEFORE** beginning the take down.

Remove ground stakes.

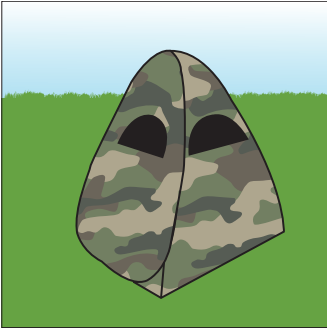

1. Remove all stakes and tie-downs. Fold blind in half laying it flat on the ground.



2. Roll **BOTTOM** AWAY from the body towards the ground.



3. Continue to roll **BOTTOM SECTION** until it almost touches the top of the **BLIND**, forming a "U" shape.



4. Once "U" shape is formed, remove one hand and rotate it inward 180 degrees (Right hand counterclockwise or left hand clockwise).



5. Continue to **ROLL BOTTOM** over until it nearly touches **TOP** of **BLIND**.



6. Now un-rotate your hand 180 degrees back in the opposite direction. This will bring the bottom portion of the blind toward you.



7. Be sure to overlap the **TWO** steel bands closest to your legs and the blind should collapse with ease.



Insert blind into its carrying case. Pack ground stakes, and high wind tie-downs in pouches provided.

THINK SAFETY

- **NEVER ALLOW CHILDREN TO PLAY WITH THIS PRODUCT WITHOUT ADULT SUPERVISION**
- **NEVER USE A HEATER IN YOUR RUKKET HUNTING BLIND - UNVENTED FUMES COULD CAUSE SICKNESS OR DEATH.**
- **UV (ULTRAVIOLET LIGHT) WARNING:**

Ultraviolet light breaks down the lightweight fabric fibers (and almost any synthetic material). The material will fade (discolor), lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your Rukket Hunting Blind, avoid leaving it out in direct sunlight. Set up your blind in a shady spot whenever possible.

PAGE 2

QUESTIONS? GIVE US A CALL! (1-855)-478-5538

RUKKET®

V1