

HAACK® PRO LIGHT-UP CHIPPING NET

Our video instructions provide the best guidance for setting up your Haack Pro Light-Up Chipping Net. They can be viewed online at

RUKKET.COM / **RukketSports**


Please call us if you have any questions or concerns at **1-855-4RUKKET**
Please read our product safety warnings before setup




PARTS




- A. Light-Up Target
- B. Bottom Frame
- C. Side Supports (2)
- D. Top Frame (2)
- E. Arm Support
- F. Back Support
- G. Cord
- H. Target Cup
- I. Stakes (4)
- J. Foam Balls (6)

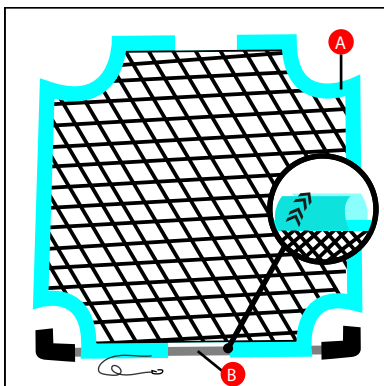


1. Lay out the net **A Light-Up Target**. Locate the battery pack and battery pack pocket. That side is the bottom of the net. Place **Part B Bottom Frame** at the bottom of the net and wrap it with the velcro straps so the pole is held within the velcro straps. Set rope on bottom bar aside, so it does not tangle.

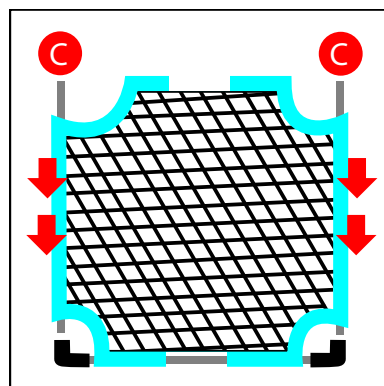


2. Insert long fiberglass poles **C Side Supports** through selves on side and insert into plastic connectors. Fiberglass will take on curved shape.

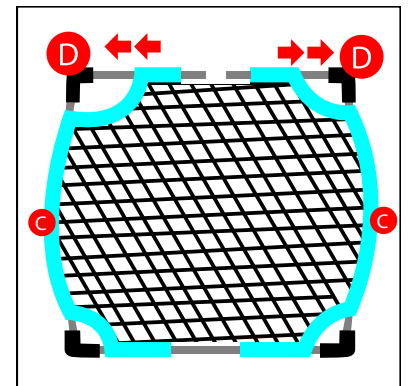


3. Place plastic connectors **D Top Frame** with fiberglass inserted onto poles **C Side Supports** (see step 2)

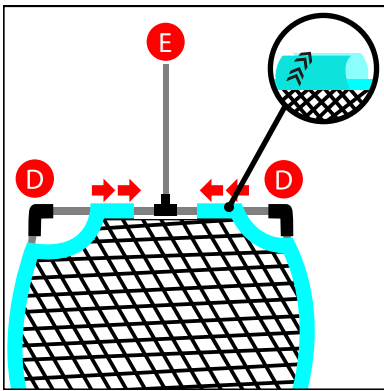


4. Place t shape **F Back support** between **D Top Frame** and push fiberglass poles in. Connect Velcro straps to **D Top Frame** to give proper shape.

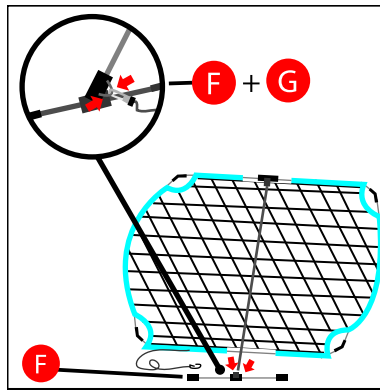


5. Turn net over so lights are facing table. T-shape **F Back support** with long pole **E Arm Support** should rest on netting, slide rope loop **G Cord** onto long pole and then add foot support onto long pole.

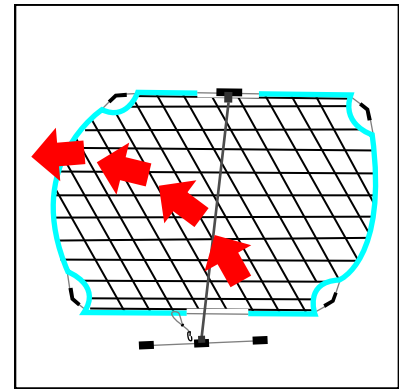


6. Rock net up to standing position so foot supports rest on ground. Now your net is set up.

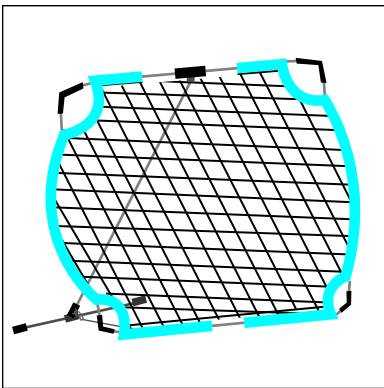

7. Standing net

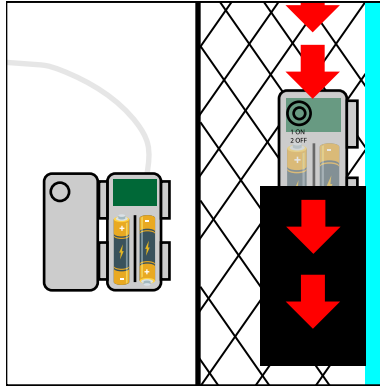

8. Insert batteries into battery pack at the bottom of the net and turn on and place in pouch. Charge target battery pack by USB cord.

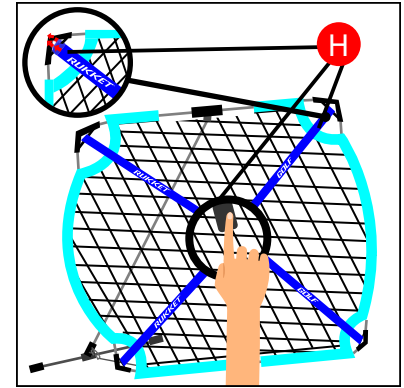

9. Place target **H Target Cup** on net by wrapping strap through loops on corner and Velcro in place. Tap vibration pad to confirm lights are charged and activate and chip away!

WARNING



- Adult supervision required when assembling the product as fiberglass poles are poking hazards.
- Adult Supervision when assembling and in use as plastic pieces are choking hazards.
- Adult supervision required when in use. Light cords, Target Straps, Angle Adjustment Rope, and Lights could pose choking or strangulation or electric shock danger to children if not supervised properly during use.
- Product is not waterproof. Do not leave in the rain or get wet or else product could fail or cause electric shock.
- Do not leave product in extreme heat or cold as Rechargeable Battery for center target or batteries in Outer Ring Battery pack could become damaged or cause injury to user.

- Product and components are not UV Proof. Product will degrade if left in sun. It is recommended to bring product inside when not in use.

- Remove batteries from outer ring battery pack when not in use to avoid corrosion hazard resulting in damage to the product and potential injury.

- Product is made for real foam, PU, and real golfballs. Product is not intended to be pushed, kicked, fallen on, thrown around or for use with other types of balls. Using the product outside of the intended use could result in damage to the product or injury and must not be attempted.

- There should be no horseplay around this product because the side poles could be a poking hazard if disassembled. If children are present, put product away, out of reach of children. Failure to do so could result in damage to property or injury.