

# 10X6 HAACK JR. PORTABLE GOLF NET

Our video instructions provide the best guidance for setting up your 10x6 Haack Jr. Portable Golf Net. They can be viewed online at



Please call us if you have any questions or concerns at **1-855-4RUKKET**  
Please read our product safety warnings before setup

## WHAT'S INCLUDED



A



B




C



- A: Carry Bag
- B: Fiberglass Pole
- C: Metal Stakes
- D: Golf Net
- E: Hitting Target



D

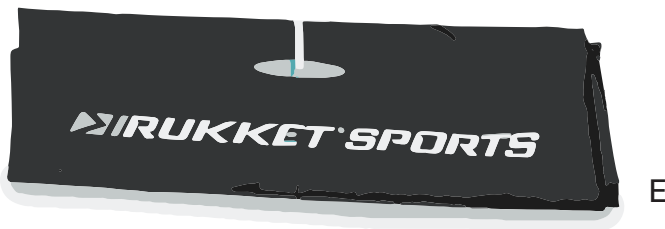

E

QUESTIONS? GIVE US A CALL! (1-855)-478-5538



# TOX6 HAACK JR. PORTABLE GOLF NET

## ASSEMBLY INSTRUCTIONS




### Product Safety Warning


- Please use adult supervision and follow the instructions when setting up and using the net.
- Regular use or abuse will eventually strain the netting and may break it, as well as extended exposure to outdoor elements will effect the lifetime of the net.
- Do not stand behind the net.
- This net is not intended for personal protection.
- Target must be used, as the netting will break without it.

#### Prior to each use

- Inspect the netting and frame for damage or wear. If damage or wear is found, do not use net until new netting can be used so the balls do not break through the net. Replacement nets can be purchased at Rukket.com
- Make sure the frame and net are assembled correctly and on a flat surface, at least ten (10) feet from structures and vehicles.
- The user should be positioned directly in front of the net(at least 10-12 feet to avoid injury of ball rebound).
- Failure to follow these precautions could result in serious injury or damage to property.
- Important to use in grass and important to stake it down. Do not allow product to blow around or scrape on hard ground or rough surfaces as it could damage the product.

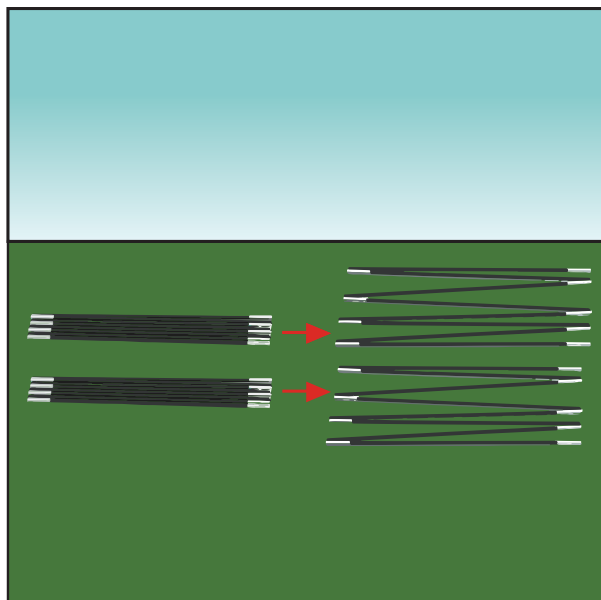


1. Remove all products from carry bag and lay out on flat, clean, smooth surface. NOTE: Do not lay on rough or cluttered surface or the golf tent could be damaged.

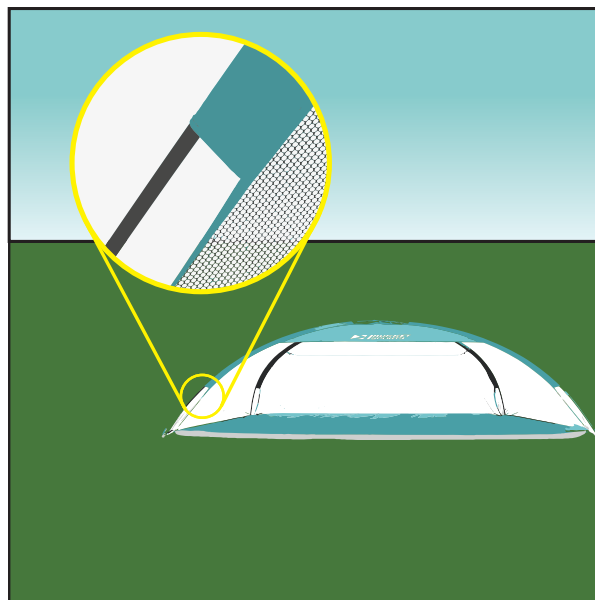


2. Lay tent out on lawn with the solid green fabric surface directly on the lawn and the white webbing on top. Slide first piece of fiberglass pole into corner sleeve and continue to push through the sleeve, assembling the fiberglass pole as you push it through the sleeve. The pole should exit the sleeve near the top center of the tent. Feed the pole into the sleeve diagonally across from the sleeve the pole has just exited and continue to feed the pole through the sleeve until it comes out at the opposite corner that you started at. Repeat for the second pole.


# 10X6 HAACK JR. PORTABLE GOLF NET ASSEMBLY INSTRUCTIONS

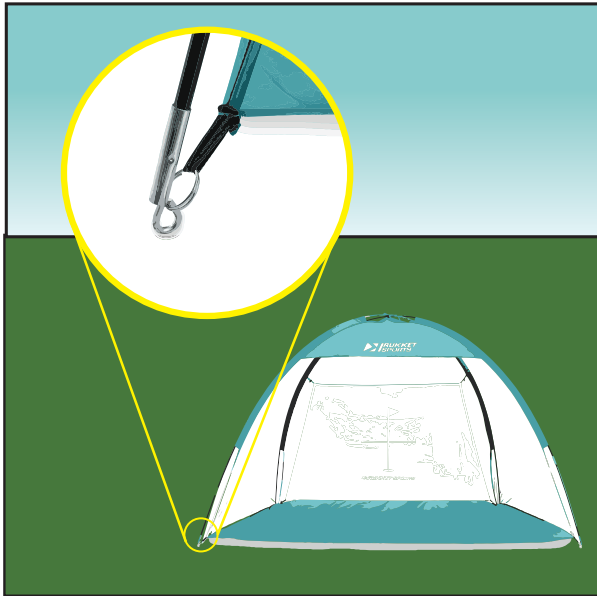

3. If outdoors, take metal stakes and fasten them to the net by inserting one prong through the metal ring. Repeat for the 4 corners of the net and insert each corner into the ground. Note: Net can be used without stakes indoors and outdoors if not windy.

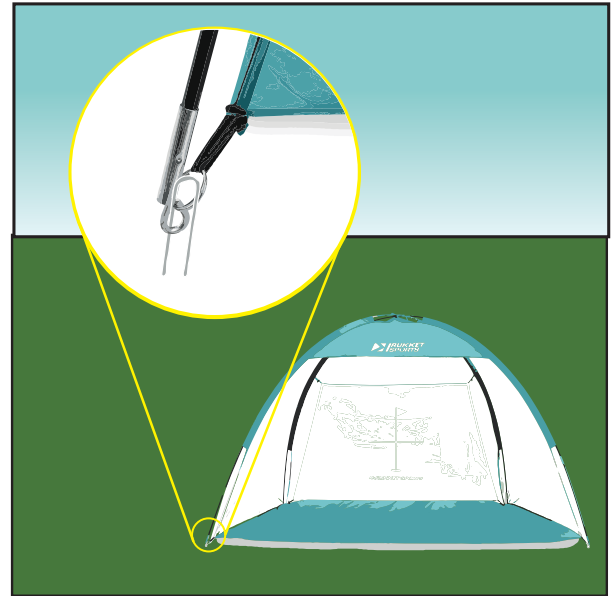

4. Put the little pins in the corner of the tent into the fiberglass poles. This will cause the golf tent to stand up and take shape. Be careful when you put the pins into the holes as this will require some flexing of the poles. Letting go of the pole before the pin is inserted could cause the pole to suddenly straighten. Be careful as you insert the pin into the hole as your finger could be pinched between the pin and pole.

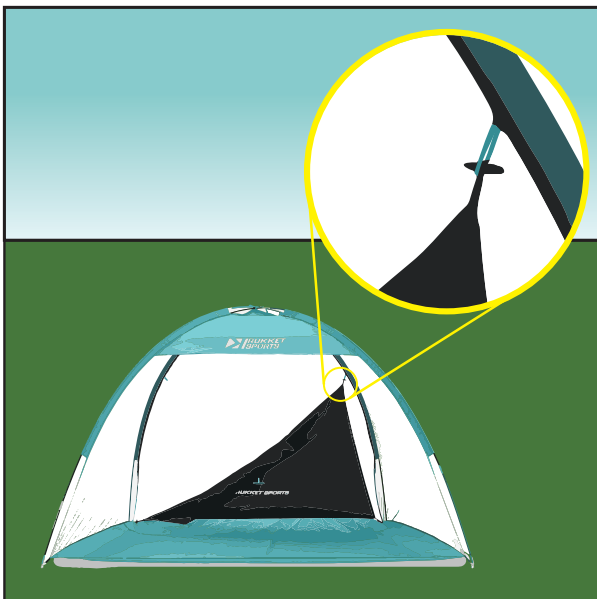

5. Once the tent has been set up and staked in the 4 corners through the small metal loop, (not shown in instructions), hang the target inside the tent by placing the toggle button through the loops in the four corners.



6. Complete!

QUESTIONS? GIVE US A CALL! (1-855)-478-5538