

# HAACK® GOLF CHIPPER XL

## FOLD UP INSTRUCTIONS

Our video instructions provide the best guidance for setting up your Haack® Golf Chipper XL.  
They can be viewed online at



Please call us if you have any questions or concerns at **1-855-4RUKKET**  
Please read our product safety warnings before setup

### INCLUDED EQUIPMENT



QUESTIONS? GIVE US A CALL! (1-855)-478-5538


# HAACK® GOLF CHIPPER XL

## FOLD UP INSTRUCTIONS


Our video instructions provide the best guidance for setting up your Haack® Golf Chipper XL.  
They can be viewed online at




Please call us if you have any questions or concerns at **1-855-4RUKKET**  
**Please read our product safety warnings before setup**

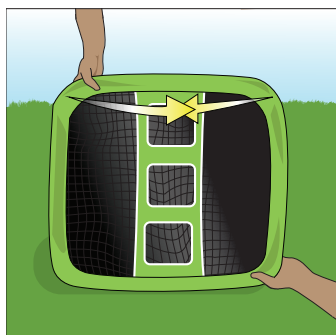

**1.** After removing, folding, and storing the two fiberglass poles, fold the Golf Chipper flat and grasp opposite corners.

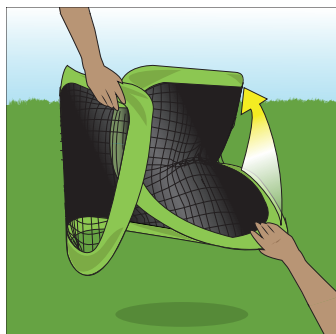

**2.** Fold inward with one edge going underneath the other. The net will form itself into three circles.

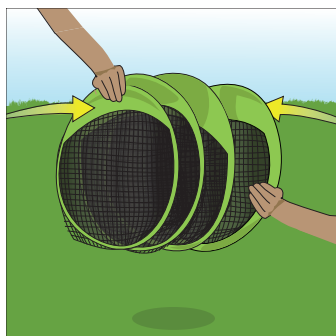

**3.** Hold the top circles in place and fold the bottom circle onto them before placing into the carry bag.

### WARNING:

- Adult supervision is required
- Take care when opening, because the spring steel opens forcefully
- No one should be standing near this product when it is in use
- This product should be set up far away from people, vehicles, and structures
- Failure to follow these precautions could result in serious injury or damage to property.

**QUESTIONS? GIVE US A CALL! (1-855)-478-5538**

