


TEE-KI ISLAND GOLF CHIPPING FLOAT ASSEMBLY INSTRUCTIONS

Our video instructions provide the best guidance for setting up your Golf Chipping Float.
They can be viewed online at




Please call us if you have any questions or concerns at **1-855-4RUKKET**
Please read our product safety warnings before setup


INCLUDED EQUIPMENT

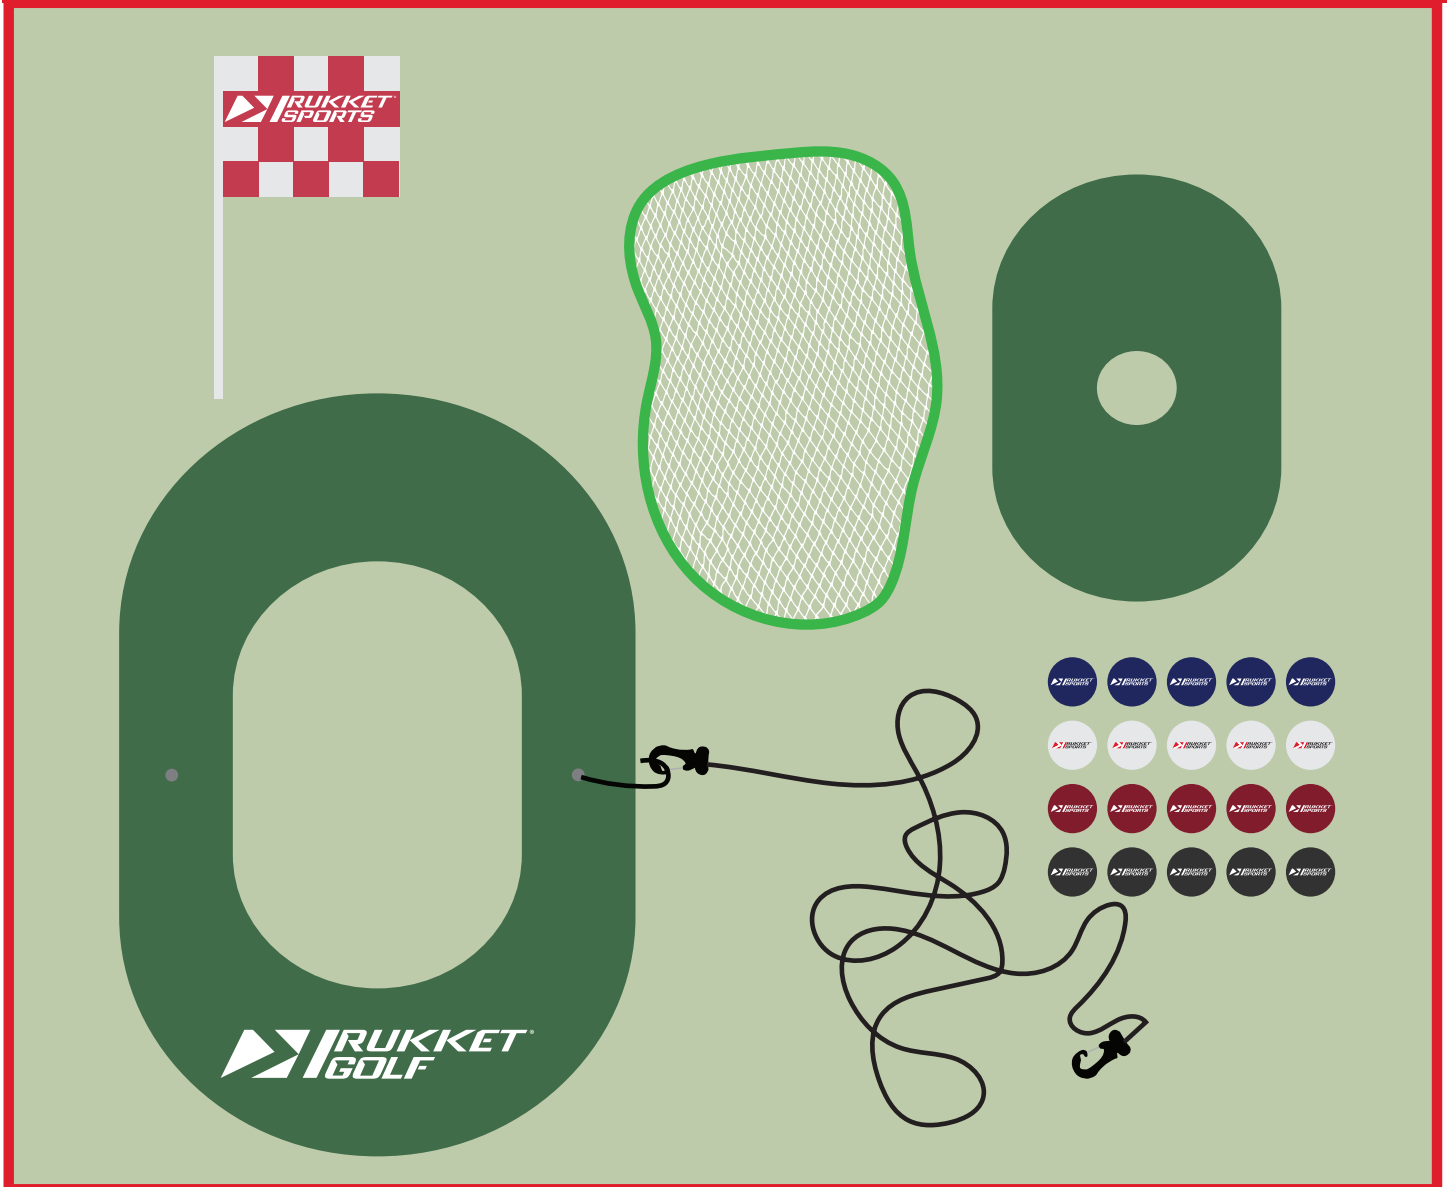


TEE-KI ISLAND GOLF CHIPPING FLOAT ASSEMBLY INSTRUCTIONS

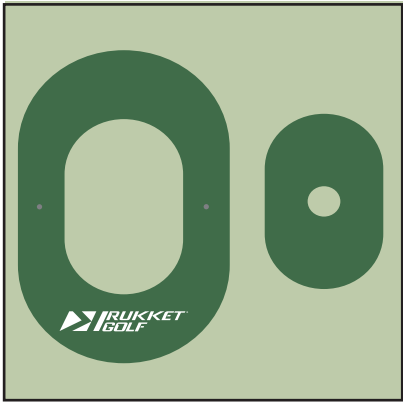

Remove and save the oval shaped foam piece from the center of the target. This piece can be added back later to increase the difficulty of the game.

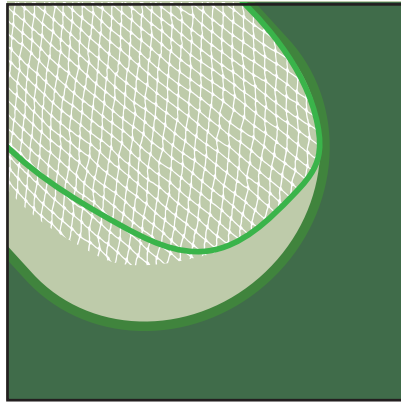


Install the net by attaching the velcro material on the net edge to the velcro on the inside of the chipping target. Use one hand to hold the net in place and the other hand to press the velcro in place.

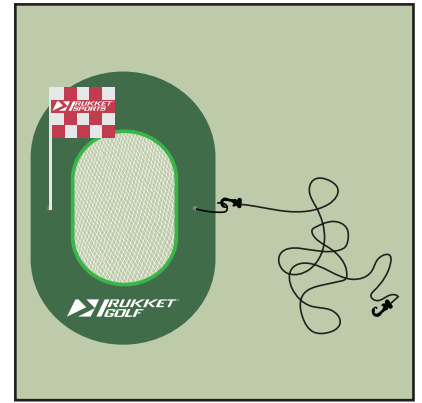


Insert the flag stick into the hole on the side of the floating chipping target opposite the side with the pre-attached loop.



Clip one end of the string to the pre-installed loop and attach the other end to the ladder, deck chair, or other fixed object. This will allow you to easily retrieve the shipping target between rounds. Note: Clip the string to something close to the pool so you don't create a tripping hazard.

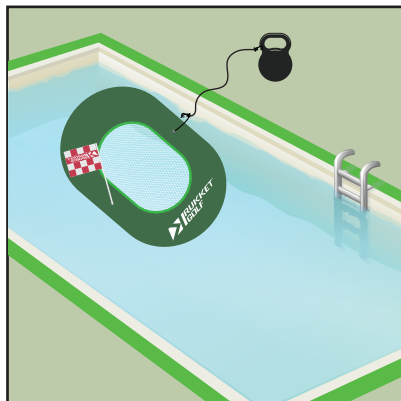


To play, push the floating chipping target out into the pool or use a pool cleaning net to push to the center of the pool and hit the foam balls off the included turf. NOTE: The target was not designed to be thrown into the pool. Such action could invalidate the warranty.

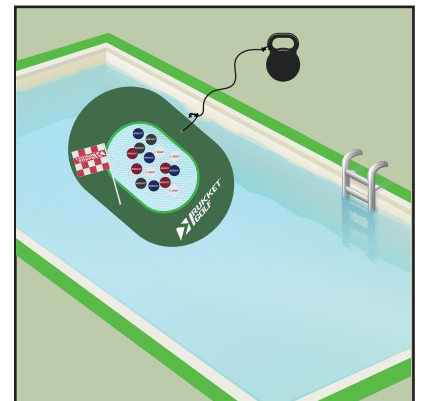


Once you are done, pull the string to retrieve the floating chipping target and/or use a pool cleaning net to scoop up any balls that missed the target. Repeat!

TEE-KI ISLAND GOLF CHIPPING FLOAT ASSEMBLY INSTRUCTIONS


For a Harder Chipping Game

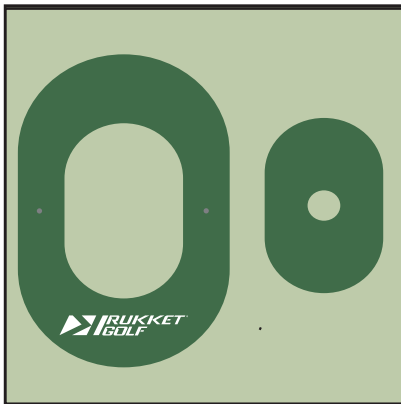

Locate the oval shaped foam insert included in your floating chipping target

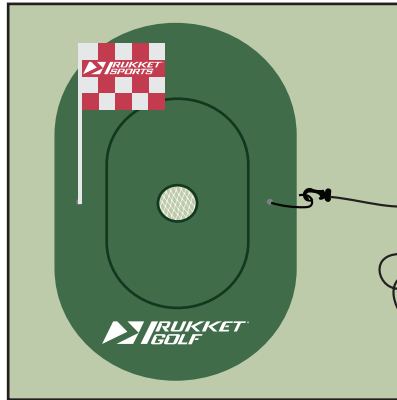

Add the foam insert to increase the difficulty and test your skill. Note: the foam can swell when it's wet, so you may need to remove the velcro net so the foam will fit.

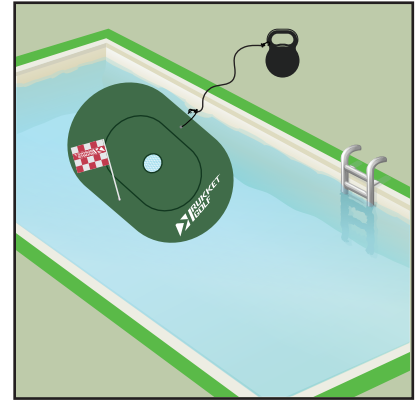

It's that easy. We hope you enjoy this game as much as we do!

WARNINGS

- This product is a toy and is NOT a life saving device, nor is it meant to be used as a float to support the weight of any human or animal.
- Children should be supervised at all times around the pool.
- Products used while playing this game, including but not limited to the golf balls, golf clubs, etc., could potentially fly erratically and could hurt people or animals or damage property. As a result, when using this product, the pool and the area opposite the golfers should be clear of people, animals, and property that can be damaged.
- Be aware of the rope during use. Supervise children to avoid them getting tangled by the rope and avoid swimming in the pool while the floating chipping target is in the pool to avoid getting wrapped up in the rope and potentially drowning.
- Remove the product from the pool after use and store in a clean and dry environment to avoid any misuse of the product by children or others.
- Keep the balls, rope, and net away from children as they could potentially be a choking hazard.