



FOLD UP INSTRUCTIONS

Check out our video instructions at:


RUKKET.COM |  /RukketSports

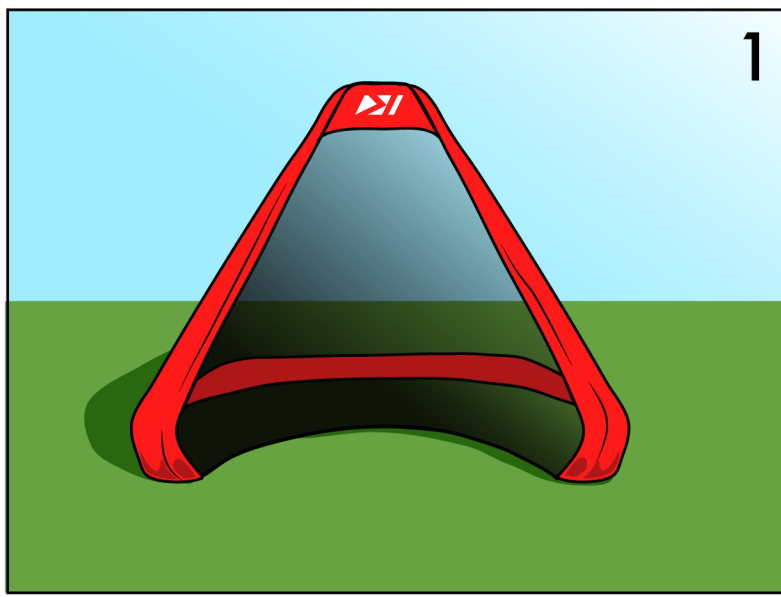


1
Place your Rukket on a flat, hard surface.

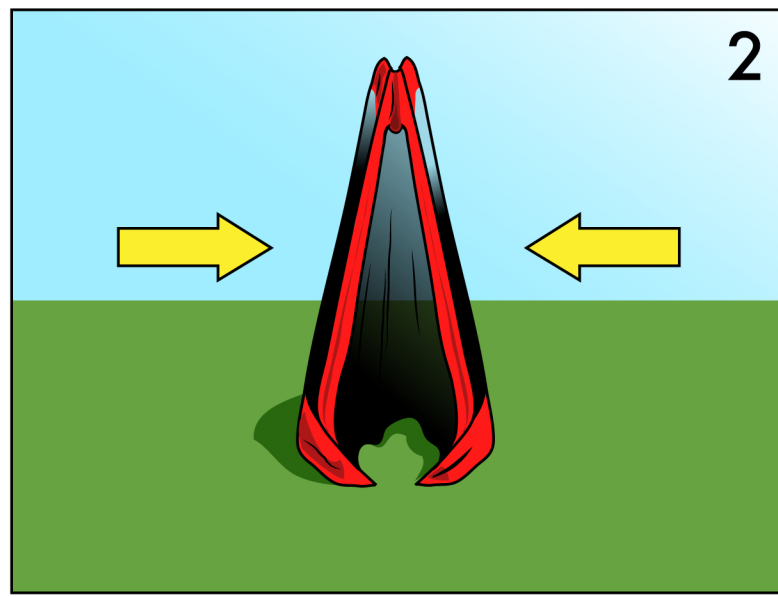


2
Bring the two sides together toward the center.

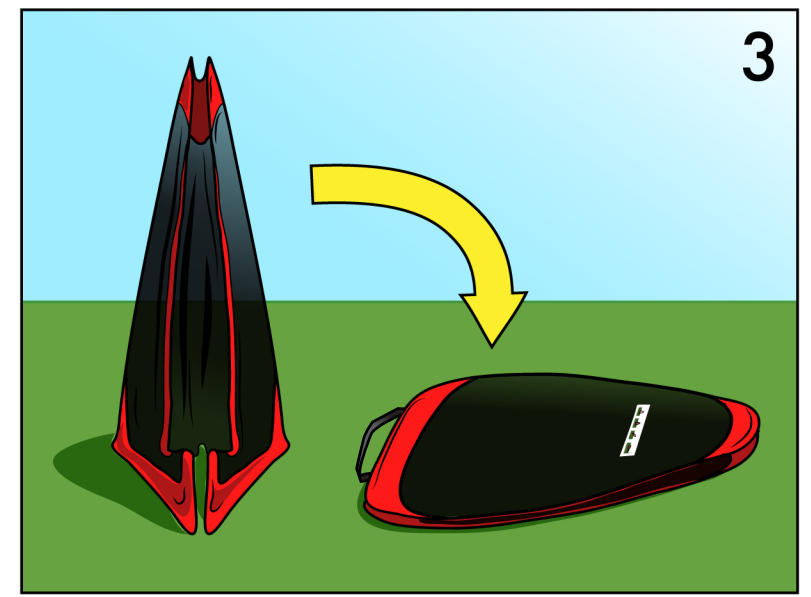


3
Lay flat on one side with the folding instructions facing up.
*Be sure to align all edges.

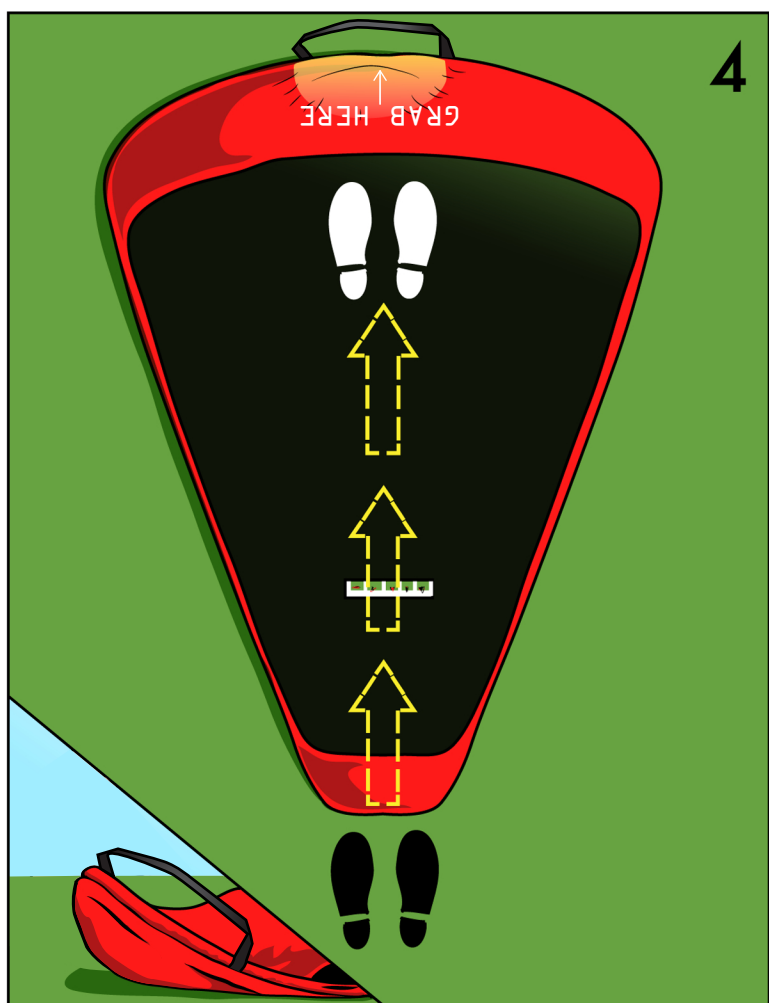


4
Starting from the small end, walk across the net to the lower edge and grasp the black folding strap.

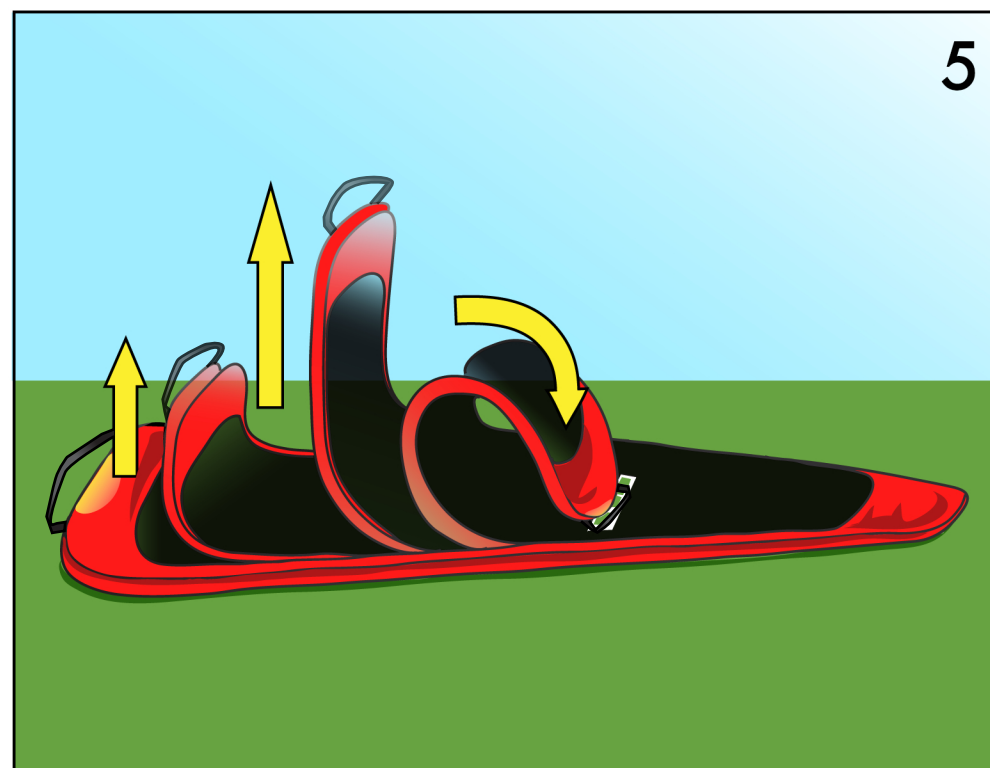


5
Grasping the black folding strap, lift straight up while walking backward and fold down to the attached "Fold to Here" sign.

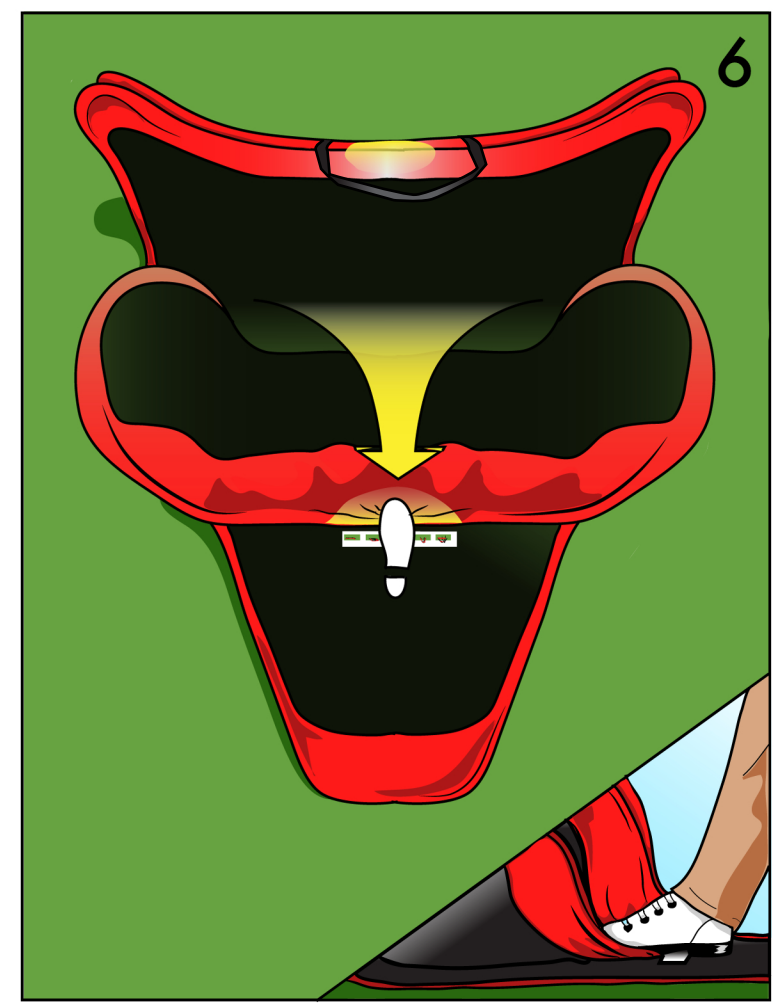

6
When the edge of the net is pulled back and down to the attached "Fold to Here" sign, use one foot to hold it in place.

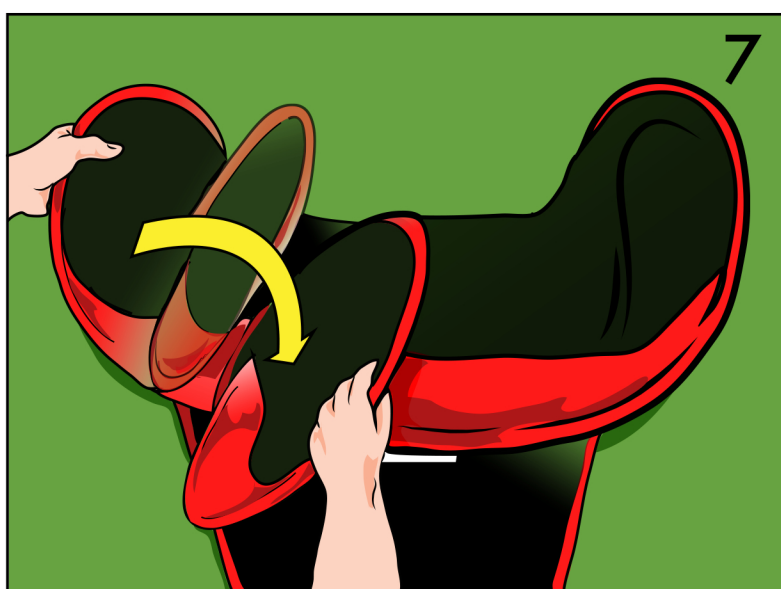

7
Keeping your foot in place, use your left hand to fold in and turn the left loop toward the center.

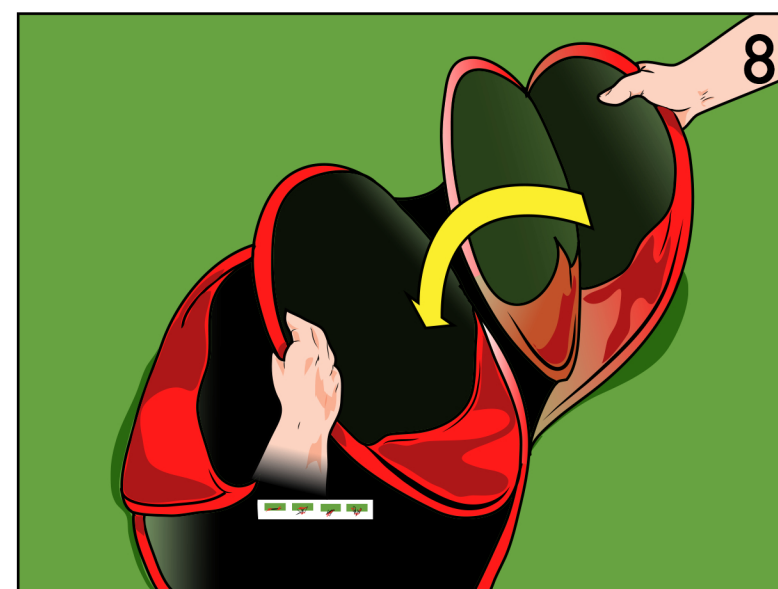

8
Keeping the left loop down, use your right hand to fold in and turn the right loop toward the center.



9
Once folded into three loops, be sure to align all edges while slipping the net into the carry bag.