


SPDR NET


ASSEMBLY INSTRUCTIONS

Check out our video instructions at:


RUKKET |  /RukketSports

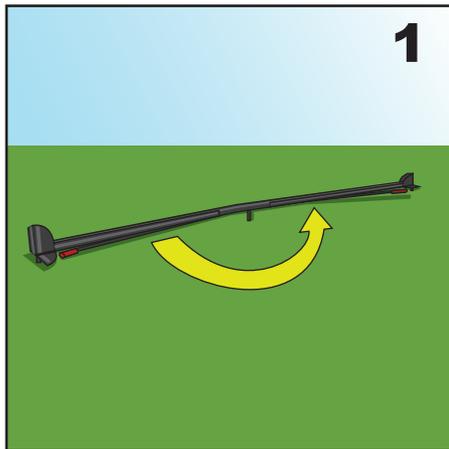


1. Unfold the frame's middle cross beam. The frame will lay flat on a rubber base.

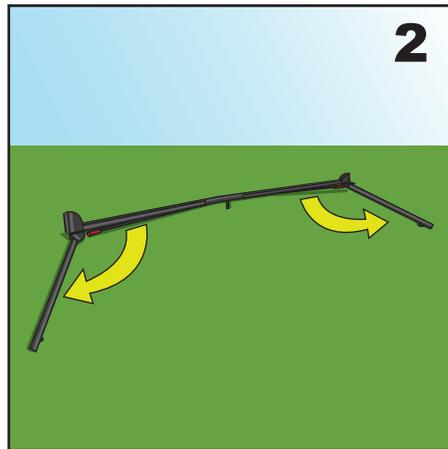


2. Unfold the legs, making sure that the locking button is fully extended.

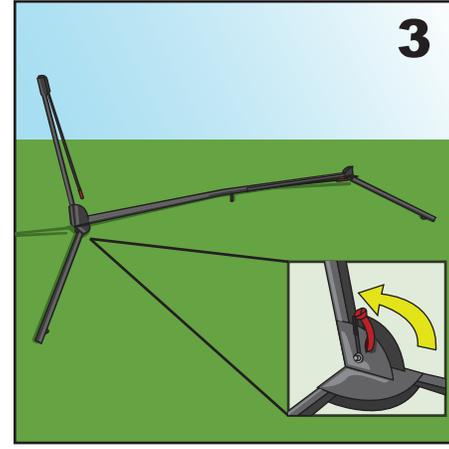


3. Bring up the left arm. Lock it into place using the base pin. Make sure the pin is fully inserted into the base.

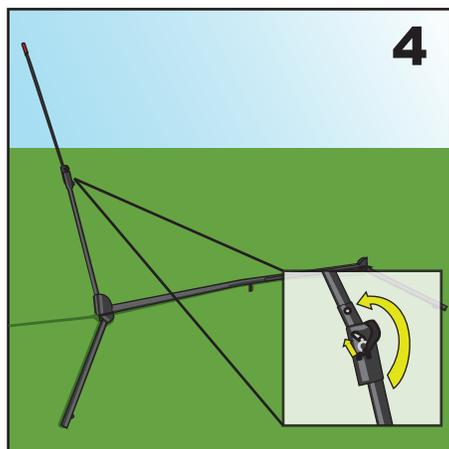

4. On the left arm, fully extended the fiberglass top half of the arm. Lock into place with the cotter pin.

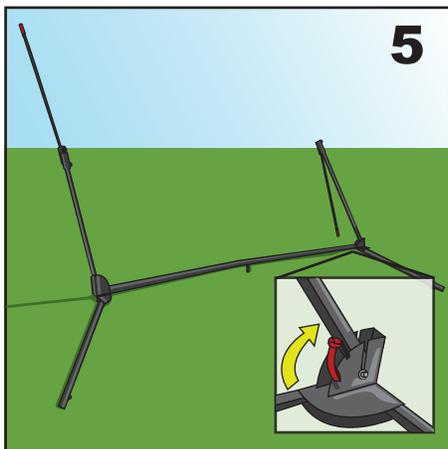

5. Bring up the right arm, but do not extend it all the way up. Rest the base pin on the groove that is half way up the bottom base plate.

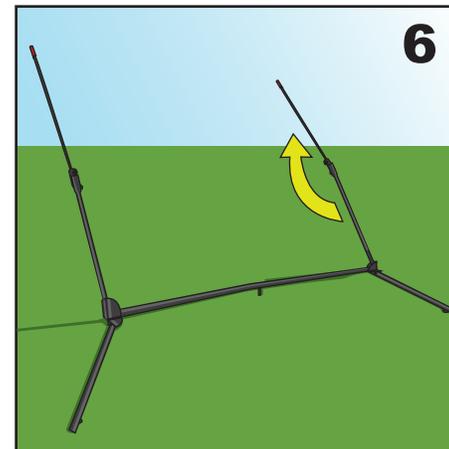


6. Fully extend the fiberglass top half of the left pole. The arms should be slanted in the same direction, as shown above.

SPDR NET


ASSEMBLY INSTRUCTIONS

Check out our video instructions at:


RUKKET |  /RukketSports

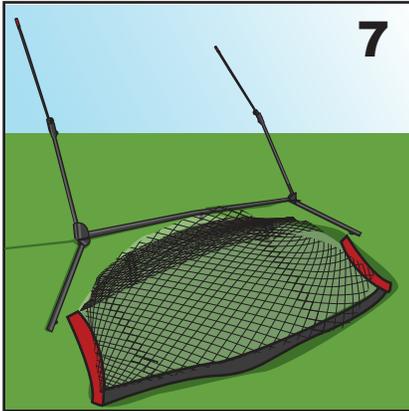


7. Lay the net in front of the frame, logos facing downward.

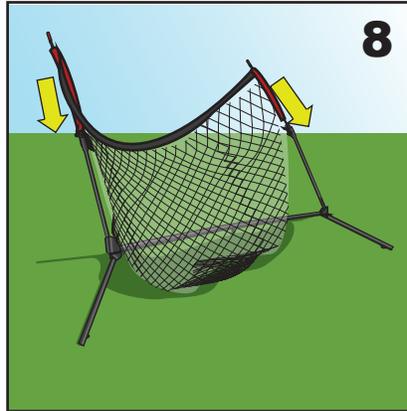


8. Slide the red sleeves completely over the fiberglass poles. Use ties to attach the bases of the red sleeves through the holes on the bases of the fiberglass arms.

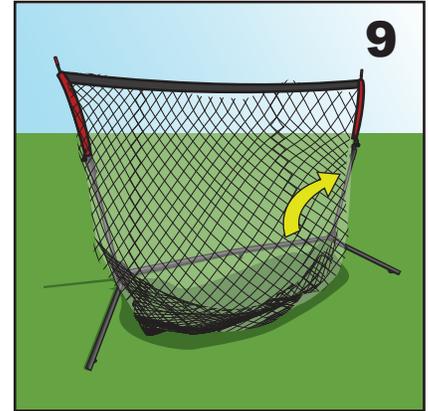


9. Pull the left arm fully upright and make sure that the base pin is fully inserted into the slot.

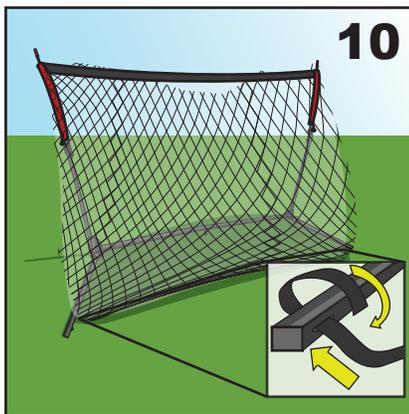


10. Attach the velcro straps to the ends of the folding legs.

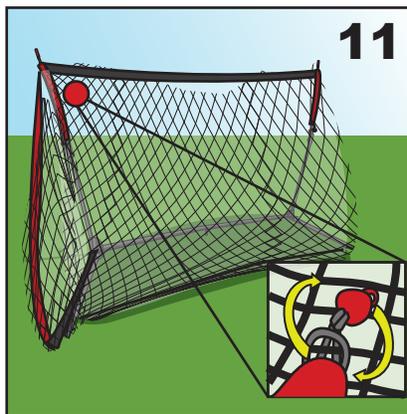

11. Attach the wings using the provided bungees. The top and side edges of the wings are red, and the bottom edge is black. The edge of the wings should be attached a few squares inside the main net's edge.

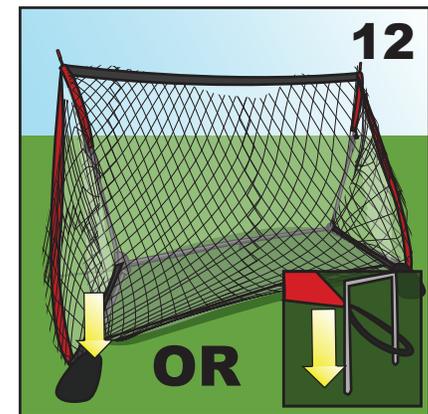

12. The bag at the end of the wing can be used as a weigh-down, or it can be staked by small loops at the corner.

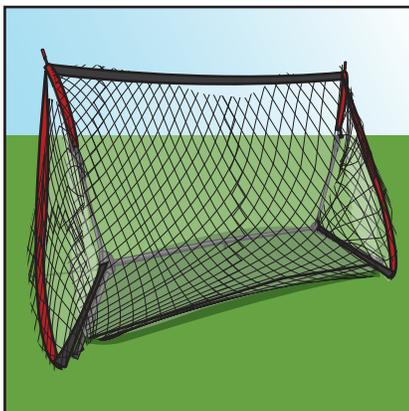

Ready to play!