


Electric cold mounting machine manual

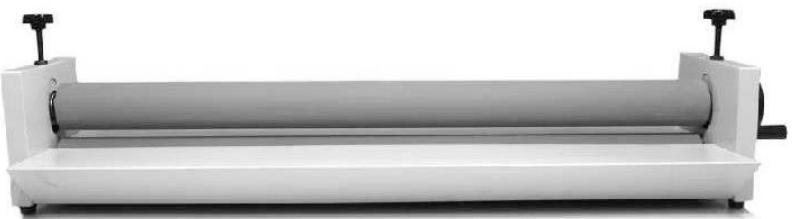

First: Tripod mounting

First step: The bracket and the transom and the wooden box removed, the bracket and the crosspiece is fixed by screws.

Second step: 4 holes are reserved (about 2), and the bottom of the machine is provided with 4 foot pads.

Assembly details: Remove the top of the board, complete with holder and remove side bracket parts. Then put the box on the side on the ground, and the wooden bottom board fixed demolition machine screws, and then put on the ground lifting machine to make the machine bottom pad column stent in the reserved hole (combined with the lifting process is best not to stop, cannot but need to stop it, the bottom temporarily placed in similar foam material, mainly pay attention to rubber roller is a hard object contact) the whole process gently, pay attention to the protection of upper and lower rollers.

Second: Operating instructions

1. **Plug in the power cord**
2. **This machine can be adjusted respectively at both ends of the roller mounting pressure, separation, then the cold laminating film and pictures around the alignment in rollers, turn the knob, ensure upper and lower rollers parallel collide, knob after very relaxed, the pressure at both ends are equal, then a little pressure, the pressure should not be too heavy, in order to avoid bubbles and mounting wrinkle film.**
3. **After everything is ready, please look at the right side of the machine has a red ball, which is to promote the electric**

function, pull out the switch to the hand function.

4. **At the moment you can operate the control panel, the button FWD to start work, the speed of the 1-9 file can be + - adjust the speed of. Please press STOP when you need to stop. In the process of mounting, if necessary, you can push back REV switch. The machine is equipped with foot control function, the key switch to the FOOT foot pedal switch will FWD pedal release will stop.**

Third: Roller cleaning and equipment maintenance

1. **When the roller is cleaned, please use a soft cloth dipped in gasoline or neutral detergent scrub, and then dry cloth wipe clean. Prohibit the use of metal sheets and other hard material scraping.**
2. **The rotating screw rod needs to be added regularly. This machine adopts special formula technology, which has the characteristics of high elasticity and aging resistance. However, when not used for a long time, it should be separated from the upper and lower rubber rollers to prevent the rubber roller from being deformed for a long time.**