


Aluminum alloy ramp instruction manual

1. Product Overview

The serial number	The name of the	Product length (in)	Products wide (in)	Package Quantity (PCS)
1	60*12 inch 2 PCS	60	12	2
2	72*13 inch 2 PCS	72	13	2
3	72*13.5 inch 2 PCS	72	13.5	2
4	72*14 inch 2 PCS	72	14	2
5	72*15 inch 2 PCS	72	15	2
6	84*13 inch 2 PCS	84	13	2
7	84*14 inch 2 PCS	84	14	2
8	84*14.5 inch 2 PCS	84	14.5	2
9	84*15 inch 2 PCS	84	15	2
10	84*15 inch 2 PCS	84	15	1
11	94*15*2.75 inch 2 PCS	94	15	2
12	94*15*3.25 inch 2 PCS	94	15	2

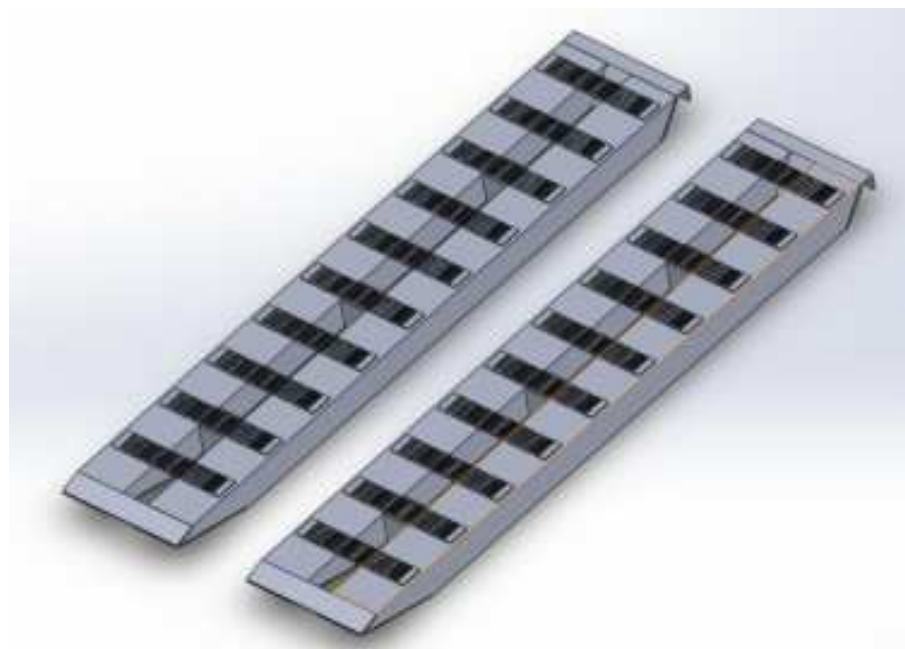

2. Usage

- 1) Take the product out of the packaging box to check whether the product is complete;
- 2) As shown in the figure, hang the position "1" in the figure on the rear beam of the truck, and adjust 2 parts according to the required bearing type
The spacing between the products ensures that the required load bearing model tires can travel between the two ramps.
- 3) As shown in position "2", make sure the ramp is firmly suspended between the parking space and the ground.
- 4) Load the required carrying vehicle onto the truck through the ramp, as shown in Figure 3.
(Note: the product has a variety of models for customers to choose, please consult customer service product load and use range, Cannot be used beyond specification)

