

mompush®

Designer style.
Unbeatable value.



mompush_stroller



mompush_stroller

 


support@mompush.com


www.mompush.com

mompush®

T629

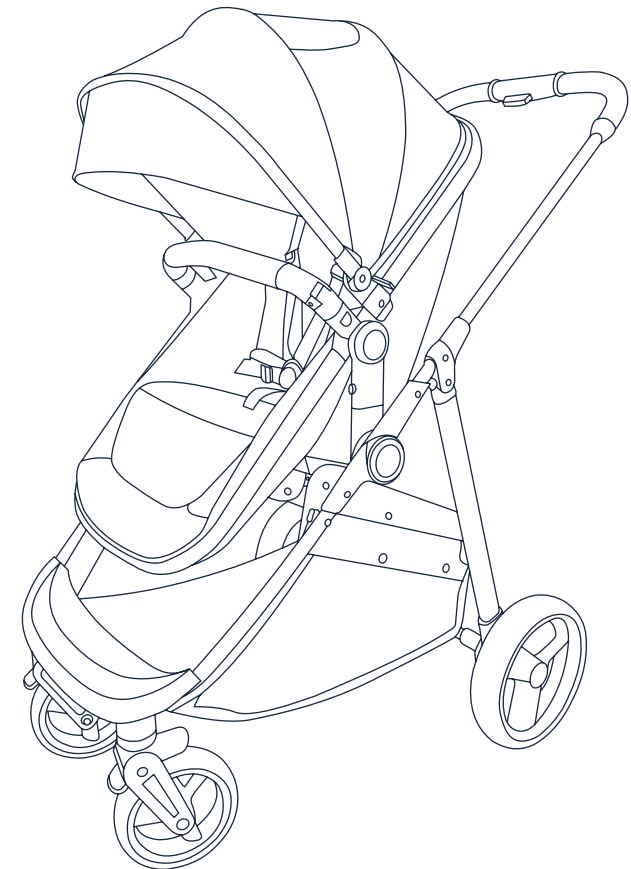

WARNING:


 **WARNING: TO AVOID INJURY OR DEATH READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE. THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.**


 **WARNING: FOLLOW THE MANUFACTURERS INSTRUCTIONS.**

 **WARNING: ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**

 **WARNING: DO NOT LEAVE THE CHILD UNATTENDED.**

 **WARNING: SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**

 **WARNING: DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**

 **WARNING: MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.**

 **WARNING: USE THE HARNESS AT ALL TIMES.**

WARNING:

 **WARNING: CHECK THAT THE PRAM BODY OR SEAT UNIT ATTACHMENT DEVICES ARE CORRECTLY ENGAGED BEFORE USE.**

 **WARNING: THE PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING.**

Remember, your child safety is your responsibility:



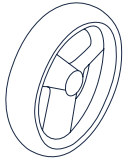

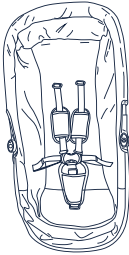
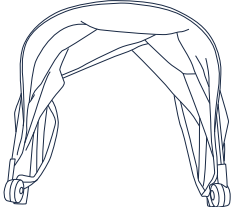
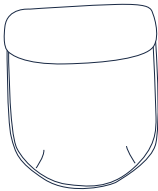
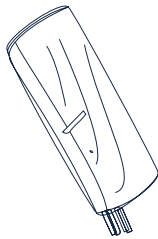
- When using the stroller, always ensure your hand is positioned in and around the tether strap. The strap is a compulsory safety feature which must be used at all times. It is for the safety and benefit of your child.
- This product is suitable for one child in an upright or reclined position from birth and up to 15kg.
- In bassinet mode this product is suitable for one child from birth who cannot sit up unaided, roll over and cannot push itself up on their hands and knees. Maximum weight of baby 9kg.
- The stroller will become unstable if the manufacturer's recommended load is exceeded.
- The correct use and maintenance of this stroller are essential.
- Be sure that all clamps and buckles are securely fixed and in place before use.
- When in the stroller, your child must always wear the safety harness, correctly fitted and adjusted, at all times.
- Always use the harness correctly fitted and adjusted, with your child in the seat.
- Never leave the harness buckles when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.
- When in use, the head of the child in the product should never be lower than the body of the child.
- Avoid serious injury from falling or sliding out. Always use seat belt.
- Excessive weight may cause a hazardous unstable condition to exist.
- Unstable hazardous conditions may exist if package carrying accessories are added onto the product.
- Parcel or accessory items, Or when the two are placed in the car, it may cause instability of the cart.



WARNING:

- When assembling the bassinet, ensure the hook and loop tabs are fastened over the metal rods.
- Use the stroller on flat or gentle sloping surfaces. It may be unstable on higher sloping and uneven surfaces - be aware of the possibility of the stroller tipping over.
- Care should be taken if the stroller is used on stairs or escalators.
- Care must be taken when folding and unfolding the product to prevent finger entrapment.
- Check all parts before use for breakage or fatigue. Discontinue use immediately if any part is found to be damaged or broken.
- Do not add another mattress on top of the mattress provided or recommended by the manufacturer.
- The basket can carry a maximum load of 2kg.
- This product is suitable to be used with a new born baby. Please ensure the seat is in its full recline position when using with a new born child.
- Do not carry additional children. This stroller is manufactured for the use with one child only.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides will affect the stability of the product.
- Always be aware of the risks provided by fire and other significant sources of heat such as radiators etc. which may be in the immediate vicinity of your stroller.
- Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires etc. in the vicinity of the stroller.
- It may be unsafe to use any accessories other than those approved by manufacturer.
- Keep the plastic packaging away from children to avoid danger of suffocation.
- Take extra care in windy conditions.
- Lift and carry the stroller safely. Please ensure all locking devices are engaged before lifting stroller - injuries can occur from moving parts. Only carry stroller if folded and locking or storage latches are engaged. Please apply storage latch if latch does not engage automatically.
- Never leave a raincover, hood or apron on the product indoors, in a hot atmosphere or near a heat source, as your child may overheat.
- To prevent damage, always remove a raincover before folding the pram.
- This product is intended for domestic use only. It is not for commercial use.

Parts List

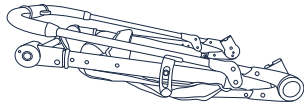A  chassis x1	B  front wheels x2	C  rear wheels x2
D  bumper bar x1	E  seat unit x1	F  canopy x1
G  apron x1	H  raincover x1	


Chassis Assembly

Unpack all contents and check that all parts are present before starting assembly. Please refer to the parts list.

1a. Release the chassis (A) from the locked folded position. Lift the folding latch on the side of the frame.

1b. Lift the handle to open the chassis.


1c. When the chassis is completely open, you will hear a “click” indicating it is locked into place.

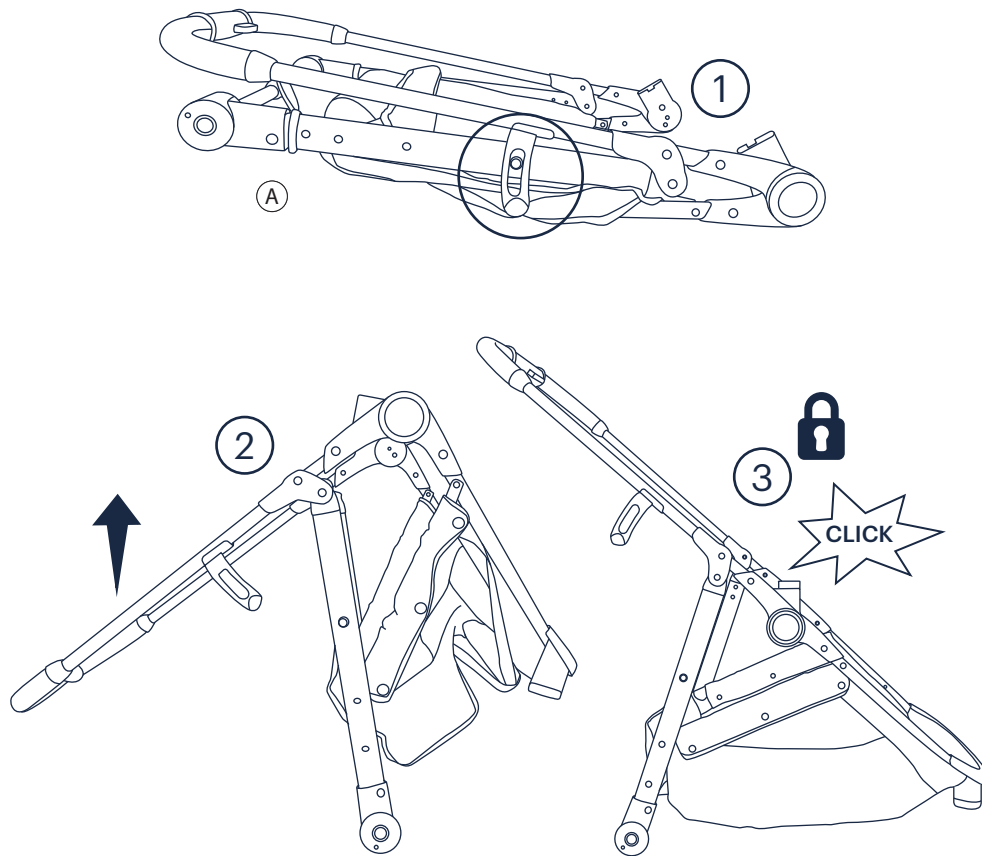

Chassis Assembly

2a. Push each rear wheel (C) into the sides of the rear wheel axle until you hear a “click”. Give them a tug to ensure they are attached securely.


2b. To remove the rear wheels, simply pull out the metal latch located underneath the rear wheel axle and pull the wheel off.

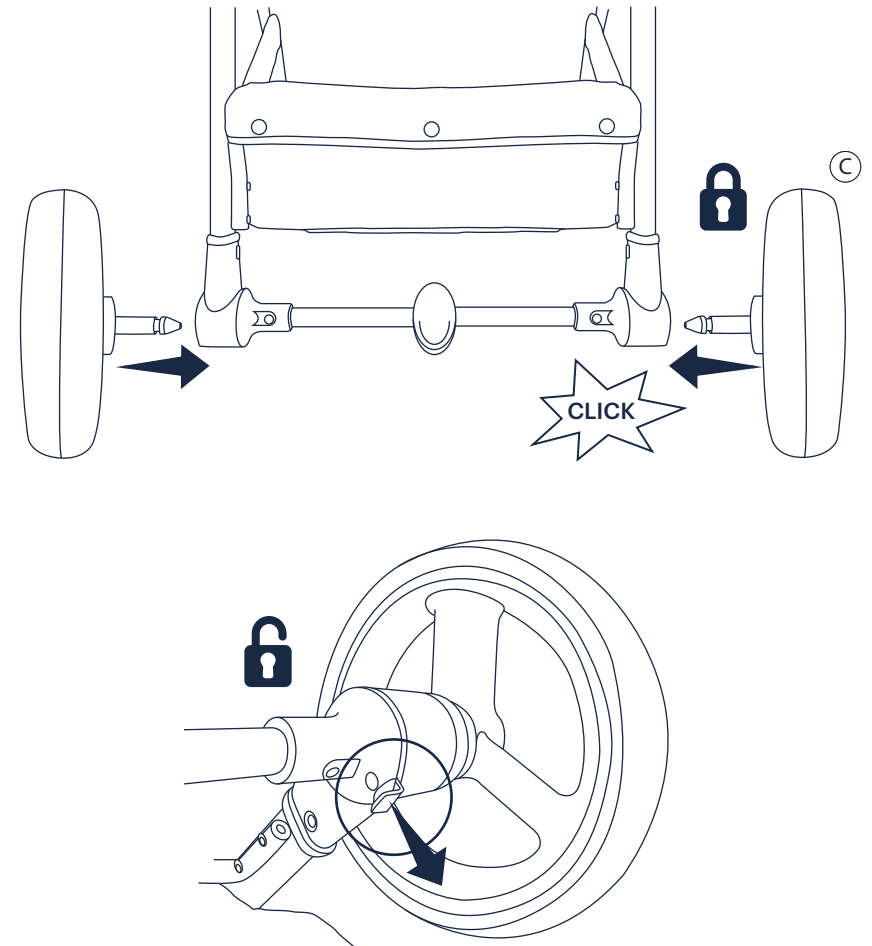

Chassis Assembly

3a. Insert each of the front wheel (B) pins into the center of the socket until you hear a “click”. Give each wheel a firm tug to ensure they’re securely attached.

3b. To **remove** the front wheels, simply press the button at the back of the wheel socket and pull down.

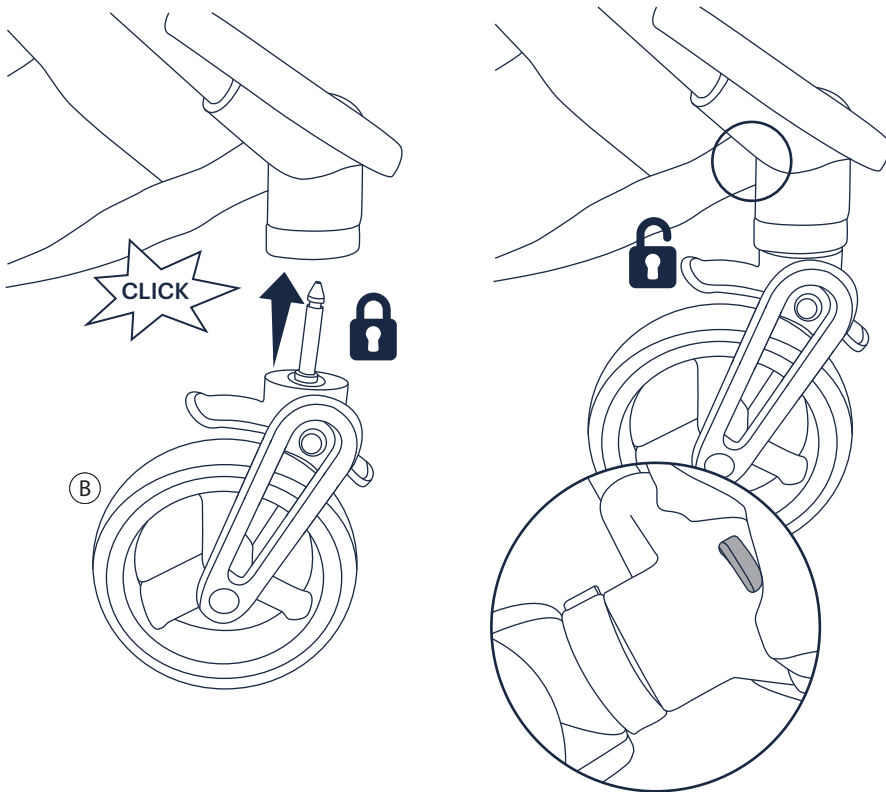


Bassinet Mode


1. On the rear of the seat unit (E), fasten the hook and loop panels as illustrated.



WARNING: The fabric must cover the metal bracket.

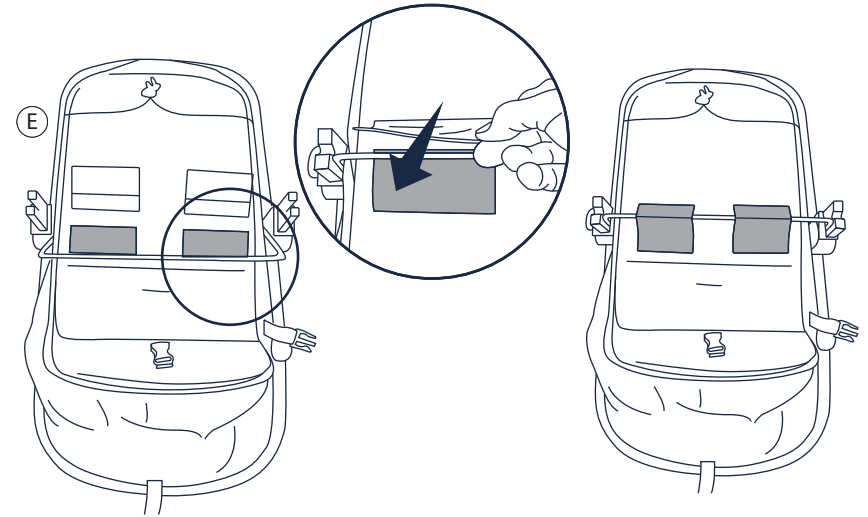


2a. Attach the seat unit to the chassis. Line up the seat connectors with the chassis housing and press downwards. Listen for a “click” to signal correct assembly.

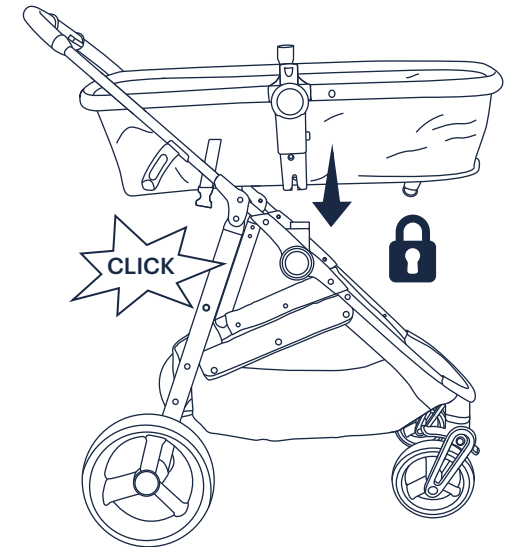


Bassinet Mode

2b. Push the button located both sides of the seat connectors to remove the seat unit from the chassis.

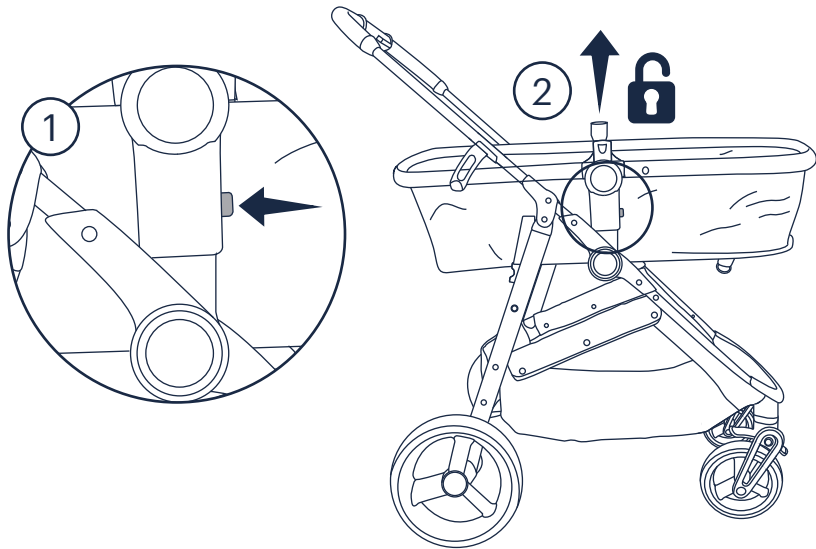


3. Insert the bumper bar (D) into the seat unit slots ensuring that the release buttons are on the outside and you hear a “click”.
Give the bumper bar a tug to ensure it’s securely in place.
To remove the bumper bar, simply press the release buttons on either or both sides and lift up.

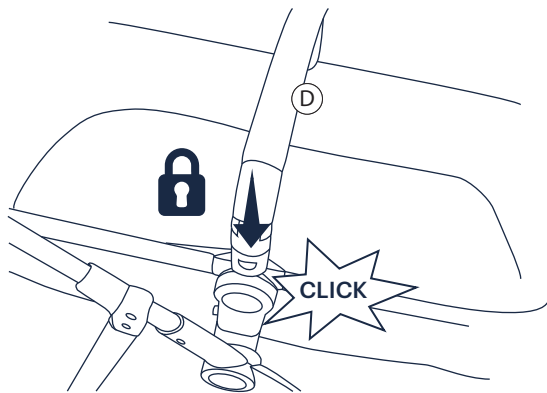


Bassinet Mode

4. Fasten the apron (G), secure the zip around the side and attach the hook and loop fasteners over the bumper bar.

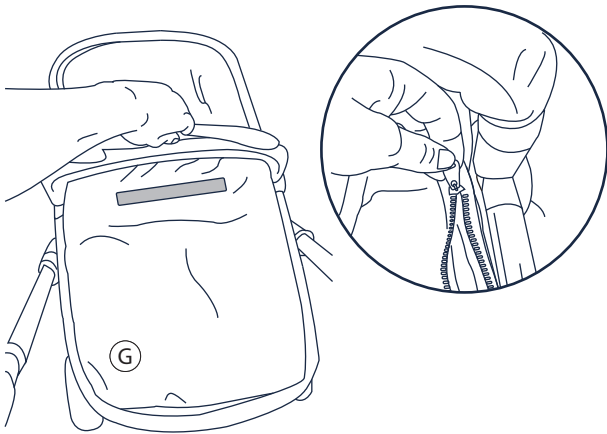

5a. Attach the canopy (F) to the seat unit.
First attach the plastic canopy clips to their respective sides, ensuring that they sit over the small plastic guides located on each side of the seat unit frame.
5b. Next, secure the canopy to the frame with the zip. Start with the right side (when facing the seat).


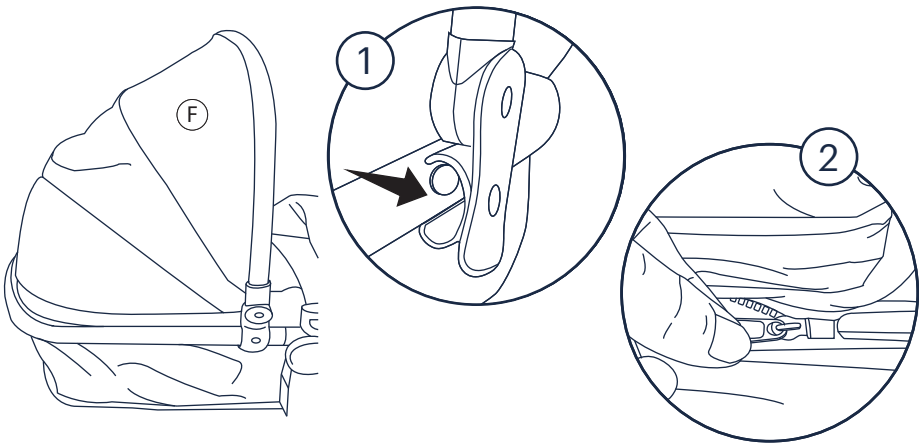


Bassinet Mode

Suitable from birth in bassinet mode up to a maximum weight of 9kg or until the child can sit up unaided, roll over or push itself up on its hands and knees.




WARNING: Never use in bassinet mode with seat unit forward facing.

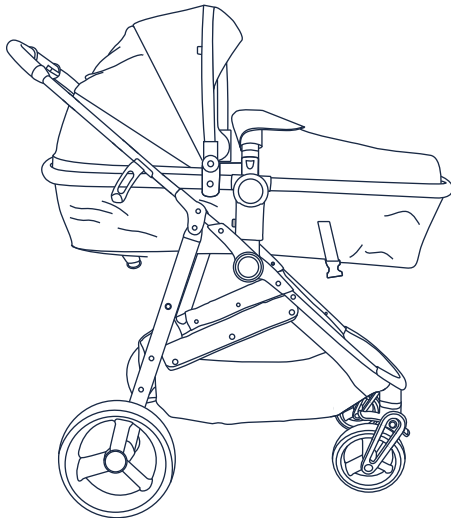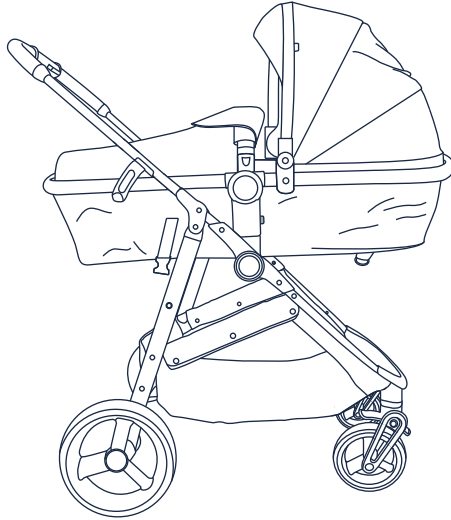


Stroller Mode

1. Press buttons both sides of the seat connectors to remove the seat unit from the chassis.

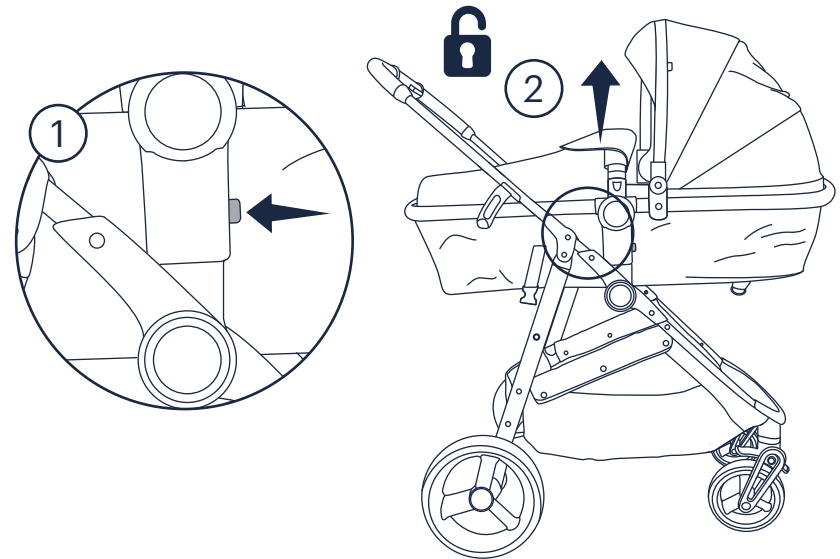


2. Fasten the webbing belts located on the rear side of the seat unit footrest. Listen for the "click" to signal buckles are secure.

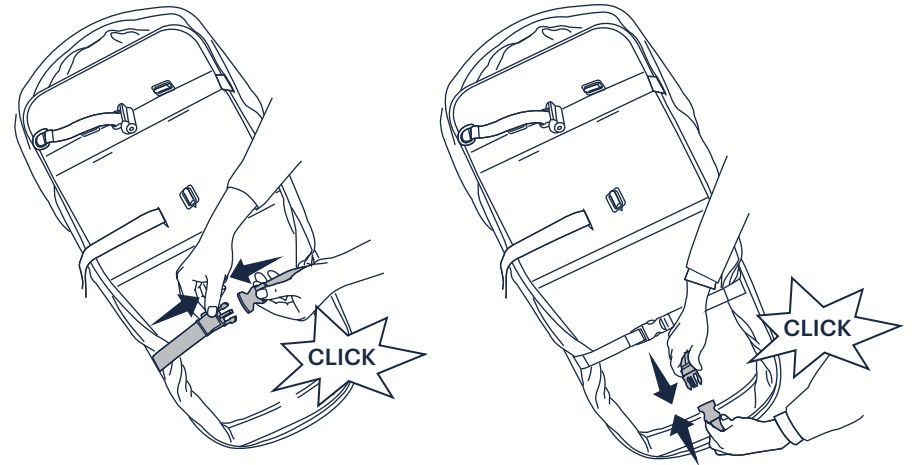


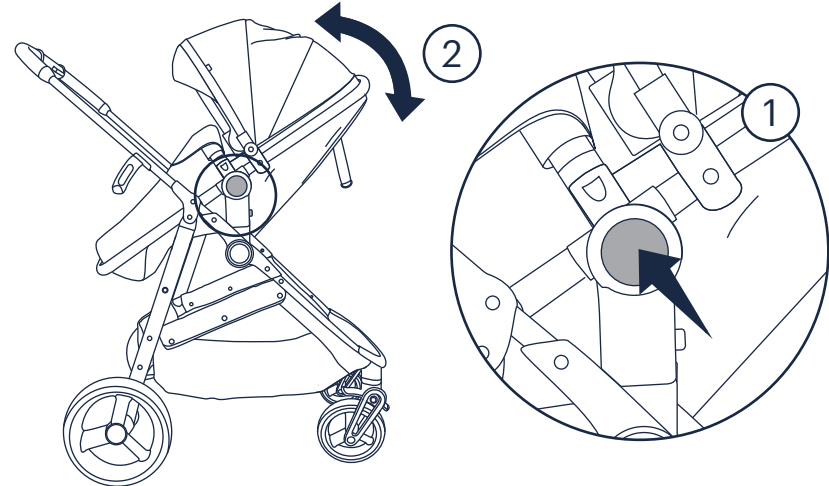
Stroller Mode

3a. Re-attach the seat unit to the chassis.
Locate the backrest adjustment mechanism at the rear of the seat unit.
Squeeze the clip on the reclining harness and gently pull up the backrest.

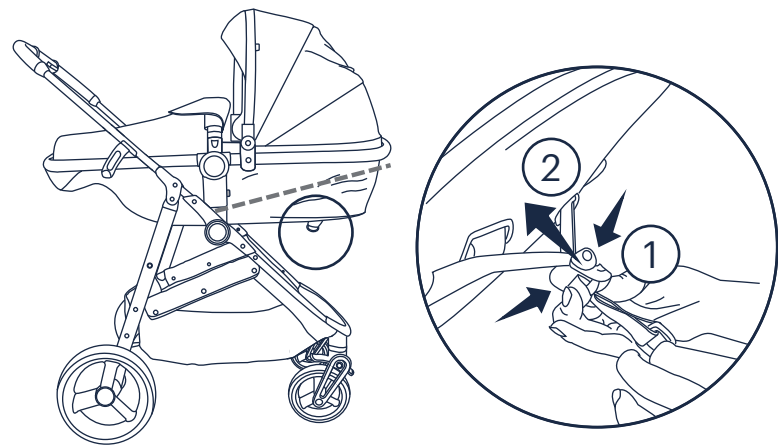


3b. Press buttons both sides of the seat connectors to adjust the seat unit recline. Ensure you hear a “click” as the seat engages at your desired position.

 **WARNING:** The seat unit is not suitable in stroller mode for children under 6 months.




Stroller Mode

4a. The seat unit is reversible in stroller mode. It can be forward or rearward facing.

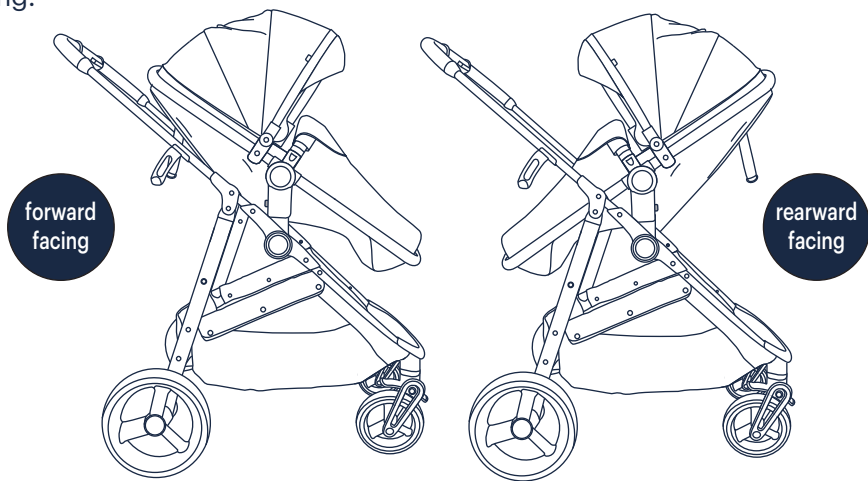


4b. Press buttons both sides of the seat connectors to remove the seat unit from the chassis.

To re-attach the seat unit to the chassis, line up the seat connectors with the chassis housing and press downwards. Listen for a “click” to signal correct assembly.

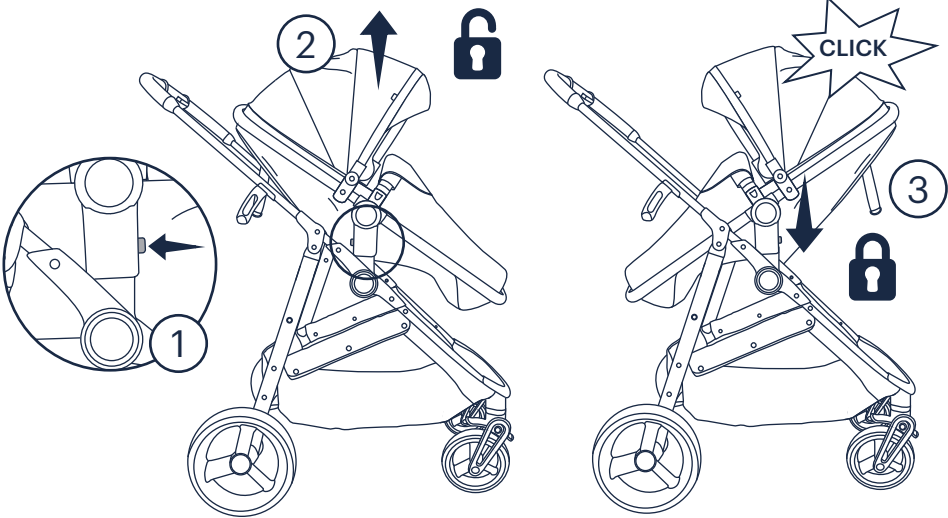


Harness

1. Slide the shoulder strap buckle onto the housing of the waist strap buckle. Repeat for the other side.
2. Insert the completed buckle into the buckle housing until it engages securely in place. Listen for the 'click'. Repeat for the opposite side.

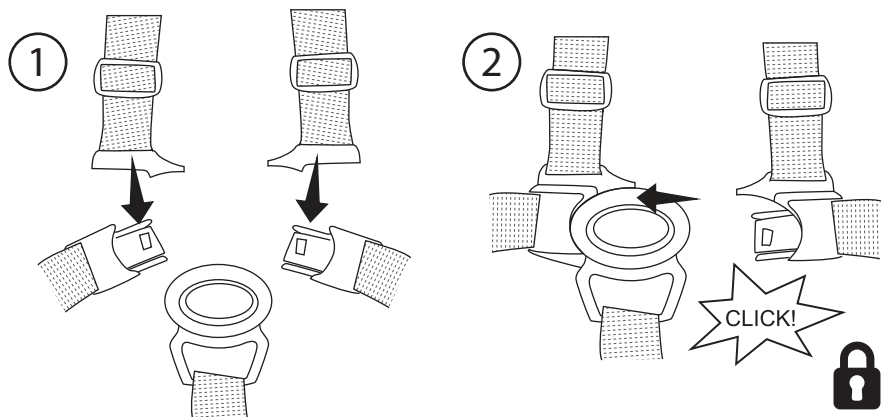

3. Press the centre button to release child from harness.

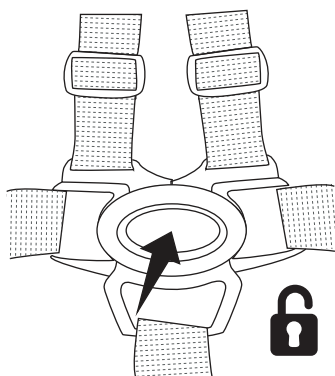



Harness

4. To adjust the shoulder straps, move the slides as shown.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.


5. There are 3 shoulder height positions. Undo the harness and remove the shoulder pads to adjust the shoulder height. Remove harness strap from webbing holders. Redo harness.

WARNING! Always adjust the shoulder strap height according to baby height.

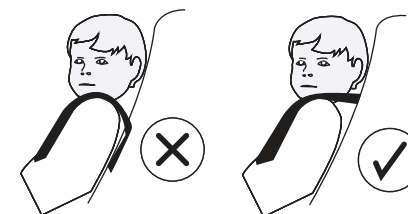
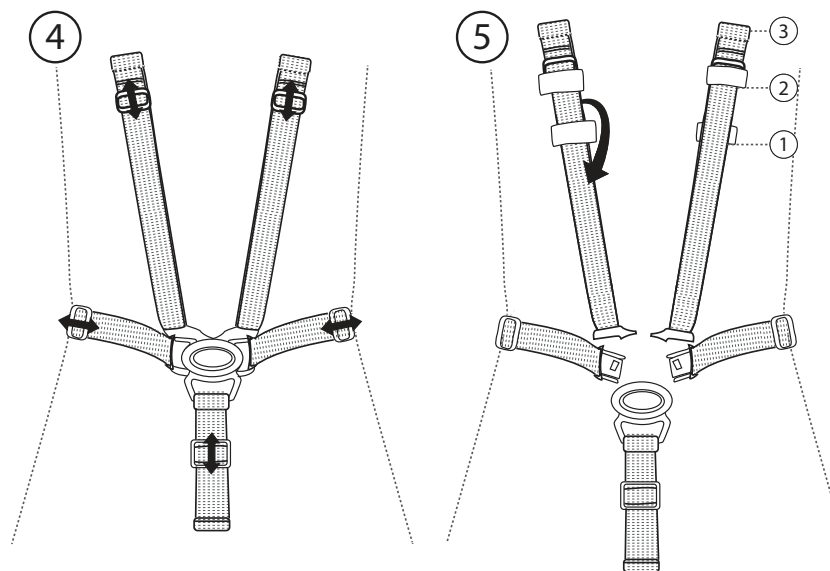


Canopy Adjustment

1. The canopy can be opened or closed by pulling forward or backward on the canopy rim.

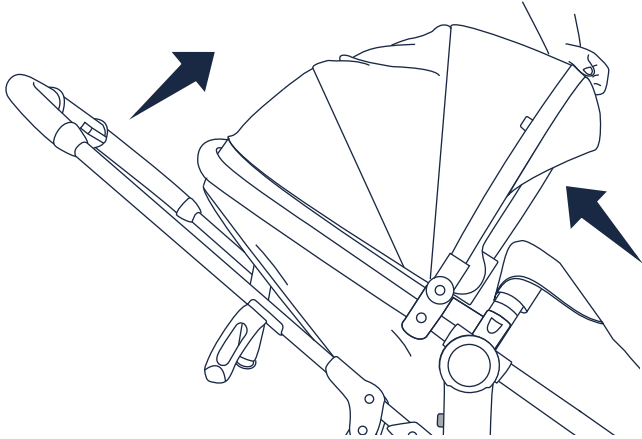

2. The canopy features a mesh window for ventilation and to keep an eye on baby in forward facing position.

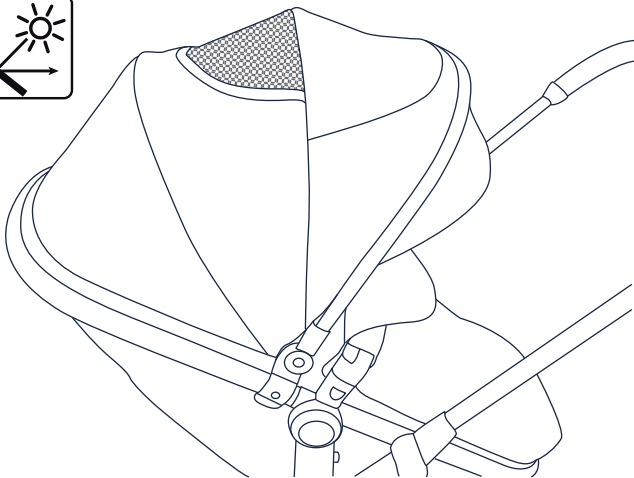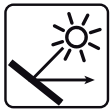


Swivel Wheels

When travelling along straight surfaces or uneven terrain, the front wheels may spin.

To lock the front swivel wheels into place, twist the top of the wheel socket so the notch is towards the front.

To go back to 360° swivel mode, twist top of the wheel socket so the notch is towards the back.

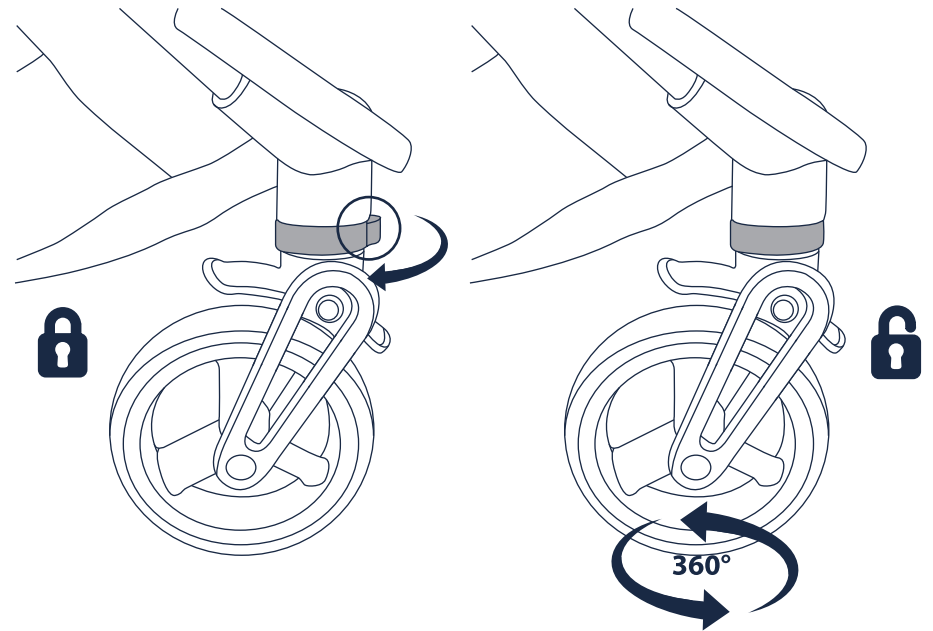

Brakes

Press down on the brake pedal to engage the brake. Listen for the “click” signalling that the brake is locked.


Push the brake pedal upwards to disengage the brake.




WARNING: Always apply the parking brake when the stroller is not moving.



WARNING: Always apply the brake when you are placing and removing the child.

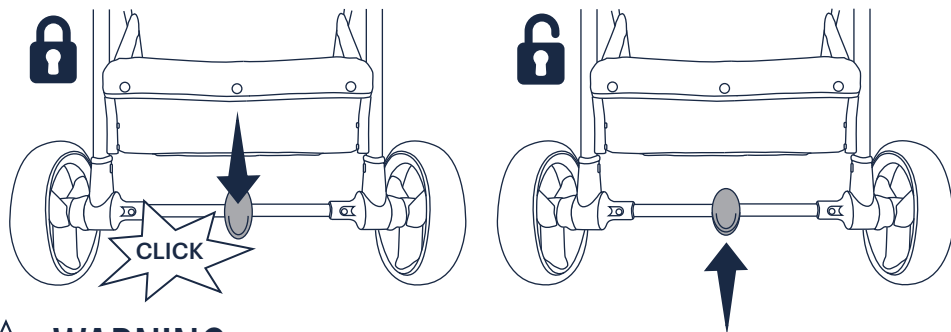



WARNING: Always apply the brake when you are making adjustments to the stroller i.e. changing seat direction.

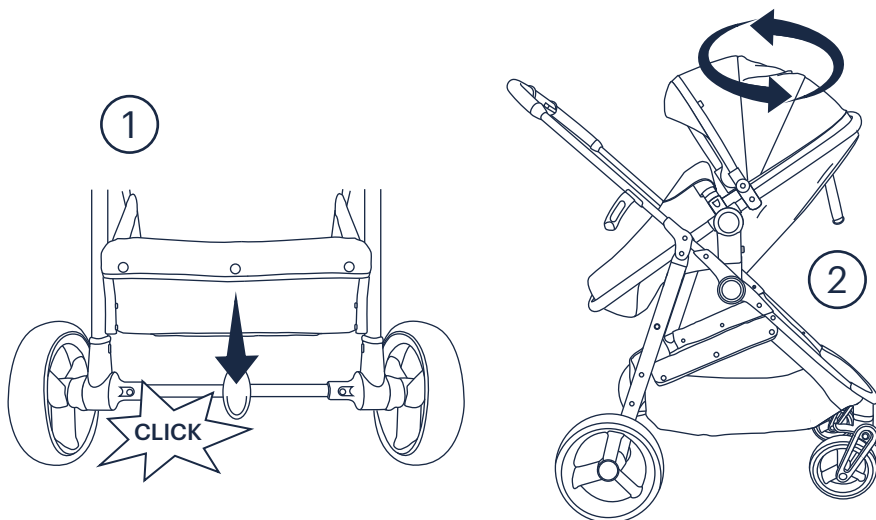

Raincover

Locate the raincover (H). Pull the raincover down over the stroller starting at the top of the canopy and pulling down towards the footrest.


NOTE. The raincover will fit in both stroller and bassinet mode.

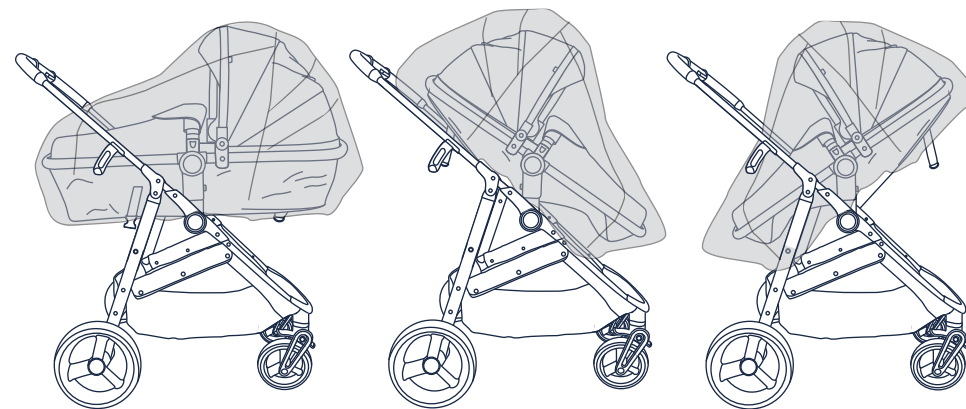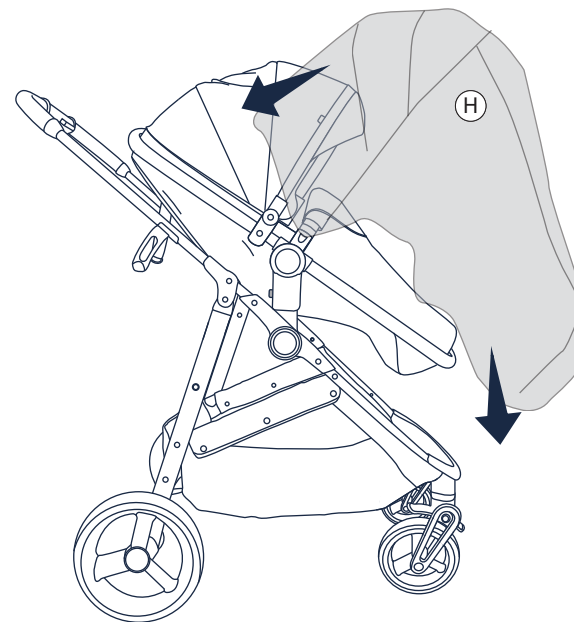

Folding


1a. If folding with the seat unit attached, it must be forward facing. If the seat unit is rearward facing, either remove the seat unit or change to forward facing before folding.

1b. Always fold the canopy before folding.

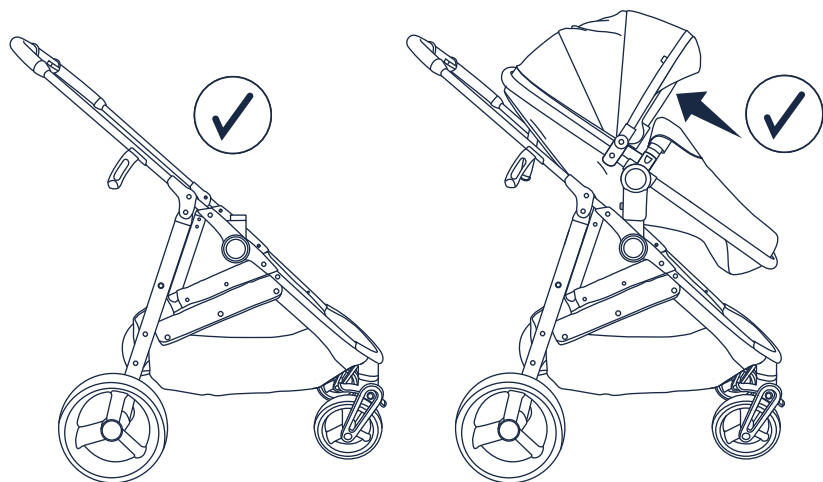

2. If the swivel wheels are locked, twist the top of the wheel socket so the notch is towards the back.


This will ensure the wheels can move and do not touch the bar when the chassis is folded.

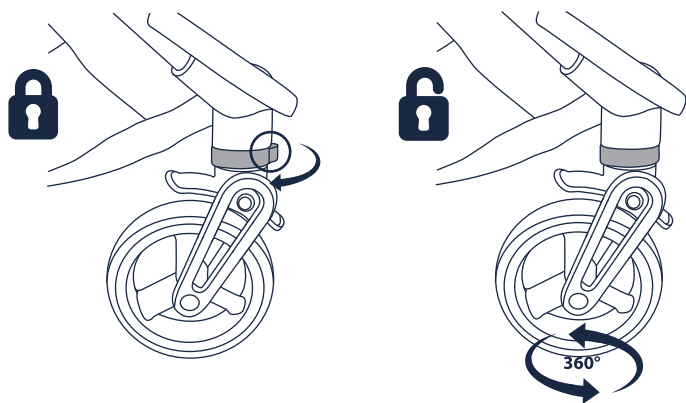

Folding


3a. Located on the handle, slide the folding lock button across to the right. At the same time, push up the safety lock.

3b. Push the handle downwards.

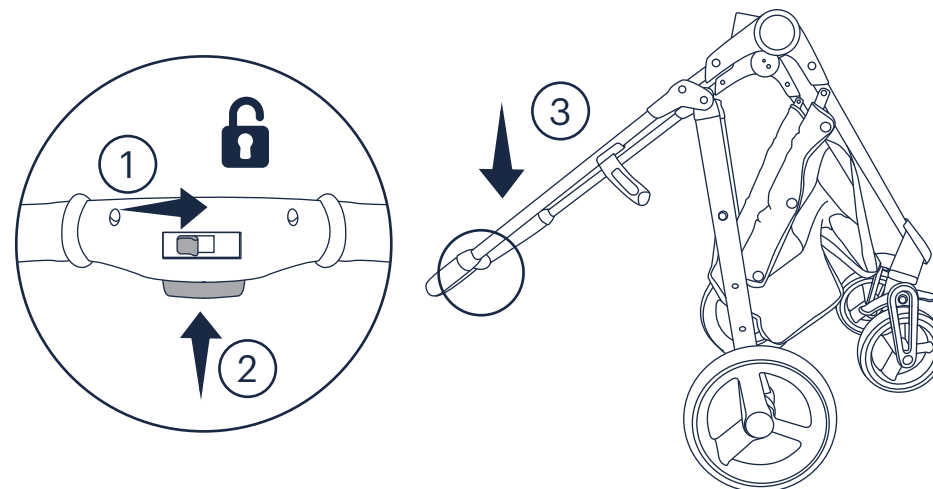

4. The locking catch will engage automatically.

⚠ WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.

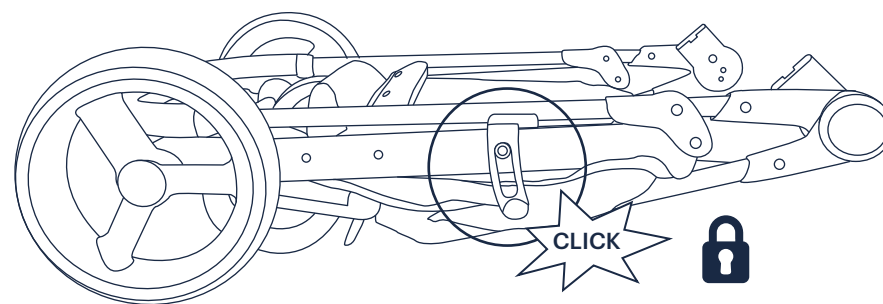

Care and Maintenance

- This product requires regular maintenance to ensure correct and safe performance.
- All assembly fittings are to be tightened properly.
- Always check your stroller for loose screws, worn parts, torn material or stitching.
- Replace or adjust parts as needed.
- Lubricate moving parts regularly, especially the wheels.
- Wipe metals and plastics clean with a damp cloth.
- Sponge clean fabrics with warm soapy water. Rinse well with clean water to avoid staining. Dry in shade.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Do not use abrasive pads, bleach or strong household cleaners.