



Treadmill User Manual



This Manual is applicable to the following models

Specification	MODEL	PR700	PR710F	PR720F	PR725	PR730
Horse Power	HP	1 HP			1.25 HP	1.5 HP
Input Voltage	V	115 V AC				
Max Input Current	A	10 A (max)				
Dog Length Limit	In	18"	28"	35"	48"	65"
Dog Weight Limit	Lb	44 lbs	88 lbs	132 lbs	176 lbs	265 lbs
Running Speed	MPH	0.6 - 7.5 MPH			0.6 – 10 MPH	
Foldable Function		No	Yes	Yes	No	No
Incline Function		No	No	No	Yes	Yes
Remote Control		Yes				No
Safety Device		Emergency Switch/Safety Locker (Foldable model only)				
Model Size	In	21 x 44 x 15	21 x 62 x 16.25	21 x 72 x 16	21 x 87 x 48	33 x 99 x 54
		(W) (L) (H)	(W) (L) (H)	(W) (L) (H)	(W) (L) (H)	(W) (L) (H)
Net Weight	lbs	63	83	99	137	273
Safety Standard		CE Certification				
Warranty		1 year				

Notice

Read this User Manual thoroughly before using treadmill to ensure its proper set-up and operation.

ASSEMBLY PROCEDURES

WARNING

- Your GoPet Petrun Treadmill is NOT DESIGNED for use by humans of any size or age. It is specifically designed for four legged animals within the weight and length criteria listed above for each particular model.
- Animals should always be fully supervised during use.
- Children should always be supervised to ensure that they do not play with or on the unit.

PR 700 - PR 710F - PR 720F

Note: Since the PR 700 does not include incline feature use second person to assist with assembly.


(Step 1)

Insert front rail



(Step 2)

Lift up the PetRun, then fasten screws (M6x18L) by L-wrench (4mm)

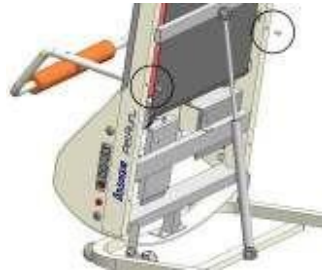


(Step 3)

Insert left & right rails



(Step 4)

Fasten screws (M6x18L) with L-wrench (4mm)

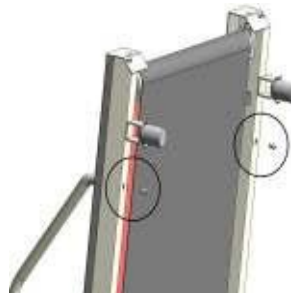

PR 725


NOTE – Front and rear gates have been discontinued for improved safety

(Step 1)

Use L-wrench (5mm), screw (M8x40L) and washer (M8x1.6T) to fasten the Left & Right Fences

(Step 2)

Use L-wrench (5mm), screw(M8x15L) and washer (M8x1.6T) to fasten the harness support on the top of both sides of the fence.

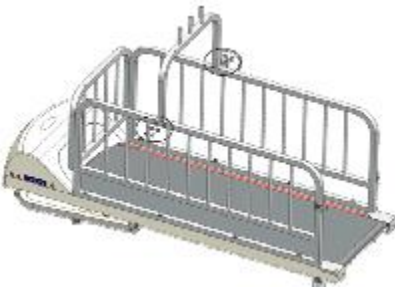

PR 730



NOTE – Front and rear gates have been discontinued for improved safety

(Step 1)

Use L-wrench (5mm) and screw (M8x40L) to fasten the side fence pipes


(Step 2)

Use L-wrench (4mm) and screw (M6x40L) to fasten the end board of Control Console on the vertical fence pipe.

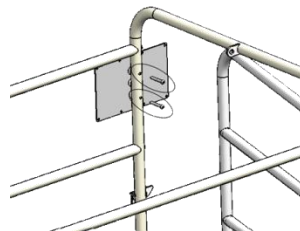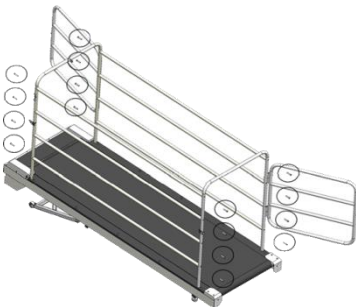

(Step 3)

Use Phillips screw (M4x8L) to fasten the Control Console on the end board (**NOTE: insert the 6 Pin Connector first!**).

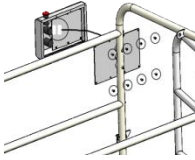

(Step 4)

Plug in the control cable connector.



Make sure all the pipes are attached completely after assembly.

- ◆ Thoroughly read the entire [User Manual](#) before use.
 - ◆ Be sure to follow all instructions.
-



WARNINGS

- ◆ Do not, under any circumstances allow humans on to the treadmill.
- ◆ Consult your veterinarian before beginning any exercise plan for your pet
- ◆ Make sure to use the correct voltage and fully inspect all electrical cords and outlets prior to use.
- ◆ Do not dress your pet during use and do not allow any dangling leashes or collars from your pet
- ◆ Do not store or operate your treadmill outdoors

Key Warnings Regarding Use

- ◆ Before turning on the power switch, let your dog stand on the running belt first, then turn on the power switch and adjust the speed slowly.
- ◆ Don't let dog jump on the PetRun when it is turned on. It may cause injury or accident.
- ◆ When the dog is using the PetRun, we suggest the owner stands beside and adjusts it to a suitable speed according to the dog's condition.
- ◆ Twice a day and each time about 10 to 15 minutes of exercise are suggested.
- ◆ Please stop using PetRun if any unusual condition such as unstable step or breathlessness occurred on running.
- ◆ If the position of running belt is not in the middle, but moved to one side, or a noise occurred, please stop using it immediately. Make adjustment till the running belt moves back to middle position then continue using it (Refer to Running Belt Adjustment Guide in User Manual).
- ◆ if there were any unusual noise, burning smell, motor cover damage, inside parts coming out, weld section loose and spare parts loose. Please unplug, stop using it, and contact your dealer for further assistance.

Key Warnings after use of PetRun

- ◆ Always unplug when not using PetRun.
- ◆ Remove hair and dirt from the running belt first by using cotton fabric soaked with 3-5% diluted warm neutral detergent. Dry the surface of the running belt with a towel.
- ◆ Don't use cleaner detergent containing toluene for cleaning.
- ◆ Do not touch the plug with wet hands.
-----To avoid damage, electric shock, or electric fire.
- ◆ Always put a mat under the PetRun to avoid damage to the floor.
- ◆ Always put the PetRun on a flat floor and allow enough space to use it.
- ◆ Avoid unusual use of the PetRun to avoid accident or damage.



Daily storage and Maintenance

- ◆ Unplug your treadmill when not in use.
- ◆ Do not use or store your treadmill outdoors, in a bathroom or high humidity environment. Avoid direct sunlight and keep away from direct sources of heat or other electrical equipment.
- ◆ For “F” model units, always lock the safety latch when your treadmill is in the folded position.
- ◆ Keep children away
 - Do not allow them to play on or around your treadmill.
- ◆ Use a mild household cleanser to wipe down your unit when dirty. Do not directly spray unit. Never leave unit damp or wet. Use a vacuum to remove hair build-up.

Warranty


- ◆ The warrant period is accordance with the warranty.
- ◆ An unexpected or artificial disaster is exempt from the warranty.
- ◆ The damage from taking apart from the buyer itself is exempt from the warranty.
- ◆ An injury to anyone, dogs or machine damage due to improper use is exempt from the warranty.

Beginner’s user guide

- Note: ensure your pet is properly hydrated before, during and after exercising. Consult your veterinarian as to how much water to provide your pet.
- Pet, sooth, and encourage your pet before it exercises. Continue to provide positive reinforcement during exercise.
- Walk your pet onto the treadmill and let it walk directly over the front. Do this a few times – pausing for a few seconds each time, encouraging your pet. Then walk your pet onto the belt allow it to stand a little longer.
- Once your pet is comfortable on the treadmill, turn the power on, walk your pet onto the treadmill and stand beside it as if you were taking it for a walk. Begin to speed the treadmill up, slowly at first, encouraging your dog to come along. Gradually increase the speed of the treadmill while standing next to your pet until it has a natural gait.
- Be sure to use a slow speed at the beginning and then increase the speed after your dog gets used to the movement.
- Once your pet is comfortably running without any tension on its leash you can remove its leash.
- Don’t stop the treadmill suddenly when the dog is finished, speed down slowly and let your dog have enough time


ACCESSORY PARTS

PR700 / PR710F / PR720F

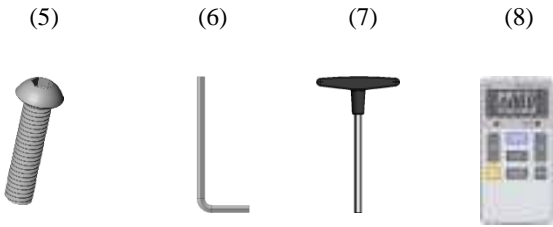


No	Accessory Parts Name	Q'ty
1	Front Rail	1
2	Left & Right Rails	1 ea
3	Power Cable	1
4	Screw M6x18L (short)	4
5	Screw M6x35L (long)	2
6	L-Wrench_4mm	1
7	T-Wrench_5mm	1
8	Remote Controller	1

PR725

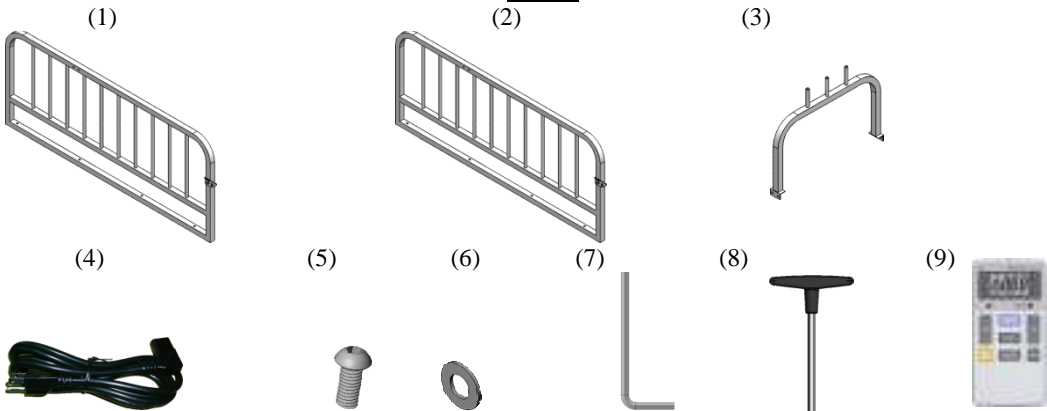

No.	Accessory Parts Name	Q'ty	No.	Accessory Parts Name	Q'ty
1	Left Fence – new style not illustrated.	1	6	Washer M8x1.6T	12
2	Right Fence – new style not illustrated.	1	7	L-Wrench_5mm	1
3	Harness Support	1	8	T-Wrench_5mm	1
4	Power Cable	1	9	Remote Controller	1
5	Screw M8x15L (short)	12			

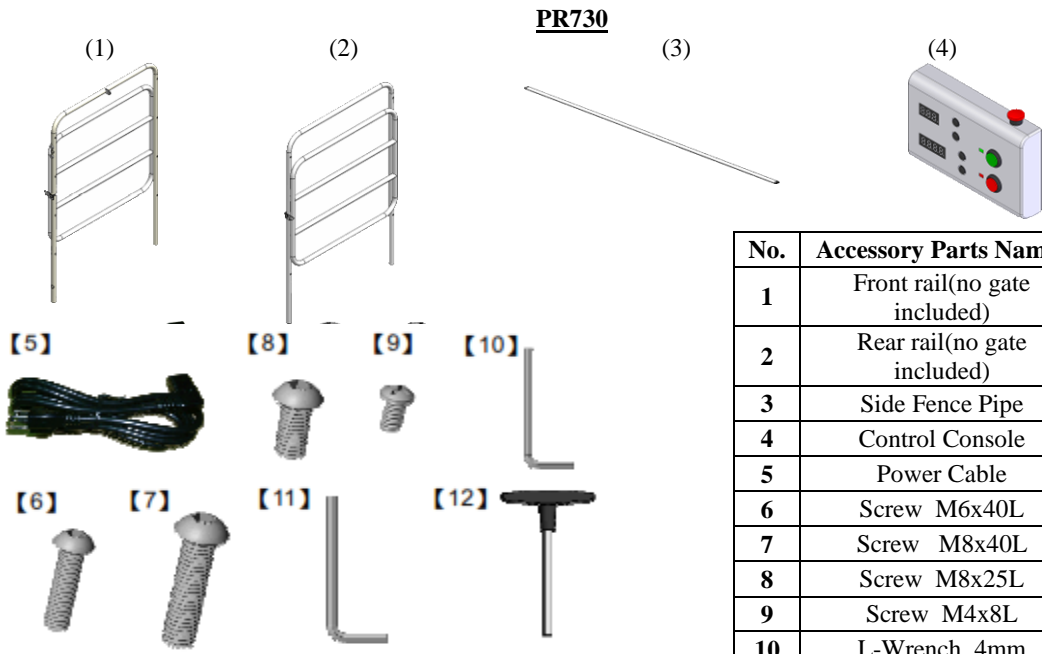


No.	Accessory Parts Names	Q'ty
1	Front rail(no gate included)	1
2	Rear rail(no gate included)	1
3	Side Fence Pipe	8
4	Control Console	1
5	Power Cable	1
6	Screw M6x40L	2
7	Screw M8x40L	16
8	Screw M8x25L	4
9	Screw M4x8L	1
10	L-Wrench_4mm	1
11	L-Wrench_5mm	1
12	T-Wrench_6mm	1

*Please make sure the quantity of accessory parts is correct before assembly.

Manual control button & Power switch illustration

For the following models - PR 700, PR 710F, PR 720F and PR 725E

Manual Control Button

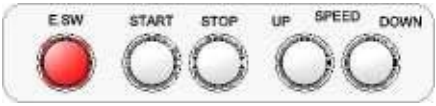

Outlet / Electric Current Protector / Power Switch




E.SW	Stop motor emergency, Power can be restarted by turning OFF and ON the power switch again
START	Start the belt running from .6 mph
STOP	Stop, can restart without reset power switch
SPEED UP	Speed up (1-12Km)
SPEED DOWN	Speed down (12-1Km)

Outlet	Input AC Power
Electric Current Protector	Cut off the AC Power when over current.
Power Switch	[O]=Power OFF []=Power ON

Remote control instruction manual


Remote control button key illustration

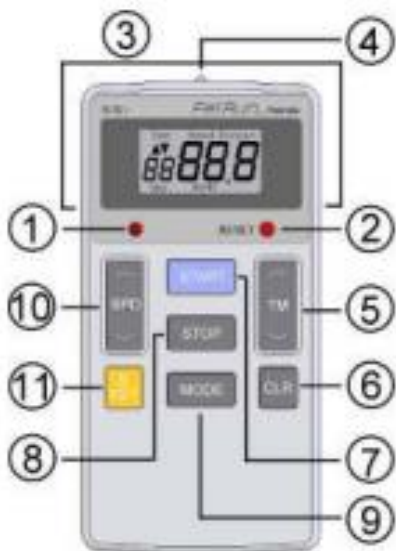


	Name	Definition
1	Red LED Light	Infrared signal light.
2	[RESET]	Will stop unit in any situation, and go back to set up mode
3	LCD Window	Time: count up/down 00-99 Min. Speed: up/down 00.0-99.9 Km/H (Imperial system unit will not show)
4	IR transmitter	For Infrared ray transmittance
5	[TM]	Press to set up time
6	[CLR]	Clear wrong time setting, and back to set up mode
7	[START]	Treadmill starts to work
8	[STOP]	Push the [STOP] key, the unit will stop working and go back to set up model (Need to wait 3-6 seconds for long beep sound, then push the [START] to re-start)
9	[MODE]	Speed / Distance display exchange
10	[SPD]	Speed setting
11	[S.KEY]	Push [S.KEY] + [MODE] for channel set up.
	Electric Saving Mode	The LCD display will switch to Electric Saving Mode under any mode if not operated over 1 minute, push [RESET] key to go back to the normal display.
	Battery Box	1.5V Alkaline Battery x 2 pcs

Infrared ray receiving zone

* Pantoscopic IR receiving angle,
Achieved 180° both left
And right side.

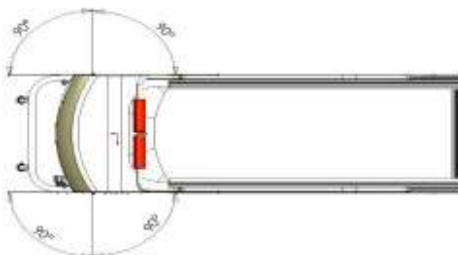

Process of remote control operation

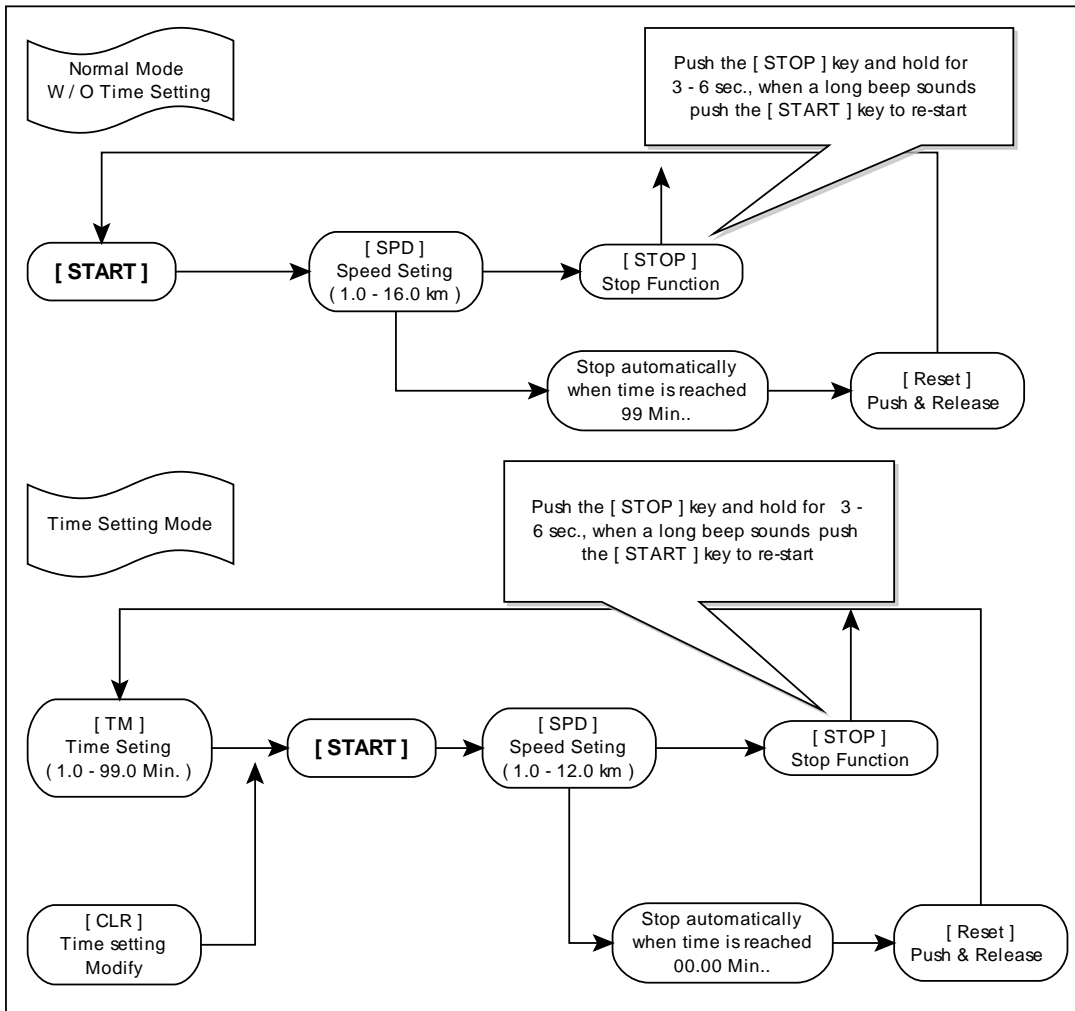

Remote Controller Reset Procedure

(STEP 1) Remote Controller Side

- A. Take the batteries out of the remote controller and then replace them.
- B. Push and hold **Mode** button and then push **SPD UP** button, the screen will display as pictured,
- C. Release both buttons at the same time.



(STEP 2) Machine Side

- A. Push and hold both the **Speed Up** button (orange color) & **Speed Down** button (black color). They are located on the side of the motor cover. A continuous beep will sound and will stop after 3 seconds and then an intermittent beep will sound. (Keep pushing both keys until this intermittent beep occurs)
- B. Release both buttons together.



(STEP 3) Remote Controller Side

- A. Point the remote controller (slightly off center) toward the IR receiver located on the side of the motor cover, then push and hold the **Reset key** for about 7 seconds.




- B. If a long beep sounds when you release the **Reset key**, the set up procedures are complete.




Control console instruction manual - for PR730 only

Control console button key illustration

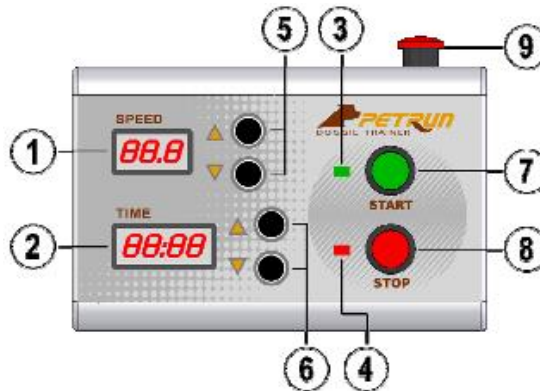


No.	Name	Definition
1	LED Window	Speed: up/down 01.0-16.0Km/H (Imperial system unit will not show)
2	LED Window	Time: count up/down 00:00–99:59 Min.(Imperial system unit will not show)
3	Green LED Light	Working light
4	Red LED Light	Stop light
5	Speed Up/Down	Speed setting
6	Time Up/Down	Time setting
7	[START]	The key to start unit
8	[STOP]	The key to stop unit
9	Emergency Stop	To stop unit for emergency

Process of control console operation - for PR730 only

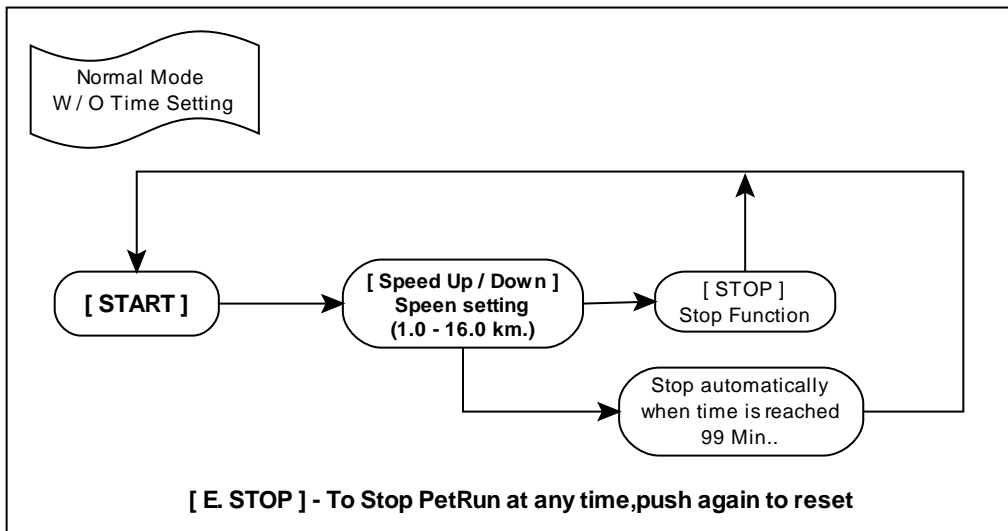


Time Setting Mode

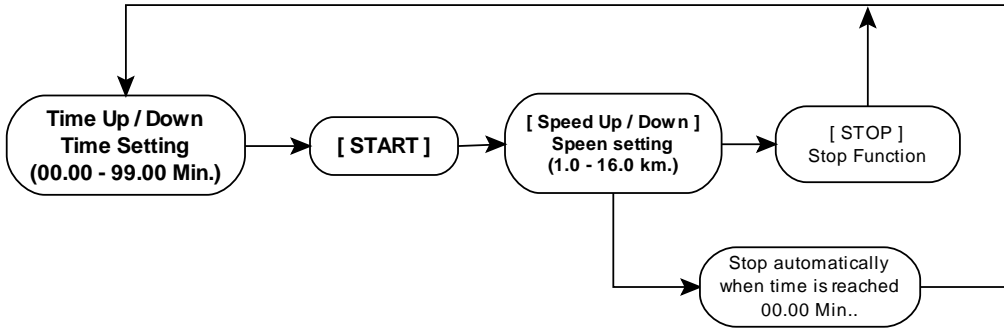

[E. STOP] - To Stop PetRun at any time,push again to reset

Using The Time Setting

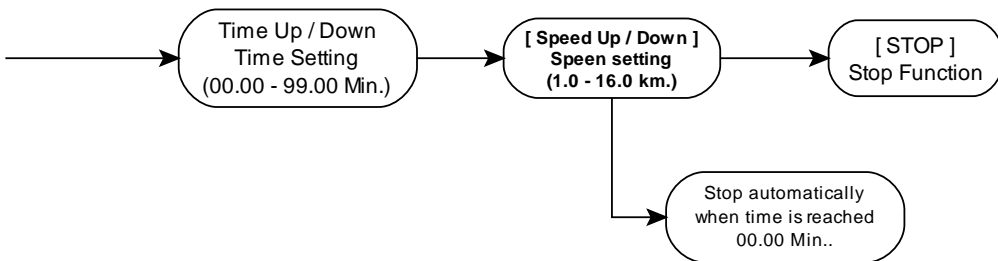

[E. STOP] - To Stop PetRun at any time,push again to reset


Running belt adjustment guide

***The running belt needs to be adjusted once the running belt is loosened or cannot be kept in the right position (move to the right or left side).**

1. Turn the power switch on.
2. Increase the speed to 4 Km/Hr, and keep it working for 2-3 minutes, then start to adjust.



If the running belt moves to left side please use attached 5mm wrench fastening the left side screw in clockwise. Turn ¼ turn each time until the running belt moves and stays in the middle.

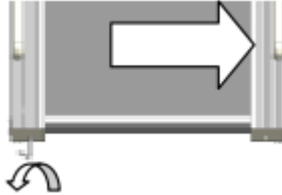

If the running belt moves to right side, please use attached 5mm wrench fastening the left side screw in anticlockwise. Turn ¼ turn each time until the running belt moves and stays in the middle.



If the running belt is loose, please use attached 5mm wrench fastening the left and right side screw in clockwise. Turn ¼ turn each time until the running belt is not loose and stays in the middle.

Rear rubber feet adjustment


If the floor is not flat, adjust the rubber feet Counter clockwise turning until the whole machine is stable.



Folding & storage – for PR710F & PR720F only

(Step 1)

Lift up the frame from rear side with both hands

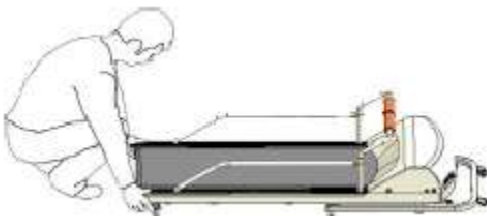

(Step 2)

Put lock pin from B into position A



Unfolding – for PR710F/PR720F only

(Step 1)

Pull out the lock pin from A and put into drop Position B



(Step 2)


Pull down from the back side of PetRun. It will to the flat level slowly.



Moving – for PR710F/PR720F only


(Step 1)

Place PetRun on level area , and switch the fixing locker to position (Lock)

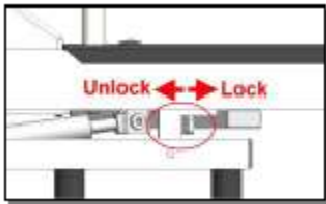

(Step 2)


Lift up the back portion, then it will be easy to move.

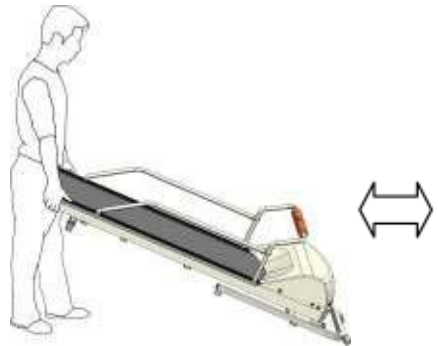


Incline – for PR725 & PR730 only

(Step 1)

Pull out the incline lever and lift up to adjust incline

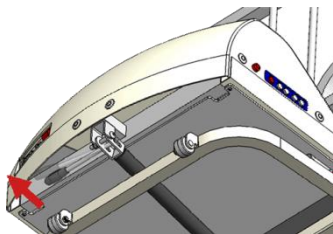


PR725

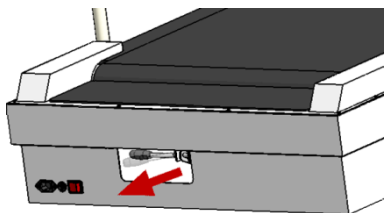


PR730

(Step 2)

Adjust the height by pulling out the adjust lever, and releasing the lever at the required position. (Stepless)

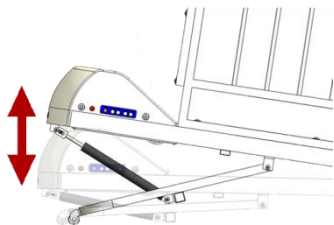

PR725

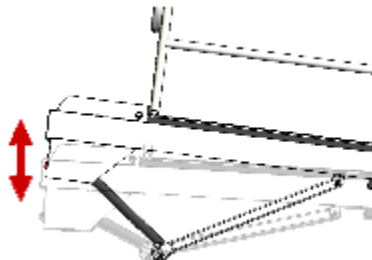

PR730