



ENTOURAGE™ SNACK TRAY
User Manual

austlen.com

WARNINGS & SAFETY INFORMATION

READ THIS USER MANUAL CAREFULLY AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USE. YOUR CHILD'S SAFETY MAY BE AT RISK IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

KEEP THESE INSTRUCTIONS AND WARNINGS FOR FUTURE REFERENCE.

DO NOT allow anyone to use this product unless that person has read and fully understood the warnings and instructions in this user manual prior to use.

WARNING

- **NEVER LEAVE CHILD UNATTENDED!**
- DO NOT use snack tray until child can sit up unaided.
- NEVER place hot foods or liquids in snack tray or cup holder.
- Snack tray is not designed to restrain child. Use harness at all times.
- Use of snack tray on uneven or rough terrain may result in leaks or spills.
- Use with lidless cup or container is not recommended.
- Maximum weight: 3 lbs.
- Excessive weight may cause a hazardous unstable condition to exist.
- Do not use snack tray if any part is broken.
- To avoid health hazards, wash snack tray according to cleaning instructions before/after each use.
- Do not lift stroller by snack tray.
- Removable snap-in tray must always be installed on snack tray frame when attached to stroller.
- Dispose of plastic bags and packaging immediately to avoid danger of suffocation.
- Intended for use only with Austlen™ Entourage™ strollers.

Care & Maintenance

CLEANING INSTRUCTIONS

The snack tray frame may be wiped down with water and a mild detergent, as needed.

Removable snap-in tray is top-rack dishwasher-safe.

Do not use abrasives.

If exposed to salt water, wipe down with fresh (tap) water as soon as possible to avoid corrosion.

Do not use pressurized water to clean.

Always dry thoroughly before storing, and do not store in a damp environment or near a direct heat source (fire, radiator, etc.).


MAINTENANCE & REPAIR

Inspect your Entourage snack tray periodically. Never use a product that is structurally unsound or in need of repair.

This product requires regular user maintenance. Regularly check all connecting hardware (rivets, screws, etc.) for tightness and security.


Replace worn or broken parts as needed. Only Austlen Baby Co. replacement parts should be used. It may be unsafe to use parts supplied by another manufacturer.

Parts List

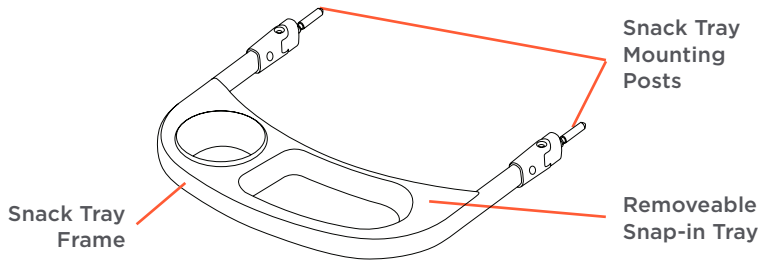


Snack Tray Operation

1 Attach / Remove / Swivel Snack Tray

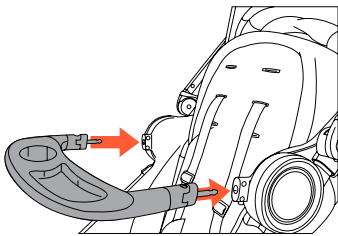


TO ATTACH SNACK TRAY:
STEP 1: Remove arm bar. For instructions, refer to Entourage™ User Manual.

STEP 2: Insert snack tray mounting posts into arm bar slots found on each side of seat, until tray clicks into place.

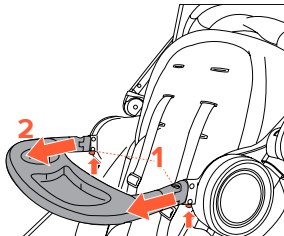


TO REMOVE SNACK TRAY: Push both buttons on underside of snack tray to release, pull out.

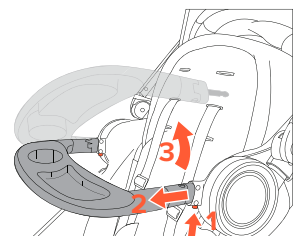

NOTE: Open either side without removing to allow child to get in and out of seat.

2 Remove Snap-In Tray

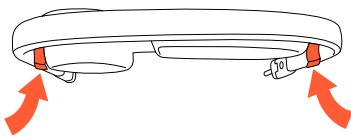

Snap-in tray is top rack dishwasher-safe.

TO REMOVE: Press side tabs inward and push tray up.

TO RE-ATTACH TRAY: Place tab on front of removeable snap-in tray in hole on snack tray frame. Push downward to secure.

SUPPORT & CONTACT INFORMATION

Austlen™ Baby Co.
P.O. Box 49589
Austin, TX 78765

844.AUSTLEN
support@austlen.com
austlen.com

Model SA-SNCK
Manual P7450 version 1.0

All rights reserved. © 2016 Austlen™ Baby Co. Austlen, Entourage, and all associated logos are trademarks.
All product specifications are correct at time of print. Austlen Baby Co. reserves the right to alter parts that will not affect product functionality.