

# VARILIGHT® V-Pro Multi-Point™ & V-PRO IR™ Remote Control Handset

## Enhanced Lighting Control featuring LightScene™

**YRE8**  
Ref: YRE003



This handset is designed for use with VARILIGHT® V-Pro Multi-Point™ & V-PRO IR™ Remote Control Dimmers. This controller can operate up to 4x V-Pro Multi-Point or 4x V-PRO IR dimmers independently.

Before use **2 x AA** batteries must be fitted. **Batteries are not included.**

1. Slide open the back cover in the direction of the arrow on the casing;
2. Place the batteries inside paying attention that you place them the right way round (see diagram back cover);
3. Slide the cover back into place.

### Getting Started

VARILIGHT V-Pro Multi-Point & V-PRO IR Remote Control Dimmers are preset to respond to button 1 on this controller. You can teach a VARILIGHT V-Pro Multi-Point or V-PRO IR dimmer to respond to any of the buttons numbered 1 to 4 by following the instructions in the box below.

#### PROGRAMMING YOUR DIMMERS TO RESPOND TO BUTTONS 1 TO 4

**Check that the blue light at the top of the handset is off. (If the blue light is flashing, or fully on, then press the shift button once or twice to clear.)**

1. To set the dimmer into learning mode tap the button 6 times, roughly once per second (each tap causes the light(s) to turn on or off). After 6 taps on the button the lights will step up and down and go off.



2. Within 15 seconds and from a distance of less than 1 metre (3 feet) away, pointing directly at the button on the dimmer, briefly press the chosen button on the handset. The light(s) will turn on and turn off.



3. To confirm your choice, briefly press the same button again. If the programming has been successful, the light(s) will turn on and turn off. The lights then step up and down once to confirm. Try controlling the dimmer with the remote control. If it does not respond return to step 1 above and try again. If the problem persists, try a different button, a different remote control unit or purchase the dedicated VARILIGHT controller.



4. You can now use this button on the remote control to operate the dimmer. As with the touch button on the dimmer, a single touch on the remote control button will turn the light(s) on and off. Holding the button down will make the brightness cycle up and down. To change the direction of the dimming cycle remove contact and then press the button again. Release contact from the button when the desired light level is reached. The dimmer can still be operated using the touch button on the dimmer in the same way.

5. For 2- gang models, repeat steps 1 to 4 for each numbered button, teaching each one a different button so you can control each one separately. You can change your choice of control button by following steps 1 to 4 again at any time.

#### MASTER "CONTROL ALL" BUTTONS (No programming required)

When the blue light is off, the green button will turn all the dimmers in the room ON (At maximum brightness) and the red button will turn them all OFF.

When the blue light is off the grey "LAST SCENE" button will turn all the lights on at the same levels they were at when you turned them off.

To increase the brightness of all the dimmers in the room, press SHIFT once (so that the blue light is on) then press the green button. With the blue light on, you can decrease the brightness of all the dimmers in the room using the red button.

FUNCTIONS: When blue light is off			
ON MAX			DIMMER 1
OFF			DIMMER 2
LAST SCENE			DIMMER 3
SHIFT			DIMMER 4

### 3. LightScene™

If you have more than one VARILIGHT® V-Pro Multi-Point™ or V-PRO IR™ Remote Control Dimmer in the same room (or a 2-, 3- or 4-gang dimmer) you can use the LightScene™ functions on this handset to create, save and recall up to 4 lighting scenes. Setting a lighting scene is easy:-

- First check that the blue light at the top of the handset is off. (If it is on or flashing, press the shift button once or twice to clear);
- Use the buttons 1 to 4 to change the brightness of each dimmers to create a lighting scene that you like;
- Save the scene by pressing SHIFT twice (so the blue light is flashing) then press one of the buttons 1 to 4 to save the scene to that button. You can save up to 4 scenes (one for each of the numbered buttons on the handset). You can overwrite a scene at any time with another one by repeating the above steps;
- When the blue light is on (press SHIFT once or twice) you can recall a scene by pressing the button you saved the scene to.



FUNCTIONS: When blue light is on			
ALL UP			RECALL SCENE 1
ALL DOWN			RECALL SCENE 2
			RECALL SCENE 3
SHIFT			RECALL SCENE 4

When blue light is flashing on & off			
			SAVE SCENE 1
			SAVE SCENE 2
			SAVE SCENE 3
SHIFT			SAVE SCENE 4

#### GUARANTEE

Important: In case of any defect return the handset to our service department. This guarantee is in addition to and not in derogation of the statutory rights of the purchaser and is offered so that you may have the benefit of our technical facilities. Should any defect occur in this unit within 10 years of its purchase we will replace or repair the defective unit free of charge provided that:-

- a) The unit has not been tampered with or taken apart.
- b) It is securely packed and safely returned to:- **Service Department, CarylIs Lea, Faygate, Horsham, West Sussex, RH12 4SJ** (Tel. (01293) 223333) together with a letter stating the guarantee registration number below, the date and place of purchase and the details of the fault.

**GUARANTEE REGISTRATION NUMBER YRE003.**

