



## HOW TO SET YOUR PIN

1. Set the PIN to the current code (default is 0000).
2. Hold down the button at the top of the lock.
3. While holding the button down change the PIN to your desired code.

To change the PIN again, simply repeat the steps.