

The correct casement fastener to use on a window that is hinged on the left hand side and opens away from you is the left hand casement fastener

Product code: WIN21 for black and WIN21-P for pewter

The correct casement fastener to use on a window that is hinged on the right hand side and opens away from you is the right hand casement fastener

Product code: WIN20 for black and WIN20-P for pewter