

How to clean the outboard motor

1. After every outing, flush out the engine. This doesn't just apply to salt water adventures, but to fresh water outings as well.
2. Buy a set of "rabbit ears": two flexible rubber seals connected with a metal clamp. Slip the apparatus onto the lower unit where the water is picked up and attach a garden hose.
3. Start up the engine and let the water pump do the rest. (Practice safe boating and remember to stay clear of the prop and make sure no one tries to shift the motor into gear.)
4. While you're flushing the motor, check the water pump to make sure it has good water flow. Carefully put your finger through the stream of water. It may be warm, but it shouldn't be hot. If the output is not strong, you may have some debris stuck in the outflow tube. Immediately shut down the engine to prevent overheating and damage.
5. Insert a small piece of wire into the flow tube and work it back and forth. Start the engine again and check the output. If that doesn't solve the problem, you may need a new water pump.
6. After flushing the engine, disconnect the fuel line and allow the engine to burn all the fuel in the carburetor.
7. Once you've finished the flushing and run the engine out of fuel, be sure to turn off the key and, if you have a battery switch, turn it off.
8. Take the engine cowling off and check for fuel or water leaks.
9. Wipe everything down and spray with an anti-corrosive like engine oil or Quick-lube. Be sure to lubricate all the moving parts such as the shift and throttle cables, carburetor valves, etc.
10. Replace the cowling and wipe it down. Keep a canvas or plastic cover on the engine between trips.
11. Always use fresh fuel. At the end of the season, boat motor maintenance should include draining your tanks and taking the fuel to the proper recycling authority.