


Seamax Deluxe Boat Launching Wheels

BEST HEAVY DUTY BOAT LAUNCHING DOLLY SET IN THE WORD

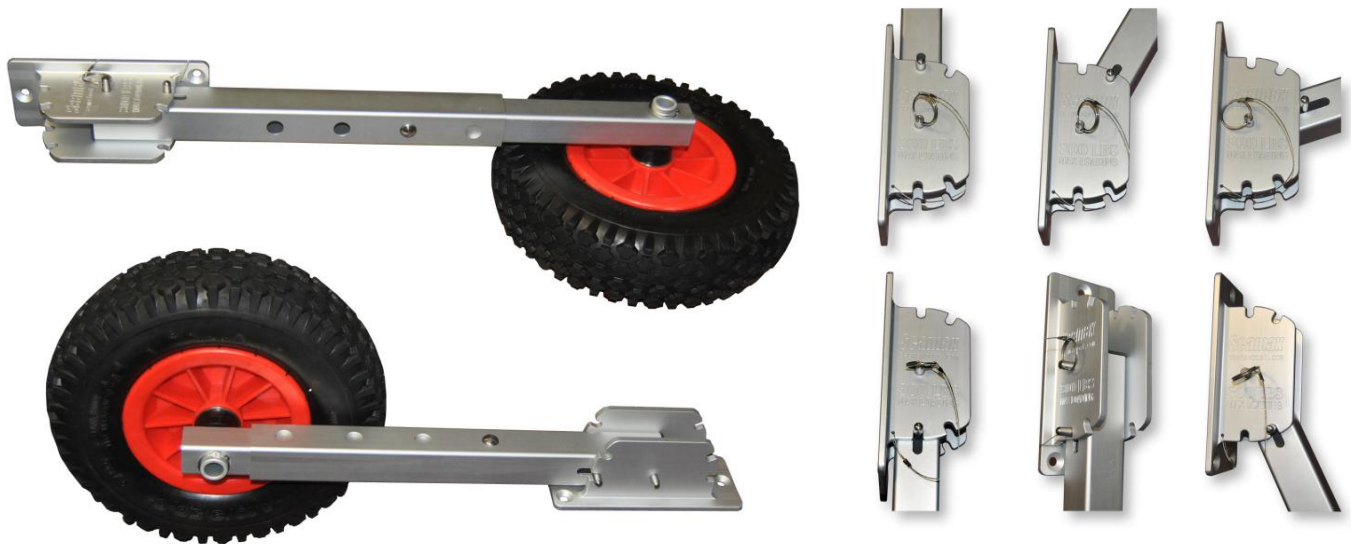

The Deluxe Boat dolly is with well 3D design, made by hardest marine grade T6 aluminum alloy with CNC processing; Shiny looking anodized coating on all aluminum parts, product is good for saltwater using; Small parts are all made by solid stainless steel. Lab 1000Lbs tested, support MAX 600Lbs loading in all condition, good for inflatable boats, aluminum boats and fiberglass boats.

Benefit from its new design - 4 stages of length & 4 wheel arm position, the dolly can be adjusted while afloat in the boat leaving or coming into, the dolly system can also bring different performance position for boat launching. The wheel arm length increment is 2.5" per stage, plus the wheel's diameter, the range of length is 23-30 inches. The wheel arm can have 60 or 90 degree locking position up and down. Free up more space on the top and side of the transom. Lower 60 degree position can let the wheels run at the same level as the prop; the result is to turn the dolly as your prop guard when at rocky beach.

The transom bracket installation area is about 8x3 inches, shorter transom bracket design can give more possibility of installation for all type of boats with different transom. User can install the brackets at water line top position, so the water won't hit the screw holes. Two bottom collinear bolts give the bracket extra strength and stabilizes.

The features of Deluxe Boat Dolly include: the spring load locking pin for wheel arm position adjustment, solid spring load buttons for wheel arm length adjustment. Quick released lock pin for wheel arm and wheel bearing.

Dual wheel upgrade kit is available for the deluxe boat launching dolly, with this upgrade, this dolly system can run with 4 wheels all together, it is good for using at sandy beach when you have a bigger boat.

MAX LOAD: This dolly set is designed for boats with solid outboard transom, the length of the boat should be less than 16FT for easier moving. Total weight should not exceed 600 Lbs including boat, outboard and all accessories.

INSTALLATION: This dolly set should only be installed by an adult with some experience in working with tools. To install the wheel set properly, you will need to drill 6 holes (5/16") in the plywood transom for the mounting brackets (3 holes per bracket). It is very important to locate the position of the holes correctly (2 holes at lower position, 1 hole at upper position). Please check carefully including checking the wheel arm position before starting to drill any holes.

WARRANTY: Manufacturer 2 years Parts Limited Warranty within USA & Canada. 30 days free replacement on any defective ransom wheel sets. Please return the product or parts to the retailer you purchased them from if there is a warranty issue. You may contact the retailer for technical support or authorization before returning them.



ADJUSTABLE DESIGN:

THESE WHEELS HAVE 4 ADJUSTMENT POSITIONS FOR LENGTH AND ANGLE TO ADJUST THE LEG LENGTH, PUSH IN THE SPRING LOADED BUTTONS ON EACH SIDE OF THE LEG AND EITHER PULL OR PUSH TO LENGTHEN OR SHORTEN. TO ADJUST THE LEG ANGLE, PUSH DOWN ON THE SPRING LOADED BAR NEAR THE TOP OF THE LEG ASSEMBLY AND MOVE THE LEG ASSEMBLY TO THE DESIRED LOCATION. TO REMOVE THE LEG ASSEMBLY FROM THE BRACKET, PULL OUT THE QUICK RELEASE PIN LOCATED AT THE TOP OF THE LEG ASSEMBLY

INSTALLATION:

- YOU MUST DRY FIT EACH LEG ASSEMBLY WHILE BEING IN THEIR SHORTEST SETTING BEFORE DRILLING ANY HOLES TO MAKE SURE THE WHEELS CLEAR THE SIDES OF THE TUBES AND THE BOTTOM OF THE BOAT BY ONE INCH OR OVER.
- THE STANDARD WHEELS MUST FACE TOWARDS THE BOAT TUBES (OUTSIDE) AND BE AS FAR APART AS POSSIBLE (THIS WILL GIVE YOU MORE STABILITY WHEN MOVING THE BOAT AROUND) AND CLEAR THE BOAT TUBES BY ABOUT HALF INCH SO THEY DON'T RUB AGAINST THE TUBES WHEN BEING RAISED OR LOWERED. THE WHEELS MUST ALSO CLEAR THE BOTTOM OF THE BOAT BY ABOUT ONE INCH WHEN PLACED IN THEIR LOWERED POSITION. (FOR INFLATABLE BOATS)
- THE BRACKETS HAVE THREE HOLES. THE SINGLE HOLE INDICATES THE TOP OF THE BRACKET AND THE END WITH TWO HOLES INDICATES THE BOTTOM OF THE BRACKET.
- ONCE YOU HAVE DETERMINED THE MOUNTING POSITIONS FOR THE BRACKETS WHICH SHOULD BE STRAIGHT UP AND DOWN ON THE TRANSOM AND ABOUT 6 – 8 INCHES UP FROM THE BOTTOM OF THE BRACKET TO THE BOTTOM OF THE BOAT, MARK WHERE TO DRILL THE 5/16" HOLES (DRILL BIT INCLUDED, OR 3/8"). THIS IS BEST DONE BY PULLING OUT THE QUICK RELEASE PIN THAT SEPARATES THE LEG ASSEMBLY FROM BRACKET.
- THE HOLES SHOULD ALL BE ABOVE THE WATERLINE BUT TO BE SAFE, SHOOT SOME GOOD SILICONE OR MARINE SEALANT CAULKING INTO THE BOLT HOLES FROM THE OUTSIDE THEN PUSH THE BOLTS THROUGH THE BRACKET AND THROUGH THE HOLES IN THE TRANSOM. THIS WILL GIVE YOU A GOOD WATERTIGHT SEAL. (THIS CAULKING IS AVAILABLE AT ALL HARDWARE STORES, WE SUGGEST USING SIKAFLEX MARINE SEALANT)
- ALWAYS DOUBLE CHECK BEFORE DRILLING ANY HOLES! YOU CAN PUT THE BOLT INTO THE FINISHED HOLE TO FIT BEFORE DRILLING THE NEXT HOLE.
- USE THE SUPPLIED WASHERS AND LOCK NUTS ON THE BOLTS ON THE INSIDE OF THE TRANSOM TO SECURE THE BRACKETS TO THE TRANSOM AND THEN CAP THEM WITH THE SUPPLIED ACORN NUTS TO PROTECT YOUR INFLATABLE BOAT WHEN ROLLED UP.



TIP: WHEN DRILLING THE HOLES, PUSH GENTLY AND HOLD A PIECE OF WOOD TIGHT AGAINST THE INSIDE OF THE TRANSOM SO THAT THE DRILL BIT DOES NOT CHIP THE INSIDE OF THE TRANSOM WHEN IT GOES THROUGH.

Maintenance: Wash it after using from salt water or sandy beach. Check tire pressure before every using. Don't store the wheels under the sun or beside the heat to maximize its life time. Take the wheel arm off from the transom bracket when store your boat. Lube the spring load dolly system is necessary. Keep the lock pin on the dolly bracket.

Tire inflation: Dolly tires may not be fully inflated when shipping; please only give 15-20 PSI pressure at room temperature before using. Best to use portable type digital air pump in case tire over inflated. Tire over inflated will cause damage and the warranty is not covered. Dual wheel kit is available for this dolly for heavy loading application.



Optional - Dual Wheel Upgrade Kit



Feature:

- Upgrade the dolly system from 2 wheels to 4 wheels;
- Good for heavy boats launching from sandy beach.

Package includes:

- 2 x 12" Pneumatic tire;
- 2 x New axle for dual wheel.

**MANUFACTURED & DISTRIBUTED BY: SEAMAX MARINE AND OUTDOOR
(USA & CANADA DEALERS INQUIRY SALES@SEAMAXBOAT.COM)**

Head Office Location: 11791 Machrina Way, Richmond, BC, Canada V7A 4V3
TEL: 1877-907-7766 604-277-7766 Fax: 604-277-3360
WWW.SEAMAXBOAT.COM sales@seamaxboat.com