

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, ESPECIALLY IN THE PRESENCE OF CHILDREN, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:
PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT TO REDUCE THE RISK OF DEATH BY ELECTRIC SHOCK, FIRE, INJURY TO PERSONS AND AVOIDANCE OF BURN HAZARDS.

-KEEP AWAY FROM WATER-

DANGER

WHEN THE UNIT IS PLUGGED INTO THE WALL SOCKET, ELECTRIC PARTS ARE STILL LIVE EVEN IF THE APPLIANCES POWER BUTTON IS IN THE OFF (-) POSITION.

1. ALWAYS IMMEDIATELY TURN OFF AND UNPLUG THE UNIT AFTER EACH USE.
2. DO NOT USE WHILE BATHING OR IN THE SHOWER.
3. DO NOT STORE OR PLACE THE APPLIANCE WHERE IT CAN FALL, OR BE PULLED INTO A SINK, TUB OR TOILETTE.
4. DO NOT PLACE IN OR DROP INTO WATER OR OTHER LIQUID.
5. IF THE APPLIANCE FALLS INTO THE WATER, UNPLUG IT IMMEDIATELY. DO NOT REACH INTO THE WATER.
6. UNPLUG THE APPLIANCE BEFORE CLEANING IT.

WARNING

TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

1. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.
2. THIS APPLIANCE SHOULD NEVER BE LEFT UNATTENDED WHEN PLUGGED IN.
3. CLOSE SUPERVISION IS NECESSARY WHEN THE APPLIANCE IS USED ON, OR NEAR CHILDREN OR INDIVIDUALS WITH CERTAIN DISABILITIES OR SPECIAL NEEDS.
4. USE THIS APPLIANCE ONLY FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.
5. NEVER USE THIS APPLIANCE IF IT HAS A DAMAGED CORD OR PLUG. IF IT IS NOT WORKING PROPERLY, OR IT HAS BEEN DROPPED, DAMAGED, OR DROPPED INTO WATER, RETURN THE APPLIANCE TO A SERVICE CENTER FOR EXAMINATION AND REPAIR.
6. KEEP THE CORD AWAY FROM HEATED SURFACES.
7. DO NOT WRAP THE CORD AROUND THE APPLIANCE.
8. NEVER USE WHILE SLEEPING.
9. NEVER DROP OR INSERT ANY OBJECTS INTO ANY OF THE APPLIANCES OPENINGS.
10. DO NOT USE OUTDOORS OR OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED OR WHERE OXYGEN IS BEING ADMINISTERED.
11. DO NOT TOUCH THE AREAS AROUND THE HEATER BASE VENTILATION OR HEATING CHAMBER DURING USE AS IT MAY BECOME HOT. IF THE UNIT OVERHEATS, TURN OFF AND UNPLUG THE UNIT AND LET THE UNIT COOL COMPLETELY PRIOR TO RESUMING USAGE.
12. DO NOT USE AN EXTENSION CORD OR VOLTAGE CONVERTER WITH THIS APPLIANCE.

OPERATION WARNING

BEFORE TURNING THE UNIT ON, MAKE SURE THE UNIT IS PLACED ON A CLEAN, FLAT AND DRY SURFACE WITH NO OBSTRUCTIONS IN SIGHT.

- *DO NOT* USE THIS PRODUCT BESIDE ANY SOURCE OF WATER OR IN THE BATHROOM.
- *DO NOT* PUT HEATING BASE OR ROLLERS INTO WATER OR GET IT WET.



- *DO NOT* USE THIS APPLIANCE TO HEAT OTHER TYPES OF ROLLERS OR OBJECTS NOT INCLUDED IN THE APPLIANCE.
- *DO NOT* LET CHILDREN TOUCH OR PLAY WITH THE APPLIANCE INCLUDING THE HEATER BASE, ROLLERS OR POWER CORD.



KEEP AWAY FROM CHILDREN

- *DO NOT PUT PARTS OR OBJECTS* OTHER THAN THOSE INCLUDED IN THE PRODUCT INTO THE HEATING CHAMBER.
- *DO NOT PUT ANY TYPE OF METAL* OBJECTS INTO THE HEATING CHAMBER.
- *DO NOT HEAT MULTIPLE* ROLLERS AT ONE TIME.
- *DO NOT* REHEAT ROLLERS WHEN INDICATOR IS WHITE OR NOT COMPLETELY RED.
- *DO NOT* REHEAT ROLLER UNLESS READY DOT IS RED
- *DURING USE, DO NOT* GRASP THE MIDDLE OF THE ROLLER, AS IT MAY CAUSE BURNS.



- *DO NOT* TAKE ROLLERS OUT WHEN RED LED HEATING INDICATOR IS FLASHING. ONLY REMOVE ROLLERS FROM HEATING CHAMBER WHEN LED INDICATOR IS GREEN.
- *DO NOT SHAKE OR DROP* THIS APPLIANCE.
- *AFTER USE, REMOVE ROLLERS* FROM THE HEATING CHAMBER, ALLOW TO COOL COMPLETELY AND KEEP IN A SAFE AND DRY PLACE.
- *ALWAYS TURN OFF THE POWER* SWITCH AND UNPLUG THE POWER CORD FROM THE SOCKET AFTER EACH USE.
- *STORE THE ENTIRE UNIT* IN A PLACE CLEAN AND FREE OF DUST OR CHEMICAL MATERIALS.
- *DO NOT APPLY ANY CHEMICAL* MATERIALS (PIGMENT ETC.) TO ROLLER SURFACES.

BEAUTY TRIBE® TWO YEAR LIMITED WARRANTY TERMS AND CONDITIONS

BEAUTY TRIBE® WILL REPAIR OR REPLACE (AT OUR OPTION) BEAUTY TRIBE® PRODUCTS FREE OF CHARGE FOR TWENTY-FOUR (24) MONTHS FROM THE DATE OF PURCHASE IF THEY ARE DEFECTIVE IN WORKMANSHIP OR MATERIALS.

TO OBTAIN SERVICE UNDER THE WARRANTY PLEASE CALL 1-800-838-4151 OR EMAIL US AT INFO@BEAUTYTRIBE.COM

OR OBTAIN A RETURN AUTHORIZATION NUMBER AS WELL AS EXPLICIT INSTRUCTIONS ON HOW TO RETURN THE DEFECTIVE PRODUCT. YOU WILL BE REQUIRED TO RETURN THE DEFECTIVE PRODUCT WITH A PROOF OF PURCHASE, AND A BRIEF DESCRIPTION OF THE PRODUCTS DEFICIENCIES. PLEASE CLEARLY MARK THE RETURN AUTHORIZATION NUMBER ON THE OUTER PACKAGING WHEN SENDING US THE DEFECTIVE ITEM.

THIS WARRANTY DOES NOT COVER: (1) DAMAGE DUE TO MISUSE OR ABUSE, SUCH AS INCORRECT VOLTAGE SUPPLY, DROPPING, OR NEGLIGENCE IN SAFETY PRECAUTIONS; (2) TAMPERING, SUCH AS REPAIR OR ATTEMPTED REPAIR.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

THIS LIMITED WARRANTY IS ONLY VALID IF: (1) IF PRODUCT IS REGISTERED WITH OISHI SISTERS, LLC, WITHIN 21 DAYS OF PURCHASE; (2) IF THE PRODUCT IS PURCHASED WITH AN AUTHORIZED SELLER OF OISHI SISTERS, LLC, GOODS; (3) IF THE ORIGINAL SERIAL NUMBERS ON THE PRODUCT HAVE NOT BEEN REMOVED OR OTHERWISE TAMPERED WITH.

PLEASE GO TO WWW.BEAUTYTRIBE.COM AND REGISTER YOUR PRODUCT UNDER THE CUSTOMER CARE CENTER AND RECEIVE PRODUCT INFORMATION UPDATES AND PROMOTIONAL OFFERS. IF YOU HAVE QUESTIONS ABOUT AFTER SALES SERVICE OR RETURNS, OUR CUSTOMER SERVICE REPRESENTATIVES WILL BE HAPPY TO HELP YOU.

VISIT: WWW.BEAUTYTRIBE.COM

QUESTIONS OR COMMENTS: INFO@BEAUTYTRIBE.COM

BEAUTY TRIBE® AND OTHER ASSOCIATED TRADEMARKS ARE OWNED BY OISHI SISTERS LLC.

3 COLUMBUS CIRCLE

SUITE 1500

NEW YORK, NY 10019

120VAC, 60HZ

MANUFACTURED TO BEAUTY TRIBE® SPECIFICATIONS IN THE PEOPLE'S REPUBLIC OF CHINA.



CU 7214323401

BEAUTY TRIBE®

JETSET — HOT ROLLER THE PROFESSIONAL / THE VOLUMIZER THE SPIRAL



USER GUIDE

DEAR VALUED CUSTOMER,
THANK YOU FOR PURCHASING OUR PRODUCT,
HAPPY STYLING!

LEA, MICHIO & AKI
THE OISHI SISTERS

PRODUCT FEATURES

THIS INNOVATIVE PRODUCT USES A REVOLUTIONARY PATENT-PENDING HEATING MECHANISM WHICH TOOK YEARS TO DEVELOP IN OUR LAB. UNLIKE CONVENTIONAL HOT ROLLERS WHICH MAY BE TOO HOT TO TOUCH AND TIME CONSUMING TO USE, WE HAVE ENGINEERED SOMETHING TRULY UNIQUE. HEAT IS INDUCED, RESULTING IN FASTER HOTTER OPTIMUM TEMPERATURES TO CURL HAIR WHILE ROLLER CAPS STAY COOL TO THE TOUCH. LAB RESULTS HAVE PROVEN THESE ROLLERS ARE EASIER TO MANAGE AND CAN HELP YOU CREATE THE PERFECT CURL, TIGHT SPIRALS, BIG AND VOLUMINOUS, VINTAGE, OR EVEN RELAXED BEACH WAVES. THIS REVOLUTIONARY HOT ROLLER MAKES CREATING FLAWLESS CURLS SIMPLE!

UPON USING THIS CUTTING-EDGE PRODUCT YOU WILL DISCOVER NEW WAYS TO CREATE CURLS AND HAIR STYLES THAT BEST SUIT YOU!

PLEASE CAREFULLY READ THE INSTRUCTIONS CONTAINED IN THIS BOOKLET, AND KEEP THEM IN A SAFE PLACE FOR FUTURE USE AND STYLING REFERENCE.

- INDUCTION HEATED HEATER BASE AND HOT ROLLERS
- HEATER BASE - ON/OFF POWER SWITCH AND LED POWER INDICATOR. ROLLER READINESS LED INDICATOR AND SOUND SYSTEM
- LIGHTWEIGHT VELVETY COOL TOUCH IONIC ROLLERS
- FAST HEAT-UP - ROLLERS READY IN 8 SECONDS
- MAXIMUM SURFACE TEMPERATURE OF ROLLERS IS 266°F (130°C)
- EASY TO USE BUTTERFLY CLIPS AND WIRE CLIPS
- STORAGE POUCH
- SINGLE VOLTAGE 120 V
- 5 FOOT STOW-AWAY REMOVABLE POWER CORD
- AUTO-OFF AT 60 MINUTES
- 2 YEAR LIMITED WARRANTY

MAINTENANCE AND STORAGE INSTRUCTIONS

THIS PRODUCT IS VIRTUALLY MAINTENANCE FREE. THERE ARE NO USER SERVICEABLE PARTS AND NO MAINTENANCE LUBRICATION IS NEEDED. WHEN NEEDED PLEASE :

- *CLEAN* HEATER BASE, ROLLER CAPS AND VELVETY ROLLER SURFACE BY WIPING WITH A LINT-FREE WET COTTON CLOTH. DO NOT USE ANY MIST SPRAY OR CLEANSER.
- *DO NOT* WRAP THE CORD AROUND THE APPLIANCE. THIS WILL CAUSE THE CORD TO WEAR PREMATURELY AND BREAK, THUS VOIDING THE WARRANTY. ALWAYS USE THE CORD WRAP INCLUDED IN THE APPLIANCE DURING STORAGE AND AVOID JERKING, TWISTING OR STRAINING THE POWER CORD ESPECIALLY AT PLUG CONNECTIONS TO EXTEND THE LIFE OF THE CORD.
- *DO NOT* ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.
- *WHEN NOT IN USE UNPLUG THE UNIT*, ALLOW IT TO COOL COMPLETELY AND STORE IT OUT REACH OF CHILDREN IN A SAFE AND MOISTURE-FREE LOCATION. DO NOT STORE IN LOCATIONS EXCEEDING 140°F (60°C)

HEATER BASE (FRONT)



HEATER BASE (BACK)



ON/OFF SWITCH

POWER CORD INLET



BLUE POWER ON LED INDICATOR

START BUTTON

GREEN & RED ROLLER READY LED INDICATOR

HOT ROLLERS
DESIGNED FOR MAXIMUM INDUCTION PERFORMANCE



WHEN ROLLER IS READY FOR USE, THE READY DOT CHANGES FROM RED TO WHITE

WIRE CLIPS

DESIGNED TO SECURE HAIR TO ROLLER, CAN BE USED IN COMBINATION WITH BUTTERFLY CLIPS



BUTTERFLY CLIPS
DESIGNED SPECIFICALLY FOR INDUCTION HOT ROLLERS



ROLLER & WIRE CLIPS
DESIGNED SPECIFICALLY FOR INDUCTION HOT ROLLERS




HOW TO USE

- INPUT 120VAC ~ 60HZ
- CAUTION: DO NOT REHEAT ROLLER UNLESS READY DOT IS RED

1. PLACE HEATER BASE ON A HARD, LEVEL AND STABLE SURFACE.
2. INSERT REMOVABLE POWER CORD INTO HEATER BASES' INLET LOCATED ON THE BACK OF THE UNIT.
3. PLUG POWER CORD INTO WALL SOCKET.
4. TURN UNIT ON BY TOGGING THE SWITCH FROM THE OFF POSITION (O) TO THE ON POSITION (-), A SINGLE BEEP AND STEADY BLUE LED LIGHT WILL INDICATE THAT THE UNIT IS ON AND READY FOR USE.
5. SECTION THE DRY HAIR YOU DESIRE TO CURL.
6. INSERT ROLLER INTO THE HEATING CHAMBER WITH READY DOT INDICATOR FACING UP.
7. PRESS START BUTTON ONCE. A SINGLE BEEP AND FLASHING RED LED LIGHT WILL INDICATE THE ROLLER IS IN THE HEATING PROCESS. THIS WILL LAST FOR 8 SECONDS.
8. AFTER 8 SECONDS, YOU WILL HEAR A SINGLE BEEP SOUND AND THE LED INDICATOR WILL CHANGE TO A STEADY GREEN COLOR. ADDITIONALLY, THE READY DOT INDICATOR WILL CHANGE FROM RED TO WHITE MEANING THE ROLLER IS READY FOR USE.
9. WRAP HAIR AROUND ROLLER AND SECURE WITH A BUTTERFLY CLIP, WIRE CLIP OR BOTH.
10. REPEAT ABOVE INSTRUCTIONS 5 - 9 FOR EACH ROLLER.
11. LEAVE ROLLERS IN HAIR FOR 20 MINUTES OR UNTIL THE ROLLERS ARE COMPLETELY COOL AND THE READY DOT HAS RETURNED TO A SOLID RED. PLEASE NOTE- STRENGTH OF CURL IS DETERMINED BY HOW LONG ROLLERS REMAIN IN ONE'S HAIR AND CAN BE ADJUSTED TO SUIT YOUR HAIR TYPE AND DESIRED RESULT. WE RECOMMEND AT LEAST 10 MINUTES.
12. GENTLY UNWIND ROLLERS (NEVER PULL), STYLE AND SPRAY FOR LONG LASTING CURLS.
13. TURN UNIT OFF, REMOVE POWER CORD AND STOWAWAY AFTER USE.
14. CAUTION: DO NOT REHEAT ROLLERS UNLESS READY DOT IS RED
15. MAXIMUM SURFACE TEMPERATURE OF ROLLERS IS 266°F (130°C)
16. AS A SAFETY PRECAUTION THIS APPLIANCE HAS BEEN EQUIPPED WITH:
 - A) AN OVER-HEAT PROTECTION MECHANISM - IF THE HEATER BASE HAS OVER-HEATED THE RED AND GREEN LED LIGHT WILL NOT LIGHT AND WILL CONTINUOUSLY BEEP, INDICATING THE OVER-HEAT PROTECTION MECHANISM HAS ENGAGED. TO RESUME USING THIS APPLIANCE, REMOVE ROLLER FROM HEATING CHAMBER, TURN OFF AND UNPLUG THE DEVICE WAIT 30 MINUTES UNTIL THE HEATER BASE HAS COOLED DOWN BEFORE RESUMING USE.
 - B) AUTO-OFF AT 60 MINUTES - IF THE UNIT HAS NOT BEEN IN USE FOR OVER 60 MINUTES THE UNITS AUTO-OFF MECHANISM WILL ENGAGE. TO RESUME USE, TOGGLE THE SWITCH FROM THE ON POSITION (-) TO THE OFF POSITION (O), THEN BACK TO THE ON POSITION (-)

STYLING TIPS

1. BE SURE TO LET EACH CURL COMPLETELY COOL PRIOR TO FINGER COMBING.
2. STYLE AND SPRAY FOR LONG LASTING CURLS.
3. FOR TIGHTER BOUNCIER CURLS, WIND SMALLER SECTIONS OF HAIR.
4. FOR LOOSE, FREE-FLOWING CURLS, WIND LARGER SECTIONS OF HAIR.
5. FOR SOFTER CURLS OR FOR FINE HAIR, THE ROLLERS CAN BE REMOVED AFTER 10 MINUTES.

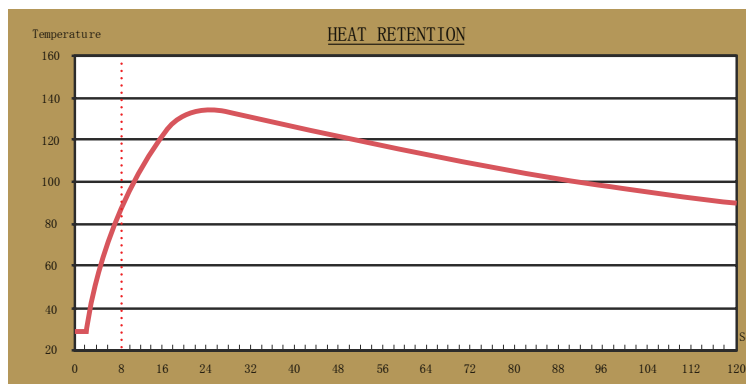

USER TIP

* THIS GRAPH SHOWS THE TEMPERATURE OF A ROLLER OVER TIME. TO GET THE BEST RESULTS USING THIS REVOLUTIONARY SYSTEM, MAKE SURE THE ROLLER IS SECURELY IN HAIR AT EIGHT SECONDS. THIS WILL ENSURE THE HAIR IS HEATED AT OPTIMUM TEMPERATURE.