


Libre buds



User guide

Bluephonic Libre is a V 4.1 Bluetooth Stereo Sport Earbuds suppoting TWS True Wireless Stero Technology, Voice Prompt in English and other features specified in this QRG.

OVERVIEW of Libre

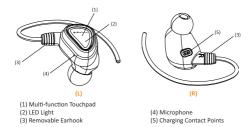

INTRODUCTION

Thank you for purchasing Bluephonic Libre Bluetooth True Wireless Stereo Earbuds. amanual will help you to accurately operate Libre, but you should familiarize yourself with the Bluetooth function of your mobile phone or other devices before using Libre.a

HOW TO CHARGE

CHARGING THE BATTERY

Libre have charging contact points on the earbuds bodies and the Charging Case for storage and charging.

- Findings.
 1. Place the Libre into the charging slots of the Charging Case individually, the earbuds will be charged automatically.
- Double-click 'ON/OFF' button on the Charging Case to stop charging the Libre.
- The LED light of the Charging Case will be in green and the earbuds will be in red when charging.
- When the battery is fully charged, the red LED lights of two earbuds turn off, the green LED light of the Charging Case will be off at the same time.

WHEN THE BATTERY IS LOW

You will hear the voice prompt "Battery Low". At this point please charge the Libre.

IMPORTANT

- For the first use, please make sure to fully charge the Libre beforehand.
- You must charge Libre if they have not been used for more than 12 months.
- You must use the authorized charger to charge up Libre



(1)ON/OFF for charging (2)Earbuds Charging Slot (3)Input for Charging the Charging Case (4)LED Indicator of Battery Capacity

CHARGING THE CHARGING CASE

The Charging Case has a built-in 450mAh battery. It provides approximately 3 additional charges for 2 earbuds. The 4 green LED indicators show remaining battery capacity. Please charge the Charging Case when it is running out of power.

- Plug one end of the USB charging cable into the charging port of the Charging Case, and put the other end into your computer or AC charger with USB port.
- 2. When the Charging Case is fully charged, all 4 LED indicators will show in solid green.
- It takes around 1-2 hours to fully charge the charging case.

LED Indicator of Battery Capacity (During charging the Earbuds & Being Charged)


Battery Capacity	LED 1	LED 2	LED 3	LED 4
0-25%	Flashing	Off	Off	Off
25%-50%	On	Flashing	Off	Off
50%-75%	On	On	Flashing	Off
75%-99%	On	On	On	Flashing
99%-100%	On	On	On	On

HOW TO PAIR

STEP 1 Turn on Libre

1 Pairing mode

 Tap and hold the left earbud touchpad for about 8 seconds until led light turn on in from blinking red to solid green ● → ● Then Tap and hold the right earbud touchpad for about 8 seconds until led light turn on in from blinking red to solid green



Two earbuds connect to each other automatically.




The LED light of main earbud (left channel) flashes in red & green, it goes into pairing mode with your mobile phone automatically.

Earbuds wont pair?

Incase the left earbud and right earbud didn't pair with each other, turn off the left earbud by tapping the touchpad for 6 seconds, make sure both earbuds are turned off (Right earbuds will turn off automatically) and try to pair them again from step 1 while holding the earbuds close to each other

Search for 'Libre' through your Bluetooth device

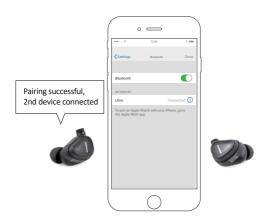

Select 'Libre' on your mobile phone. Connection completed.

TURNING THE HEADPHONES ON/OFF

To turn on Libre:

Tap and hold the Touchpad for about 3.5 seconds to turn on Libre

To turn off Libre:

Tap and hold the Touchpad for about 6 seconds to turn off Libre.

NOTE:

- 1) When the 2 earbuds enter in-sync mode, turning off one earbud will cause the other to switch offautomatically along with the voice prompt 'Power Off'
- 2) If one of the earbuds turns off when running out of power, the another earbud will not be turned off automatically.
- The right channel couldn't work if main earbud (left channel) was turned off by running out of power. However the main earbud (left channel) can still work alone if the battery has run down of right channel

USE Libre AS A PAIR

STEP 1. In-sync wireless stereo connection with mobile phone.



- Tap and hold the Touchpad of both earbuds for 6 seconds. The LED lights will be in solid green, now both earbuds are switched on and will connect automatically.
- 2) The main earbud (left channel) will flash red and green and is now in pairing mode for a mobile phone.

STEP 2. Connecting with Mobile Phone or Other Bluetooth Devices.



- Turn on the Bluetooth function of your mobile phone or other Bluetooth devices, start searching for the Bluetooth devices on your mobile phone. Select 'Libre' to complete the connection.
- If your phone asks for passkey or PIN-code, confirm with '0000'(4-zero).
- When a mobile phone is connected to the left Channel of Libre, the Right Channel will then connect automatically.

HOW TO WEAR



Do not touch the touchpad while holding the earbuds.



Insert the Eartips into the ear canals and adjust the earbuds for an airtight seal.



Flex-wire earhooks which can be shaped for best comfort fit.

HOW TO USE

MULTIFUNCTION TOUCHPAD

Answering/Ending/Rejecting/Redialing/Transferring calls; Playing/Pausing the Music; Factory Reset; Pairing.

MAKING CALLS

Once Libre are successfully connected to your mobile phone, you can use them to make and receive calls. Please consult your mobile phone's manual for more information.

1. Dial By The Phone Keys

Enter and dial the number on your mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to your Libre automatically.

2. Redial

Double tap the Touchpad to redial the last number you called.

NOTE:

During the phone mode & use the Libre in pair, only the left channel earbud will be activated for handsfree. The right channel only supports music function.

ANSWERING/ENDING/REJECTING CALLS

When Libre are turned on, and there is an incoming call, you will hear a musical tone.

- Single tap the Trouchpad to answer the call.
- Single tap the Touchpad to end the call.
- Tap and hold the Touchpad for 3 seconds to reject the call.

TRANSFERRING CALLS

During both incoming and outgoing calls, you can double tap the Touchpad to transfer to call to the mobile phone. If you want to transfer the call back to Libre, double tap the Touchpad again. More procedure may be involved for some mobile phones.

ADJUSTING THE VOLUME

To make the Libre small and lightweight, we removed the colume control from the earbuds. Increase or decrease volume by using the colume buttons on your mobile phone or other Bluetooth device.

PUT THE CALL ON HOLD

Tap and hold the Touchpad for 2 seconds to put the current call on hold and accept the call waiting. Single tap the Touchpad to resume to the first call.

PLAYING/PAUSING MUSIC

Playing Music: Single tap the Touchpad. Plausing Music: Single tap the Touchpad.

NOTE:

There are no tracking buttons on the earbuds, please track through songs using the controls on your mobile phone or other Bluetooth device.

VOICE PROMPT

Libre supports voice prompt in English only.

CONNECTING TO A PC

You can connect Libre to a Bluetooth enabled PC.

FACTORY RESET

To restore Libreto factory settings, turn off both earbuds, tap and hold the Touchpad of each earbud seperately for 10 seconds. When the LED lights flash red and green twice the factory reset is successful

Tips to Get the Optimal Signal Performance

 Put your phone in the left pocket is BETTER.



2. Face the phone screen to your body is BETTER.



3. Wear the armband pouch on your left arm is BETTER.



FACTORY RESET GUIDE



Turn off Libre. Tap and hold the touchpad of the 2 earbuds separately for about 10 seconds. When the LED light flashes red and green twice the factory reset is successful.

After a factory reset, the LED lights of two earbuds flash in red, you will need to pair both earbuds again. Follow the instructions on the back of this sheet to reconnect.

Warning & safety

WARNING

(Prior to using this product)

- 1. Before putting on the earbuds, turn the volume to its lowest level.
- 2. Put the earbuds on, and then slowly adjust the volume to a comfortable level.

(During the use of this product)

- Keep the volume at the lowest level as possible.
- If it is necessary to increase the volume, adjust the volume control slowly.
- 3. If you experience discomfort or ringing in your ears, immediately discontinue using the earbuds. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

SAFETY INFORMATION!

- If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
- This product contains small parts that may be hazardous to children. Keep out of the reach of children.The bags themselves or the many small parts they contain may cause choking if ingested.
- Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause short circuit, which led to the fire or get an electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealer or service center may open the product.
- If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact your dealer.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue to use.

REMEMBER:

Drive safely, to ensure safe driving, avoid distractions and follow local laws.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:ALE12014

Warranty:

12 months for parts and labor

For more info and support visit: www.Bluephonic.com Incase you bought this item from Amazon.com please contact the seller from your amazon account