## Q66 CUSTOM KIT

## Keys Combinations and Indicator Description

Function	Combination	Operation	Description
Bluetooth Device #1 Connection	FN+Z	Long Press for 3 Seconds	Enter pairing mode, the keyboard will be visible for pairing for 120 seconds. The keyboard will be in Bluetooth input status when paired successfully. The keyboard will exit the current session if paired unsuccessfully.
			The Caps will flash in green during the pairing mode, and will be solid for 3 seconds then goes out when paired successfully.
		Short Press	Connect to Bluetooth Device #1
			When searching for device with Bluetooth disconnected, the Caps will blink in green, and will be solid for 3 seconds then goes out when connected successfully.
Bluetooth Device #2 Connection	FN+X	Long Press for 3 Seconds	Enter pairing mode, the keyboard will be visible for pairing for 120 seconds. The keyboard will be in Bluetooth input status when paired successfully. The keyboard will exit the current session if paired unsuccessfully.
			The Caps will flash in blue during the pairing mode, and will be solid for 3 seconds then goes out when paired successfully.
		Short Press	Connect to Bluetooth Device #2
			When searching for device with Bluetooth disconnected, the Caps will blink in blue, and will be solid for 3 seconds then goes out when connected successfully.

Switch to USB Connection	FN+Space	Short Press	Switch to wired mode (unavailble when USB is not connected)
Enable Deep Sleep	FN+CAPS	Long Press for 3 Seconds	The keyboard will be in Deep Sleep when in Bluetooth mode with no USB connected. Long Press FN+Caps for 3 Seconds or plug in the USB cable to wake the keyboard. This function will not be available when in wired mode. Caps will blink in blue once (~0.3s) when put in sleep. Caps will blink in red once (~0.3s) when woke up. (Only in Bluetooth mode) Note: Press original FN+Caps if remapped.
Backlight Test	FN+/?	Long Press for 3 Seconds	All the indicators (including Caps/Scroll/Num etc.) will be on and looped when this combination is enabled.
Keys Combinations	Fn+Esc	Short Press	`
	Shift+Esc	Short Press	~
	Fn+1	Short Press	F1
	Fn+2	Short Press	F2
	Fn+3	Short Press	F3
	Fn+4	Short Press	F4
	Fn+5	Short Press	F5
	Fn+6	Short Press	F6
	Fn+7	Short Press	F7
	Fn+8	Short Press	F8

I			
	Fn+9	Short Press	F9
	Fn+0	Short Press	F10
	Fn+	Short Press	F11
	Fn+=+	Short Press	F12
Switch Charging Indicator	Space+M	Hold and Plug in the USB Cable	Switch between indicator on (default) and off when being charged.
Reset to Default	Space+Back space	Hold and Plug in the USB Cable	Reset the keyboard to default.
Reset & Restart	FN+SHIFT+R	Short Press	Manually reset the keyboard and restart.
Switch between 6-Key & N- Key Rollover	Space+N	Hold and Plug in the USB Cable	6-Key Rollover by default. To enable N-Key Rollover, hold and plug in the USB cable to your computer. Repeat to switch to 6-Key Rollover again.
Swap LCtrl and Caps	Space+L Ctrl	Hold and Plug in the USB Cable	Swap LCtrl and Caps.
Control	Space+Caps	Hold and Plug in the USB Cable	Change Caps to Control. Repeat to change to Caps again.
Disable LGui	Space+LGui	Hold and Plug in the USB Cable	Enable/Disable LGui function.
Swap Grave and Escape (Mac)	Space+Grav e	Hold and Plug in the USB Cable	Swap Grave and Escape (Mac).
Swap Backspace and \	Space+\	Hold and Plug in the USB Cable	Swap Backspace and \.

Indicator	
Caps	The red indicator will go out when the keyboard in sleep mode, and will be on when woke up.
Low Battery	The indicator will blink in red when the battery is low.
IC.narding	The indicator will blink in greed when the keyboard is charging. No status when it's fully charged.

**Electrical Specifications:** 

Backlight On Working Current: ≤500mA

Backlight Off Working Current: ≤50mA

Sleep Mode: ≤1mA

Bluetooth Mode Working Current: ≤20mA

**USB Working Voltage:** 5±0.5V

Battery Specifications: Li-ion battery, 3.7V Typical, 4.2V Max

Battery Charging Current: No more than 500mA