 


sideclick™

Streamline your Streaming Experience

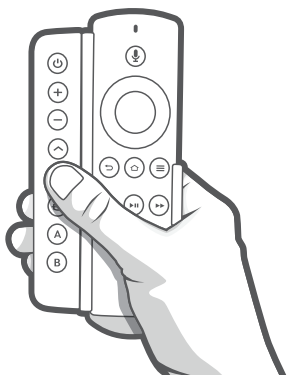

Universal Remote Attachment for

Amazon Fire TV®

Amazon Fire TV | Amazon Fire TV Stick
Alexa Voice Remote | Echo Voice Remote

What's Included

- Sideclick Universal Learning Remote
- 2 AAA Batteries
- 2 Adapter Clips

Simple Setup

- 1 - Insert the included 2 AAA Batteries into Sideclick Remote.
- 2 - Select and attach the Adapter Clip that corresponds to your Amazon Fire TV remote. (directions on reverse)
- 3 - Snap your Amazon Fire TV remote into Adapter Clip.
- 4 - Program Sideclick and you're ready to go.

Tips

Please visit our website, www.sideclickremotes.com for additional information including:

- Assembly videos
- Programming videos
- Troubleshooting
- Information on selecting the right Adapter Clip for your streaming remote
- Additional Sideclick products and accessories
- Registering your device


All Rights Reserved. Sideclick Remotes operates under True Bloom LLC and is not affiliated with Amazon.com Inc.

Getting Started

Select Your Clip

Select Adapter Clip based on your Amazon Fire TV Remote

Amazon Remote Style	Clip ID
Voice Remote	FB
Non-Voice Remote	FA

 


VOICE
REMOTE



NON-VOICE
REMOTE

Attach Your Clip

 - 1 - Line up tabs on Sideclick remote with keyholes in clip.
- 2 - Press clip against Sideclick remote and slide clip up until it locks in place.

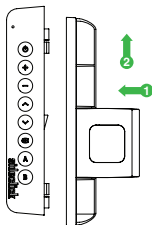

Install Your Remote



Program Your Sideclick

- 1 - On Sideclick, hold down the **⏻** + **B** buttons simultaneously until the LED lights solid.
- 2 - Position your Sideclick remote and the device remote you are learning from on a table, head to head, approximately 1 inch apart.
- 3 - Press and release the Sideclick button you wish to program. The LED will start blinking.
- 4 - Press and release the button you want it to learn from on your device remote.
 - The LED will blink 3 times indicating a successful learn, then will return to solid indicating you are ready to program other buttons.
 - If the LED does not return to solid, a problem in programming has occurred. Exit programming mode via step 6 and try again.
- 5 - While LED is on solid, repeat steps 3 & 4 for each button you would like to program.
- 6 - To exit programming mode, press the **⏻** + **B** simultaneously and the LED will turn off. You can also wait approximately 10 seconds and it will exit programming mode automatically.
- 7 - Your Sideclick is now ready to use.

Removing Your Clip

- 1 - Gently pull out on locking tab with index finger.
- 2 - While pulling out on the locking tab, slide clip down and then away from remote.

