

Universal Remote Attachment for
Amazon Fire TV®

Fire TV | Fire TV Stick | Alexa Voice Remote | Echo Voice Remote

What's Included

- Sideclick Universal Learning Remote
- 2 AAA Batteries
- 2 Adapter Clips

Tips

Please visit our website, www.sideclickremotes.com for additional information including:

- Assembly videos
- Programming videos
- Troubleshooting
- Information on selecting the right Adapter Clip for your streaming remote
- Additional Sideclick products and accessories
- Registering your device

All Rights Reserved
Sideclick Remotes™ operates under True Bloom LLC and is not affiliated with Amazon.com Inc.

Amazon, Echo, Alexa, Fire and all related logos are trademarks of Amazon.com Inc. or its affiliates



Simple Setup

- 1 Insert the included 2 AAA Batteries into your Sideclick Remote.
- 2 Select and attach the Adapter Clip that corresponds to your Fire TV® remote
- 3 Snap your Fire TV® remote into the Adapter Clip.
- 4 Program Sideclick and you're ready to go.

(Detailed instructions on reverse)



Easy to Use



 
Fast Setup



Long Battery Life



Control Multiple Devices



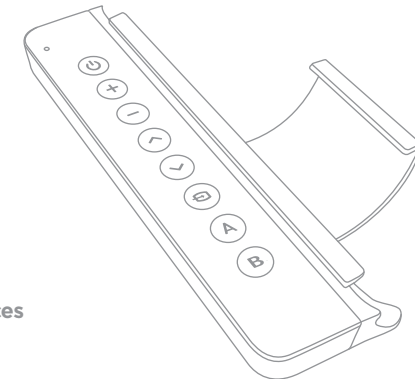


Getting Started

01 Select Your Clip

Select an Adapter Clip based on the design of your Amazon Fire TV® remote


Remote Design	Clip ID
Voice Remote	FB
Non-Voice Remote	FA

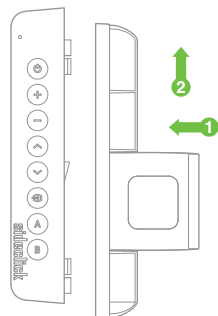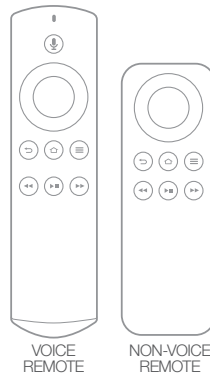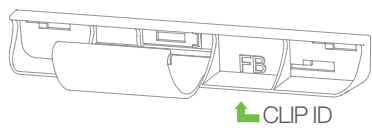   

02 Attach Your Clip

- 1 Line up tabs on Sideclick remote with keyholes in clip.
- 2 Press clip against Sideclick remote and slide clip up until it locks in place.

 03 Install Your Remote

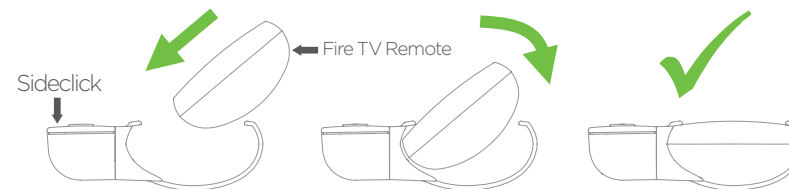


04 Program Your Sideclick

- 1 On Sideclick, hold down the **⏻** + **B** buttons simultaneously until the LED lights solid.
- 2 Position your Sideclick remote and the device remote you are learning from on a table, head to head, approximately 1 inch apart.
- 3 Press and release the Sideclick button you wish to program. The LED will start blinking.
- 4 Press and hold the button you want it to learn from on your device remote.
 - The LED will blink 3 times indicating a successful learn, then will return to solid indicating you are ready to program other buttons.
 - If the LED does not return to solid, a problem in programming has occurred. Exit programming mode via step 6 and try again.

04 Program Your Sideclick (Continued)

- 5 While LED is on solid, repeat steps 3 & 4 for each button you would like to program.
- 6 To exit programming mode, press the **⏻** + **B** simultaneously and the LED will turn off. You can also wait approximately 10 seconds and it will exit programming mode automatically.
- 7 Your Sideclick is now ready to use.

 05 Removing Your Clip

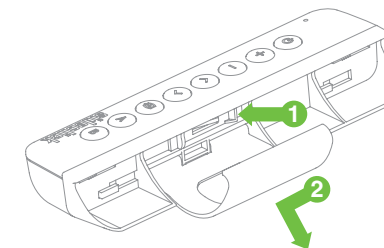

- 1 Gently pull out on locking tab with index finger.
- 2 While pulling out on the locking tab, slide clip down and then away from remote.