

Universal Remote Attachment for
Apple TV® streaming devices:

2nd - 3rd Generation | 4th - 5th Generation (4K)

What's Included

- Sideclick Universal Learning Remote
- 2 AAA Batteries
- 2 Adapter Clips

Tips

Please visit our website, www.sideclickremotes.com for additional information including:

- Assembly videos
- Programming videos
- Troubleshooting
- Information on selecting the right Adapter Clip for your streaming remote
- Additional Sideclick products and accessories
- Registering your device

All Rights Reserved.
Sideclick Remotes™ operates under True Bloom LLC and is not affiliated with Apple Inc.

Apple TV is a trademark of Apple Inc., registered in the United States and other countries



Simple Setup

- 1 Insert the included 2 AAA Batteries into your Sideclick Remote.
- 2 Select and attach the Adapter Clip that corresponds to your Apple TV® remote
- 3 Slide your Apple TV® remote into the Adapter Clip.
- 4 Program Sideclick and you're ready to go.

(Detailed instructions on reverse)



Easy to Use



Fast Setup



Long Battery Life




Control Multiple Devices

Getting Started


01 Select and Attach Your Clip

- 1 Your Sideclick is packaged with the gen 4/5 clip already attached. If you have the Silver gen 2/3 remote, remove the clip per section 5 and move on with the next step.
- 2 Line up tabs on Sideclick remote with keyholes on the side of the clip.
- 3 Press clip against Sideclick remote and slide clip up until it locks in place.

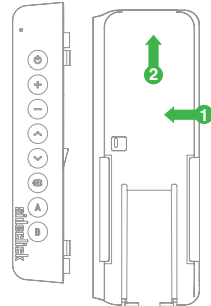

03 Install Your Remote


- 1 Slide your streaming device remote into the clip from the bottom until the lower locking tab secures it in place.

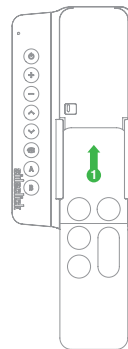

04 Program Your Sideclick

- 1 On Sideclick, hold down the **(U)** + **(B)** buttons simultaneously until the LED lights solid.
- 2 Position your Sideclick remote and the device remote you are learning from on a table, head to head, approximately 1 inch apart.
- 3 Press and release the Sideclick button you wish to program. The LED will start blinking.
- 4 Press and hold the button you want it to learn from on your device remote.
 - The LED will blink 3 times indicating a successful learn, then will return to solid indicating you are ready to program other buttons.
 - If the LED does not return to solid, a problem in programming has occurred. Exit programming mode via step 6 and try again.
- 5 While LED is on solid, repeat steps 3 & 4 for each button you would like to program.
- 6 To exit programming mode, press the **(U)** + **(B)** simultaneously and the LED will turn off. You can also wait approximately 10 seconds and it will exit programming mode automatically.
- 7 Your Sideclick is now ready to use.

05 Removing Your Clip

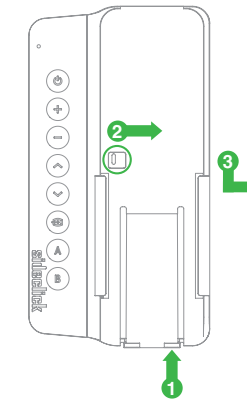

- 1 Remove streaming device remote by pushing down on the remote locking tab at the base of the clip and sliding remote downward out of clip.
- 2 Gently slide release tab to the right as indicated in picture
- 3 While maintaining pressure on the tab, slide clip down and then away from remote.