 


sideclick™

Streamline your Streaming Experience

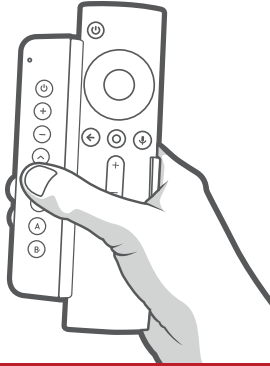

Universal Remote Attachment for

Mi Box®

What's Included

- Sideclick Universal Learning Remote
- 2 AAA Batteries
- 1 Adapter Clip

Simple Setup

- 1 - Insert the included 2 AAA Batteries into Sideclick Remote.
- 2 - Attach the Adapter Clip to the Sideclick Remote. (directions on reverse)
- 3 - Snap your Mi Box® remote into Adapter Clip.
- 4 - Program Sideclick and you're ready to go.

Tips

Please visit our website, www.sideclickremotes.com for additional information including:

 
- Assembly videos
- Programming videos
- Troubleshooting
- Information on selecting the right Adapter Clip for your streaming remote
- Additional Sideclick products and accessories
- Registering your device

All Rights Reserved. Sideclick Remotes operates under True Bloom LLC and is not affiliated with Xiaomi Inc.


Getting Started

Attach Your Clip

- 1 - Line up tabs on Sideclick remote with keyholes in clip.
- 2 - Press clip against Sideclick remote and slide clip up until it locks in place.

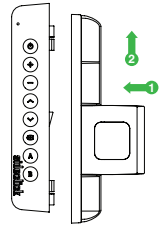


Install Your Remote

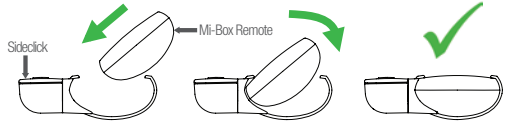 

Program Your Sideclick

 - 1 - On Sideclick, hold down the **⏻** + **B** buttons simultaneously until the LED lights solid.
- 2 - Position your Sideclick remote and the device remote you are learning from on a table, head to head, approximately 1 inch apart.
- 3 - Press and release the Sideclick button you wish to program. The LED will start blinking.
- 4 - Press and release the button you want it to learn from on your device remote.
-The LED will blink 3 times indicating a successful learn, then will return to solid indicating you are ready to program other buttons.
-If the LED does not return to solid, a problem in programming has occurred. Exit programming mode via step 6 and try again.
- 5 - While LED is on solid, repeat steps 3 & 4 for each button you would like to program.
- 6 - To exit programming mode, press the **⏻** + **B** simultaneously and the LED will turn off. You can also wait approximately 10 seconds and it will exit programming mode automatically.
- 7 - Your Sideclick is now ready to use.

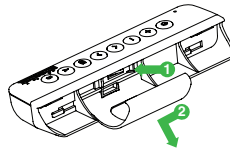

Removing Your Clip

- 1 - Gently pull out on locking tab with index finger.
- 2 - While pulling out on the locking tab, slide clip down and then away from remote.