



**UBER APPLIANCE**

DELUXE RAPID

# EGG COOKER SYSTEM

Delicious  
Breakfast

In The Matter  
of Minutes



UB-EC-WHITE

## USER MANUAL

# CONGRATULATIONS AND WELCOME TO UBER APPLIANCE!

---

At Uber Appliance, we strive to provide the most modern-styled home kitchen appliances on the market. Our ever-growing catalog of sleek style and innovation is designed for the modernists, idealists, and perfectionists. It is our goal to ensure a great experience to all our valued customers by bringing only the highest quality appliances into your kitchen.

The Uber Appliance brand was built on the ideologies of consumer experience, innovation and most importantly, product quality. We set out on a mission to manufacture and offer modern kitchen tools that are not only built with the latest and greatest technology, but that are built to last at an affordable price. Consumers around the globe can finally enjoy picturesque, chef-grade meals without the chef-grade price.

This User Guide is intended for you to get to know your newly acquired Uber Appliance product from A to Z. Before you start whipping up magic in the kitchen, we highly recommend that you fully understand how to properly use your new Uber Appliance to decrease the risk of damage, misuse, and most importantly, injury.

For any questions on inquiries, please feel free to reach out to us via email at:

[Contact@KNGinternational.com](mailto:Contact@KNGinternational.com)

**And once again, Welcome to the Uber Family!**



For your safety, read the  
user guide before operating this appliance.

TABLE OF CONTENTS

RAPID EGG COOKER

Important Safeguards..... 4-7

Parts & Features..... 8-9

Using Your Rapid Egg Cooker..... 10-15

Cleaning & Maintenance ..... 16

Troubleshooting..... 17

Recipes..... 18-29

Customer Support ..... 30

Warranty..... 31

# IMPORTANT SAFEGUARDS

## PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL

When using electrical appliances, basic safety precautions should be followed, including:

- Please read and save instruction and care manual.
- Read all instructions carefully.
- Remove all packaging and labels from appliance prior to use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PST Monday-Friday or by email at [support@storebound.com](mailto:support@storebound.com).
- Only use approved ingredients with this appliance. Other ingredients may damage the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.

# IMPORTANT SAFEGUARDS

- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the power cord touch hot surfaces or hang over the edges of tables or counters.
- Unplug the appliance from power outlet and allow to cool when not in use, during assembly/disassembly, and before cleaning the Rapid Egg Cooker.
- When cleaning the Body of the appliance, do not submerge in water or other liquids. The Rapid Egg Cooker is NOT dishwasher safe.
- Do not place this appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not put your hands or other foreign objects into the Rapid Egg Cooker while it is operating. If food spills onto the Heating Plate, make sure the Rapid Egg Cooker is turned off and cooled before cleaning.
- DO NOT place the Lid in the locked position while using the Rapid Egg Cooker as this will increase the risk of injury when removing the Lid once eggs have cooked.
- **WARNING!** Hot steam! Never place your hands or arms over the Steam Hole while the appliance is in use.
- Keep hands and utensils away from Heating Plate while cooking eggs to reduce the risk of injury or damage to the Rapid Egg Cooker.
- Internal base and contents (water and eggs) of Rapid Egg Cooker are hot when in use. Let cool before handling and/or cleaning.
- Do not touch the Heating Plate when the Rapid Egg Cooker is hot. Use the handles.
- If using a longer power-supply cord or extension cord, make sure that the electrical rating of the wire is compatible with the appliance. If the appliance is grounded, the extension cord should be a grounding-type 3-wire cord.

# IMPORTANT SAFEGUARDS

- Use extreme caution when handling the Measuring Cup as it contains a sharp Pin on the bottom of the cup which may cause injury.
- **WARNING:** The Lid becomes hot. When eggs are done, carefully remove the Lid by the Cover Handle. Allow the Lid to cool completely before touching or cleaning.
- NEVER place the Poaching Tray or Omelette Bowl directly on the Heating Plate. Always place on top of the Boiling Tray.
- Make sure the Rapid Egg Cooker is off before removing the eggs.
- A short power cord should be used to reduce the risk of tripping and entanglement.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PLEASE READ AND SAVE THIS  
INSTRUCTION AND CARE MANUAL

# UBER APPLIANCE



UB-EC-WHITE

# PARTS AND FEATURES



# USING YOUR RAPID EGG COOKER

## OPERATION

1. Place the machine on a flat surface.
2. Reference to the scale of measuring cup, add the proper water to the base.
3. Piercing the top of the egg can avoid them to crack. Use the sharp at the bottom of the measuring cup, push the small hole slightly on the top of the egg.
4. Put it evenly on the egg rack. Cover it with the lid.
5. Insert the plug in corresponding voltage. Press the switch button, and the product starts to work.
6. Pull the plug when the work is completed.

## FOR SOFT, MEDIUM, AND HARD-BOILED EGGS:

The times listed below are guidelines so that you will know how long it will take to cook your eggs. The thermostat in the Rapid Egg Cooker will shut off automatically when the eggs are done - no additional timer is necessary. The following time guidelines are for medium to large eggs. Extra large or jumbo eggs may require additional time/water in the appliance to achieve the desired results.

If you like medium eggs firm: let the eggs sit covered in the Rapid Egg Cooker for a few extra minutes before removing them.

If you like completely hard-boiled eggs: let the eggs sit for an extra minute in the Rapid Egg Cooker after the buzzer sounds.

STYLE	# OF EGGS	TIME
Soft-Boiled	1-3	7
	4-6	10
Medium Egg	1-3	9
	4-6	12
Hard-Boiled	1-3	12
	4-6	16

# USING YOUR RAPID EGG COOKER

## BOILING EGGS

**WARNING:** Do not lock the Lid when using your Rapid Egg Cooker as this may cause injury when removing the Lid once the buzzer sounds.



1. Make sure the Rapid Egg Cooker is unplugged before starting. Pierce the larger end of each egg with the attached Pin at the bottom of the Measuring Cup.



2. Use the Measuring Cup to pour the appropriate corresponding amount of cold water into the Heating Plate.



3. Attach the Boiling Tray Handle to the Boiling Tray, and place the Boiling Tray on the Heating Plate. Place an egg in each designated spot in the Boiling Tray. Make sure that the holes in the larger end of the eggs are pointed upwards.

# USING YOUR RAPID EGG COOKER

**CHEF TIP:** Soak the eggs in ice water or run them under cold water immediately after removing them from the Rapid Egg Cooker to stop the cooking process, and to make peeling easier.



4. Cover with the Lid and plug in the Rapid Egg Cooker. Press the Power Button to start cooking. The Indicator Light will turn on.



5. When the eggs are finished cooking, a buzzer will sound. The actual cooking time will depend on the number of eggs and your desired style (hard, medium, or soft).



6. Press the Power Button to silence the buzzer and remove your eggs. Be careful when handling eggs. They will be hot!

# CLEANING AND MAINTENANCE

MAINTENANCE

UB-EC-WHITE