Application Way

Lets assume the desired humidity range is 68-70% RH.

How to set the humidity on the unit?


- 1. Long press the up key , when humidity number flashes, press the up key or down keys, and set the start humidity at 68%.
- 2.Long press the down key $\boxed{\mathbf{v}}$, when humidity number flashes, press the up key or down keys, and set the stop humidity at 70%.

Fault Code Description

- * How to restore factory settings? Connect the power supply, press the switch key for 5 seconds, and wait until the display shows 888. It will jump to the detection of humidity, that is, the factory settings restore.
- * The control panel shows E1 When the screen shows E1, it means the humidity sensor is loose or broken. Tight it or changing a good one is ok.
- * The control panel shows E2 When setting the desired humidity, if you set the lower level a higher number than the higher level the control panel will show E2. To fix this, please reset the humidity range.
- * The display shows the wrong real-time humidity Suppose the panel display shows the wrong real-time humidity. Long press the setting key(a small hand button), and it shows (06ñ). Second press it, and it shows (F0ñ). Thirdly press it, and it shows "0". Now, you can do the humidity adjustment, by pressing the up or down key, $-9 \sim 9\%$ RH to reset the exact humidity data.

Humidifier


EB-100-A

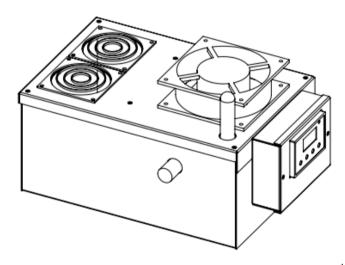

INSTRUCTIONS

Humidifier Introduction

The humidifier is easy to operate, noiseless, and has high atomization efficiency. The box body is made of 304 stainless steel. It is small in size, beautiful in appearance, and easy to check. Humidification equipment has a fan and absorbent cloth inside. The humidifier is equipped with a standard water inlet and has a float to check the water level.

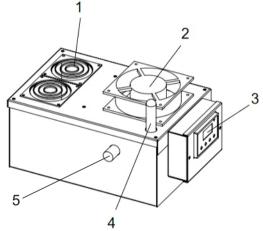

1. Water inlet mesh enclosure The place can add the water.

2.Fan Blowing water mist, humidifying effect.

3. Humidity control panel and the humidity sensor Humidity sensor can put on the humidifier or theplace want to test the RH.

4.Floating ball To check the water level.

5. Water inlet Add water place, connect water pipe is 1/2"

Humidifier parameter

Name:	Humidifier
Model:	EB-100-A
Power supply:	110VAC-1 Phase-60Hz
Power Consumption:	17W
Net Weight:	11.02 lbs
Grow Weight:	12.79 lbs
Product Dimensions:	13.87''*8.99''*8''
Carton Dimensions:	16.54''*11.42''*9.84''
Working Temperature:	33-104°F
Feed Water Temperature:	33-95°F
Water Supply Quality:	Distilled Water

Operation

1. Connect the power supply.

The screen shows status "OFF", press the switch key, then the screen shows the current humidity inside the room.

Press the up key▲ or down key▼ to see the set humidity range. The initial target humidity range is 67%-71%RH.

2. Set the start and the stop humidity

Press 3 seconds to turn on the up key or down key, then the screen will start flashing. Press the up key or down key again, to set the start humidity. When the flashing stops and the unit exits the edit mode.

3. Connect the water pipe

Connect the 1/2" water pipe to the water inlet, and wait for the water to fill to the marked level. When getting enough water, the float will stop the water flow, and maintain the best water level.

Also, you can add water by hand. The water level will show on the floating ball. The best water level is at "5.5-8". When it is below "5.5", please add water; and when the level is above "8", it will overflow the water. Please take attention to it.