Application Way

Lets assume the desired humidity range is 68-70% RH.

How to set the humidity on the unit?

1. Long press the up key (A), when humidity number flashes, press the up key or down keys, and set the start humidity at 68%.

2.Long press the down key **▼**, when humidity number flashes, press the up key or down keys, and set the stop humidity at 70%.

Fault Code Description

* How to restore factory settings?

Connect the power supply, press the switch key for 5 seconds, and wait until the display shows 888. It will jump to the detection of humidity, that is, the factory settings restore.

* The control panel shows E1

When the screen shows E1, it means the humidity sensor is loose or broken. Tight it or changing a good one is ok.

* The control panel shows E2


When setting the desired humidity, if you set the lower level a higher number than the higher level the control panel will show E2. To fix this, please reset the humidity range.

* The display shows the wrong real-time humidity Suppose the panel display shows the wrong real-time humidity. Long press the setting key(a small hand button), and it shows(06ñ). Second press it, and it shows (F0ñ). Thirdly press it, and it shows "0" . Now, you can do the humidity adjustment, by pressing the up or down key, -9~9%RH to reset the exact humidity data.

Humidifier **EB-100 INSTRUCTIONS**

Humidifier Introduction

The humidifier is easy to operate, noiseless, and has high atomization efficiency. The box body is made of 304 stainless steel. It is small in size, beautiful in appearance, and easy to check. Humidification equipment has a fan and absorbent cloth inside. The humidifier is equipped with a standard water inlet and has a float to check the water level.

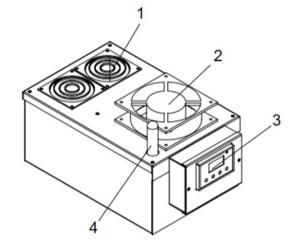

1.Water inlet mesh enclosure The place can add the water.

2.Fan Blowing water mist, humidifying effect.

3.Humidity control panel and the humidity sensor Humidity sensor can put on the humidifier or theplace want to test the RH.

4.Floating ball To check the water level.

Humidifier parameter

Name:	Humidifier
Model:	EB-100
Power supply:	110VAC-1 Phase-60Hz
Power Consumption:	17W
Net Weight:	10.36 lbs
Grow Weight:	12.13 lbs
Product Dimensions:	13.87"*8.07"*8"
Carton Dimensions:	16.54"*10.24"*9.84"
Working Temperature:	33-104°F
Feed Water Temperature:	33-95°F
Water Supply Quality:	Distilled Water

Operation

1. Connect the power supply

The screen shows status "OFF", press the switch key, then the screen shows the current humidity inside the room. Press the up key ▲, or down key ▼ to see the set humidity range. The initial target humidity range is 67%-71%RH.

2. Set the start and the stop humidity

Press 3 seconds to turn on the up key \blacktriangle or down key \checkmark then the screen will start flashing. Press the up key \blacktriangle or down key \checkmark again, to set the start humidity. When the flashing stops and the unit exits the edit mode.

3. Add water to the best water level

Add some water into the water tank from the water inlet . The water level will show on the floating ball. The best water level is at "5.5-8". When it is below "5.5", please add water; and when the level is above "8", it will overflow the water. Please do not over fill the unit.

- 1 -