


# Motorized TV Stand with Remote Control

Instruction Manual

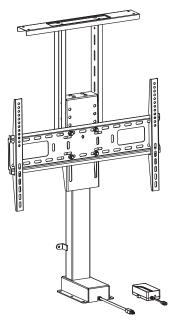

# SKU: MOUNT-E-UP80D



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

### https://vivo-us.com/products/mount-e-up80d

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com Chat live with an agent!



# <u> warning</u>!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

## 🔨 TIPOVER WARNING


SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:
NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

## 🗥 WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

## PACKAGE CONTENTS

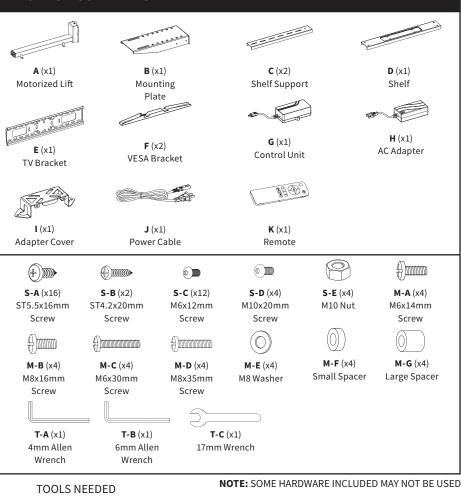




DO NOT EXCEED WEIGHT CAPACITY. Failure to do so may result in serious injury.




### PRE-ASSEMBLY

When fabricating custom cabinetry for your motorized TV mount, ensure there will be at least 50mm (2") of clearance on the sides and front of the TV along with at least 10mm (3/8") of clearance on the top.

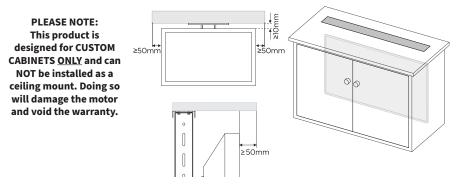


### **ASSEMBLY STEPS**

#### STEP 1

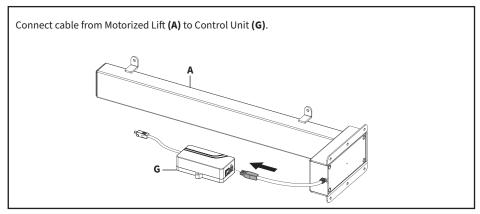


#### STEP 2

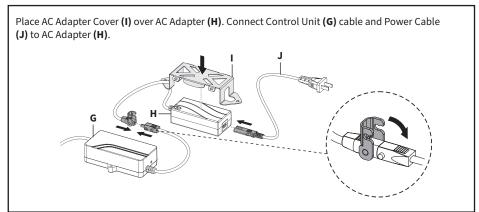

#### STEP 3

Slide Mounting Plate (**B**) onto Motorized Lift (**A**) and secure using M6x12mm Screws (**S-C**) and 4mm Allen Wrench (**T-A**). Connect Shelf Supports (**C**) to the sides of Motorized Lift (**A**) using M6x12mm Screws (**S-C**) and 4mm Allen Wrench (**T-A**). Attach Shelf (**D**) to top of Shelf Supports (**C**) using M6x12mm Screws (**S-C**) and 4mm Allen Wrench (**T-A**).

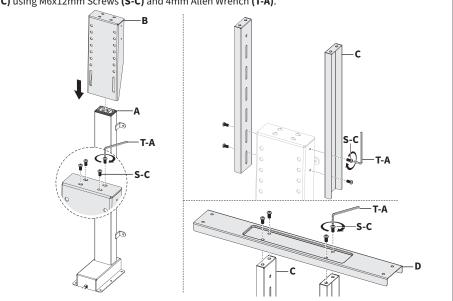


#### STEP 4


Place the lift assembly inside of your custom cabinetry and plug into nearby outlet.

Press the side button on Control Unit (G) using a pencil or small tool. The lift will beep once, indicating the lift is ready to be paired with the Remote (K).

Press the button on the remote. Remote will beep for 10 seconds, and then emit one final beep to indicate successful paring. Press the △ arrow to raise the lift.

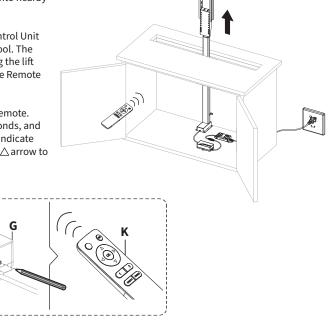


#### STEP 5

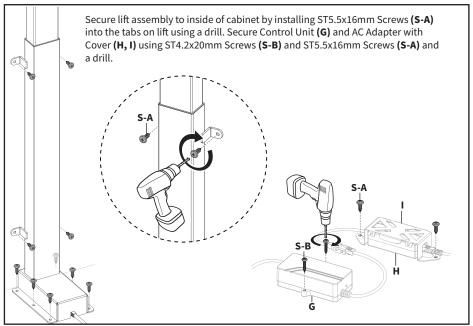


#### STEP 6


Attach TV Bracket (E) to Mounting Plate (B) using M10x20mm Screws (S-D), M10 Nuts (S-E), 6mm Allen Wrench (T-B), and 17mm Wrench (T-C).

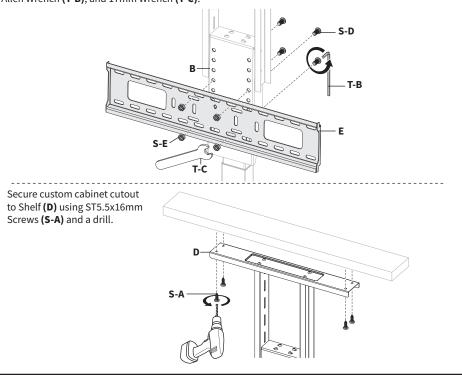


#### STEP 7

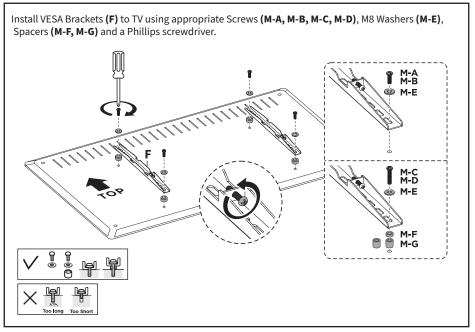

#### STEP 8

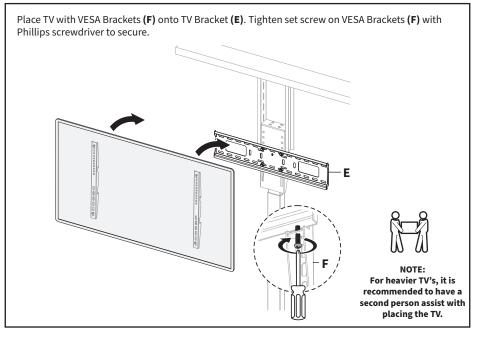

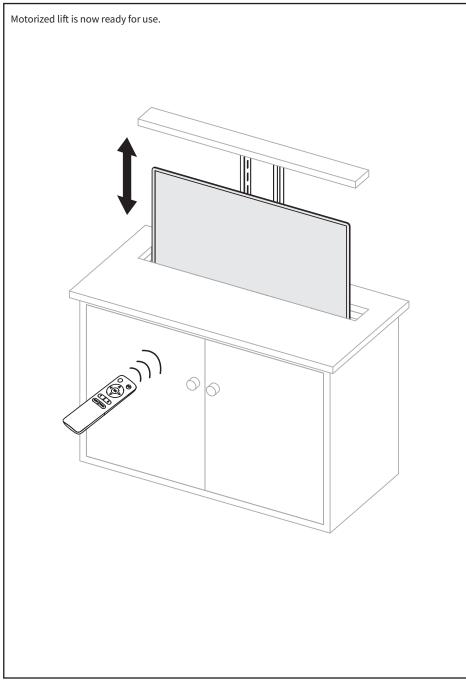



#### Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

