 


White Universal Drop Ceiling Projector Mount Instruction Manual



SKU: MOUNT-VP07DP




Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/mount-vp07dp

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



 






www.vivo-us.com Chat live with an agent! 309-278-5303

<u> warning!</u>

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

🗥 WARNING: CHOKING HAZARD


SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

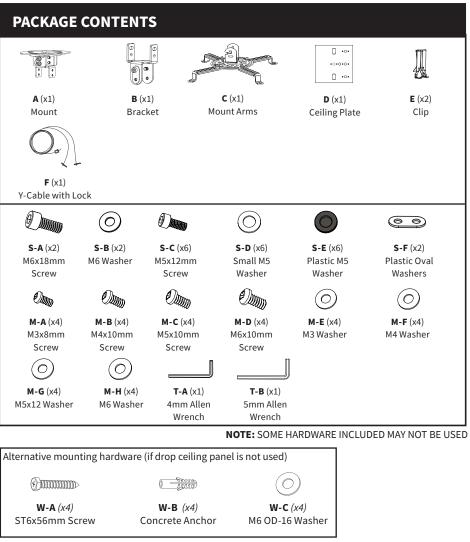

A CAUTION!

DO NOT INSTALL INTO DRYWALL ALONE. VERIFY YOUR CEILING CONSTRUCTION. USE WOOD STUDS TO MOUNT. We include mounting for brick and concrete. If unsure, please contact us at vivo-us.com, email at help@vivo-us.com, or call us at 309-278-5303.

 
TOOLS NEEDED






ASSEMBLY STEPS


STEP 1

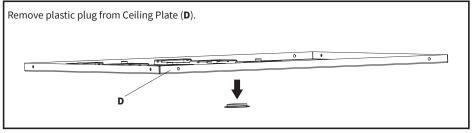


STEP 2


Insert 2 toggles at end of Y-Cable with Lock (**F**) into 2 of the 16 slots on the top of the Ceiling Plate (**D**), making sure the slots chosen will provide optimal support for the mount with projector. Place Ceiling Plate into suspended-ceiling grid. Thread end of cable through the side hole in the lock in the direction of the arrow, wrap cable around beam or other support, then insert cable down through center hole in lock and pull down to secure.

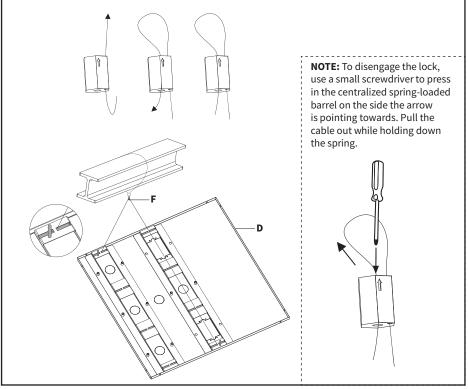


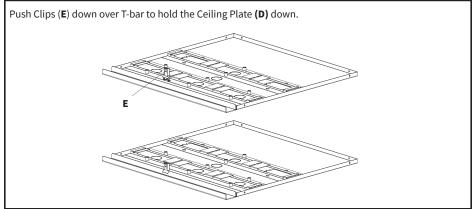


STEP 4

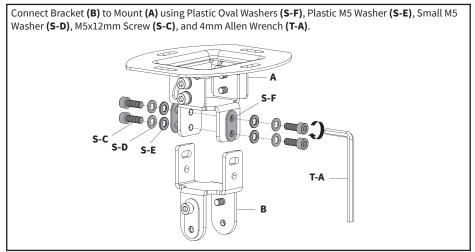


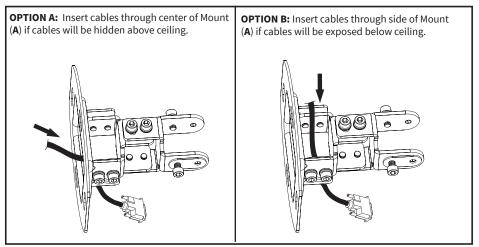


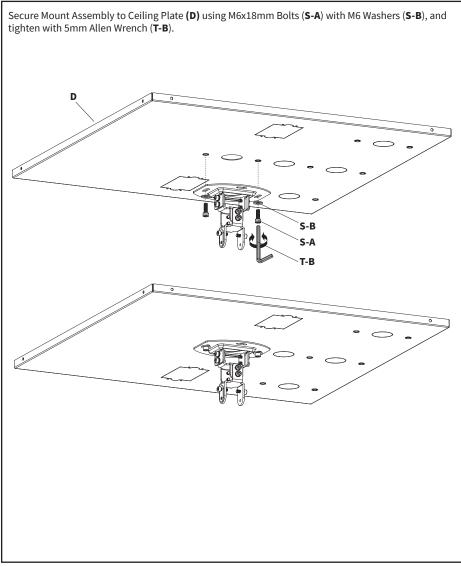


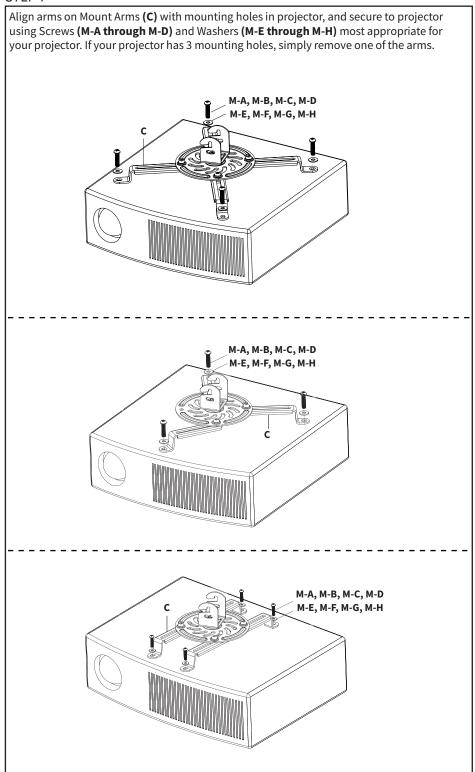

STEP 7 Cont.

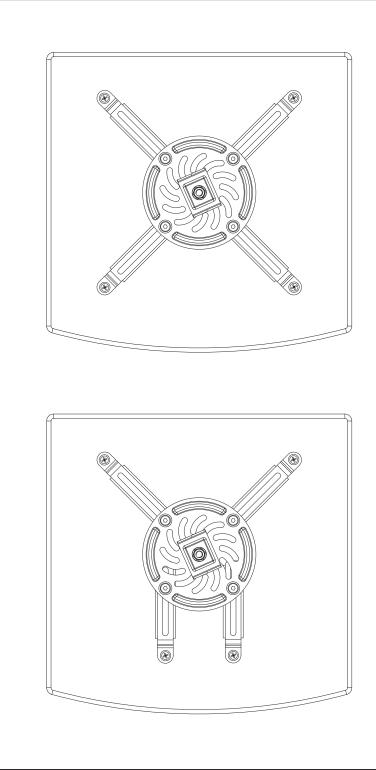


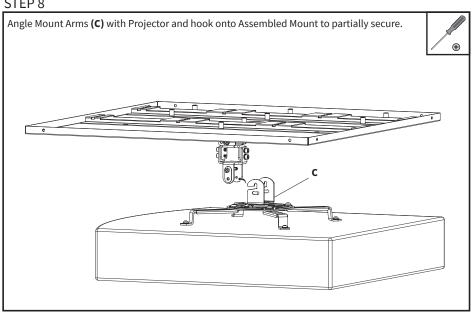

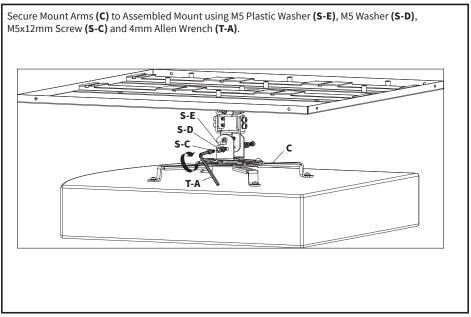

Adjust angle and rotation of projector if desired by loosening screws on Assembled Mount using 4mm Allen Wrench **(T-A)**.

Adjustment #1: Use for pitched ceiling applications <u>ONLY.</u> Adjustment #2 & #3: Adjust tilt angle using one or both of these adjustments.

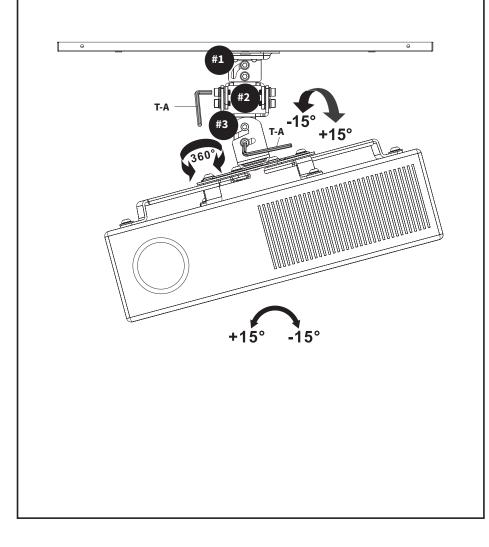

[PAGE INTENTIONALLY LEFT BLANK]

[PAGE INTENTIONALLY LEFT BLANK]



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

