

100" Portable Tripod Projector Screen 4:3

Instruction Manual



SKU: PS-T-100



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/ps-t-100>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

WARNING: FOLLOW INSTRUCTIONS TO PREVENT PRODUCT DAMAGE AND/OR PERSONAL INJURY:

- DO **NOT** FOLD SCREEN
- DO **NOT** USE FINGERS OR HARD OBJECTS TO TOUCH SCREEN SURFACE
- DO **NOT** SPLASH LIQUIDS OR CHEMICALS ON SCREEN SURFACE
- KEEP SCREEN **AWAY** FROM HOT OBJECTS OR FIRE.

 
TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TRIPOD.
- USE TIPOVER RESTRAINT OR ANCHOR TRIPOD TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

PRODUCT STRUCTURE

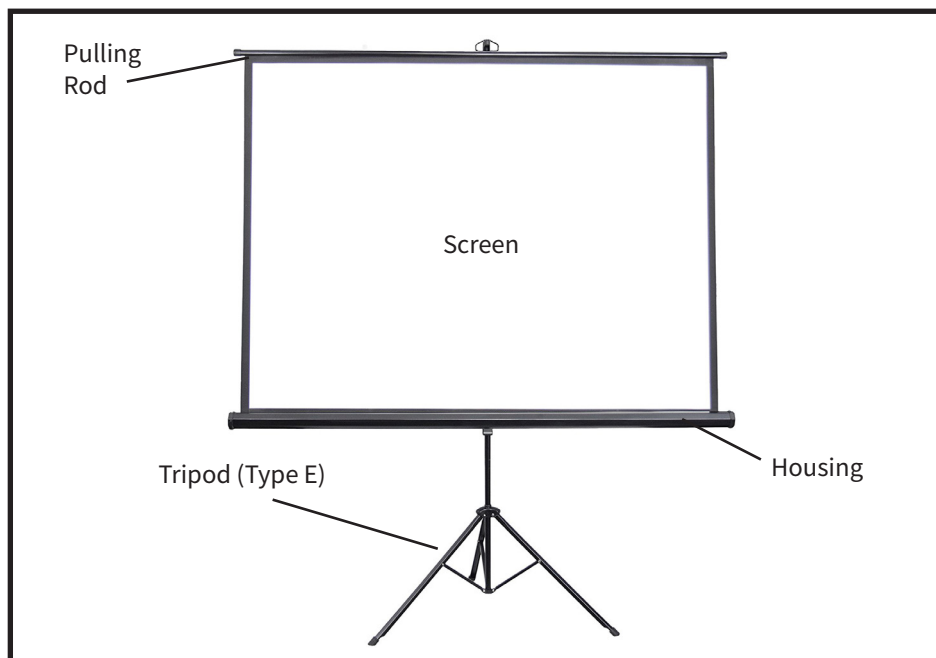

ASSEMBLY STEPS

- STEP 1** Loosen blue height adjustment knob. Extend to unhook from end of housing.
- STEP 2** Turn screen horizontally. Extend tripod feet while holding housing level.
- STEP 3** Latch ring onto top of vertical support bar.
- STEP 4** Loosen blue height adjustment knob and adjust to desired height.
- STEP 5** To adjust height of housing, flip up the blue lever on the handle and adjust to desired height.

DISASSEMBLY

- STEP 1** Keep one hand on extended side of vertical support bar! Carefully loosen blue height adjustment knob and slowly lower support bar to lowest position.
- STEP 2** Unlatch ring from top of vertical support bar. Slowly lower screen into housing.
- STEP 3** While balancing screen, collapse tripod feet.
- STEP 4** Rotate screen vertically, then extend support and secure hook in screen. Tighten height adjustment knob to lock.

CLEANING

If screen becomes dirty, wipe gently with a soft cloth. Do NOT use solvents to clean screen surface.



Open **Monday - Friday 7:00am - 7:00pm** CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.


 help@vivo-us.com

AVG. RESPONSE TIME (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

 www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (*within office hrs*): **< 15 M**

 309-278-5303

AVG. RESOLUTION TIME (*within office hrs*): **5M 4S**