

# Silver Mobile Dual TV Cart

*SKU: STAND-TV12H*  
Instruction Manual

---

*Assembly Video & Product Info*  
[www.vivo-us.com/products/stand-tv12h](http://www.vivo-us.com/products/stand-tv12h)



# ! CAUTION! !

If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



## WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



## DO NOT EXCEED WEIGHT CAPACITY

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.



 
## TIPOVER WARNING

**SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:**

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TV OR TV CART
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

**USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.**

## Package Contents



**A (x1)**  
Base



**B (x4)**  
Wheel Caster



**C (x2)**  
Universal Plate



**D (x2)**  
Plastic Handle



 
**E (x1)**  
Left Column




**F (x1)**  
Right Column




**G (x2)**  
Left Adapter Bracket



**H (x2)**  
Right Adapter Bracket

 

**I (x2)**  
Top Cover

 


**J (x2)**  
Connector




**K (x1)**  
DVD Shelf



 
**L (x1)**  
Connecting Plate



**M (x1)**  
Camera Shelf

 

**N (x2)**  
Fixing Plate

 

**O (x1)**  
Support Bar



**P (x2)**  
Knob

## We're Here for You

Open **Monday - Friday 7:00am - 7:00pm CST**, our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



Give us a Call:  
**309-278-5303**

AVG. RESOLUTION TIME (within office hrs): **5M 4S**



Chat Us:  
**www.vivo-us.com**

AVG. RESOLUTION TIME (within office hrs): **< 15 M**



Email Us:  
**help@vivo-us.com**

AVG. RESPONSE TIME (within office hrs): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

## Included Hardware & Tools



**Q** (x4)  
M6x15mm  
Screw



**R** (x2)  
M6x25mm  
Screw



**S** (x2)  
M6x25mm Screw  
with Washer



**T** (x3)  
M4x6mm  
Flathead Screw



**U** (x2)  
M4x6mm  
Dome Head  
Screw



**V** (x2)  
M6x25mm  
Screw



**W** (x10)  
M6x14mm  
Screw



**X** (x8)  
M8x25mm  
Screw



**Y** (x2)  
M6x25mm  
Screw



**Z** (x2)  
Spacer



**A1** (x4)  
M6 Washer



(x1)  
Allen Wrench



**C1** (x1)  
Wrench



**M-A** (x8)  
M5x14mm  
Screw



**M-B** (x8)  
M6x14mm  
Screw



**M-C** (x8)  
M6x30mm  
Screw



**M-D** (x8)  
M8x30



**M-E** (x8)  
M8x50mm  
Screw



**M-F** (x8)  
Washer



**M-G** (x16)  
Small Spacer



**M-H** (x16)  
Large Spacer

## Tools Needed:



**Phillips  
Screwdriver**

## Weight Capacity:



**110lbs  
(50kg)  
PER SCREEN**



**11lbs  
(5kg)  
DVD SHELF**

 


**11lbs  
(5kg)  
CAMERA SHELF**

## ASSEMBLY STEPS

### STEP 1

Screw Casters (**B**) into underside of Base (**A**). Adjust Casters to sit flat on surface if needed, and tighten nuts using Wrench (**C1**) as shown.

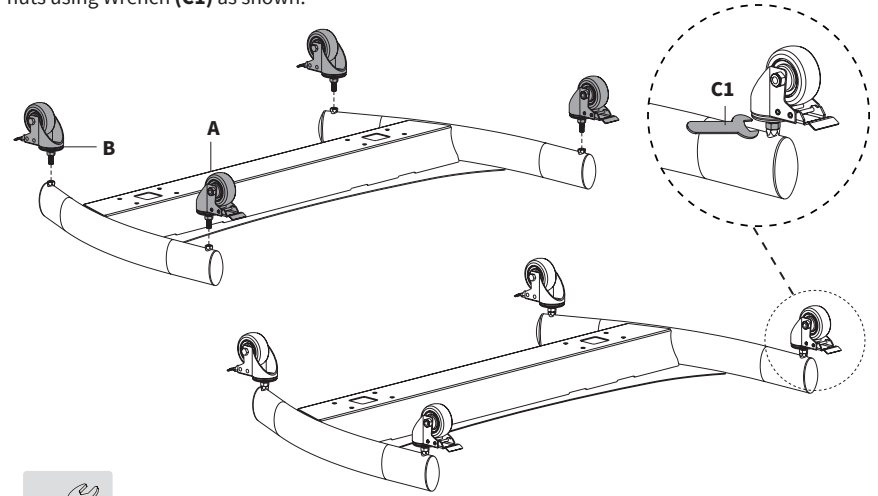


### STEP 2

Loosen screws on each side of Columns (**E, F**) using Allen Wrench (**B1**) to adjust height to desired level, then tighten. Ensure both columns are at the same height using the height indicators as guides.




 **\*\* CAUTION \*\***  
Hold inner column  
when loosening for  
adjustment

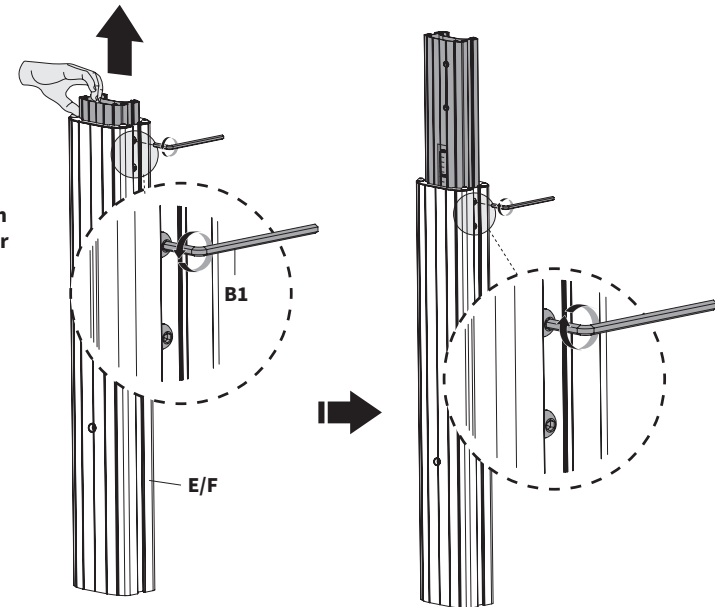


### STEP 3

 Place Columns (**E, F**) into the cutouts in the base. Slide the Plastic Handles (**D**) over the inner columns and press firmly in place.

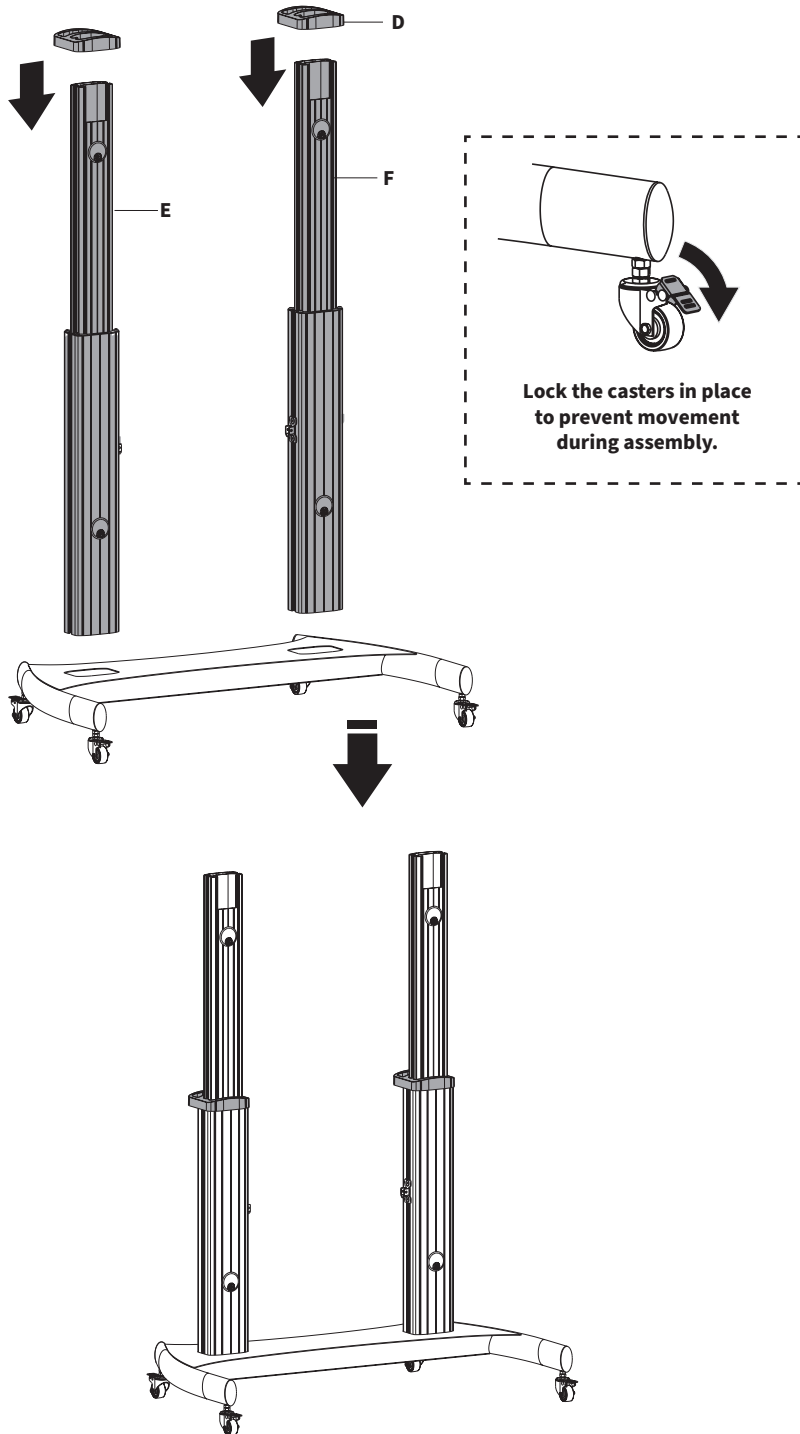


### STEP 4

 Secure columns using M8x25mm Screws (**X**) and tighten with Allen Wrench (**B1**).

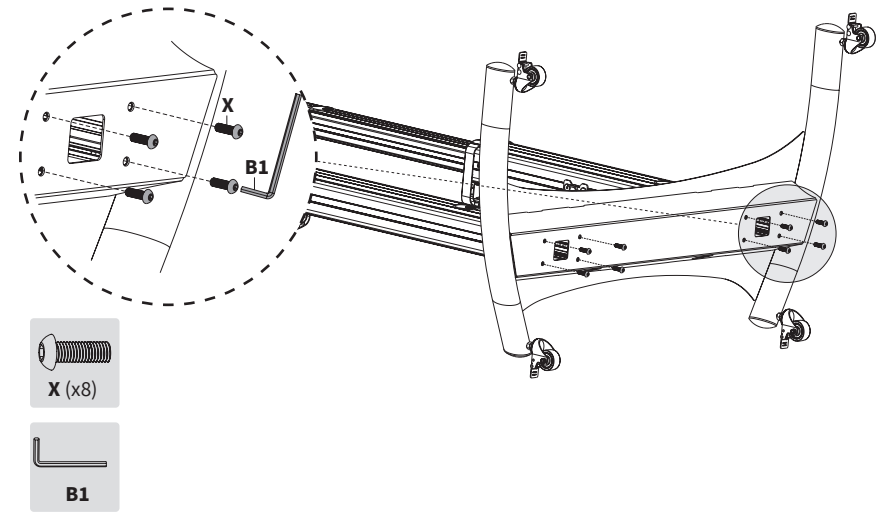


### STEP 5

 Slide Connectors (**J**) onto back of Universal Plates (**C**) as shown and secure with M6x15mm Screws (**Q**) and a Phillips screwdriver.

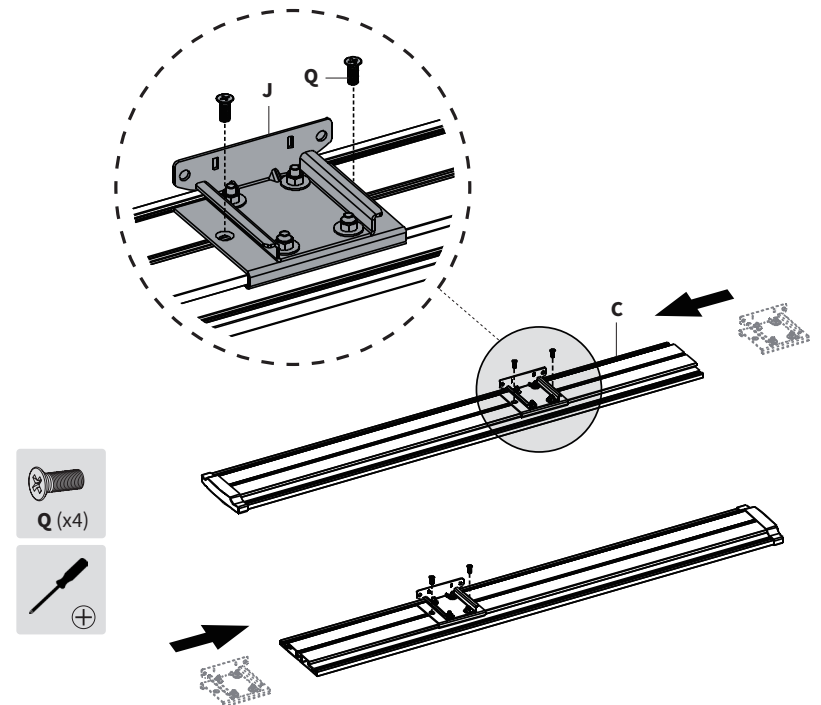


## STEP 6

 Assemble Universal Plates (**C**) together using Fixing Plates (**N**), M6x14mm Screws (**W**) and a Phillips screwdriver.

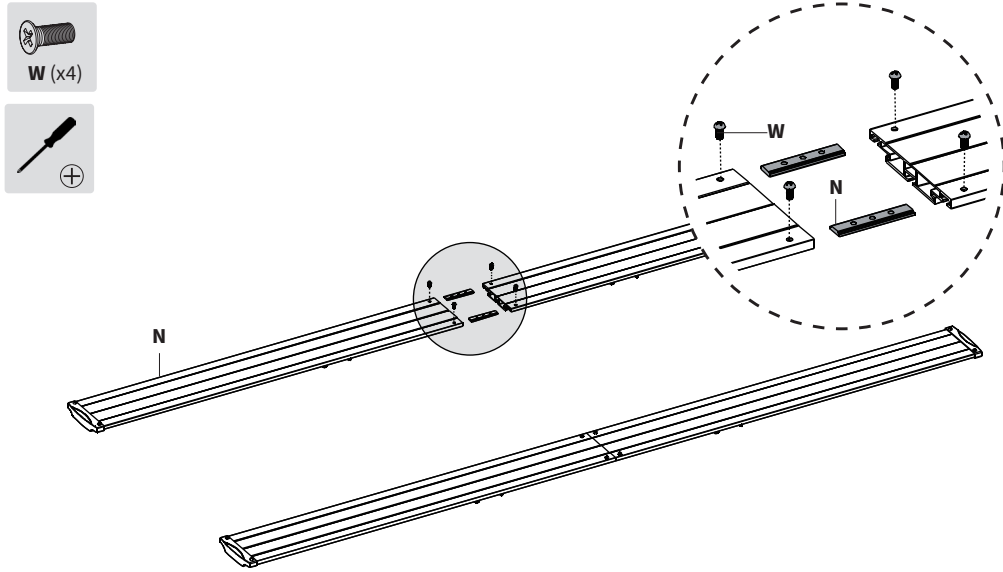


## STEP 7

 Attach assembled Universal Plates to the columns with M6x14mm Screws (**W**) and a Phillips screwdriver.

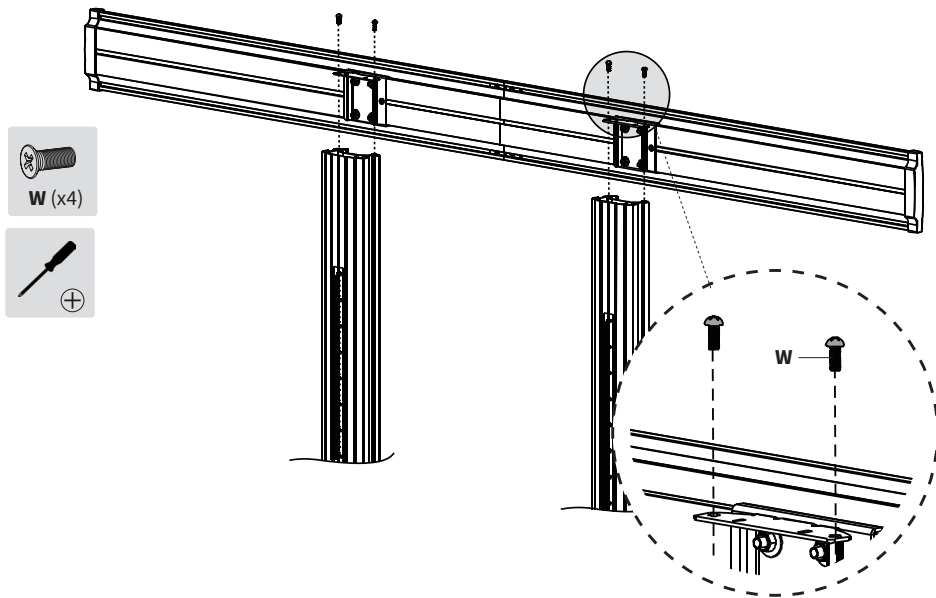


## STEP 8

 Install M6x25mm Screws with Washer (**S**) into the back of each column using a Phillips screwdriver.

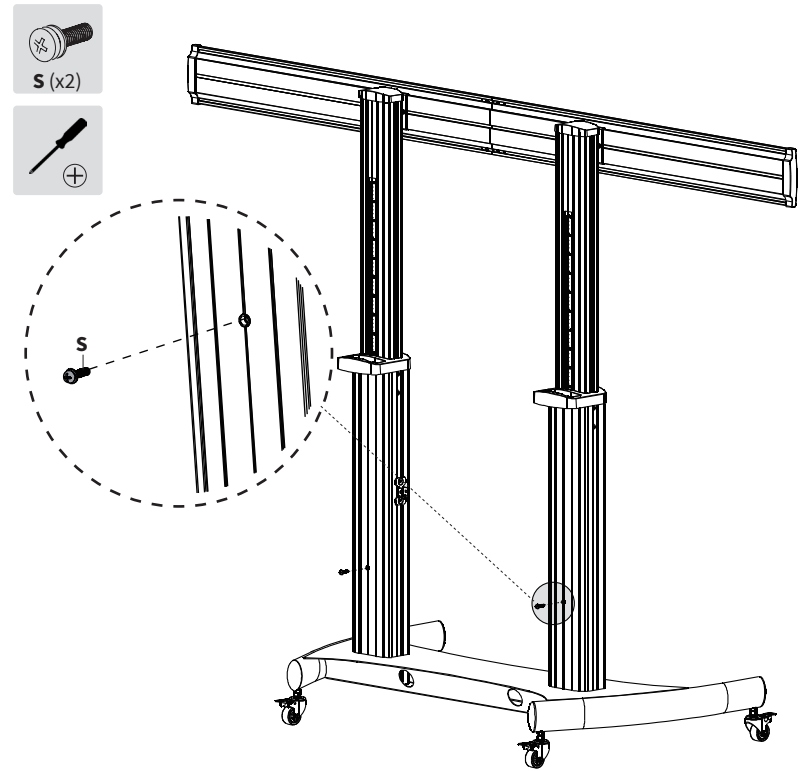


 Attach Top Covers (**I**) to the top of the columns.

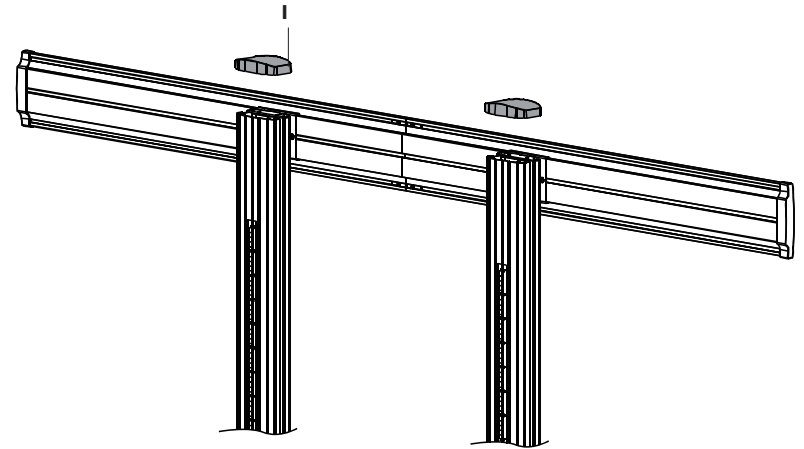



## STEP 9

 Secure Support Bar (O) to DVD Shelf (K) using M6x14mm Screws (W), M6x25mm Carriage Bolts (Y) and Knobs (P).

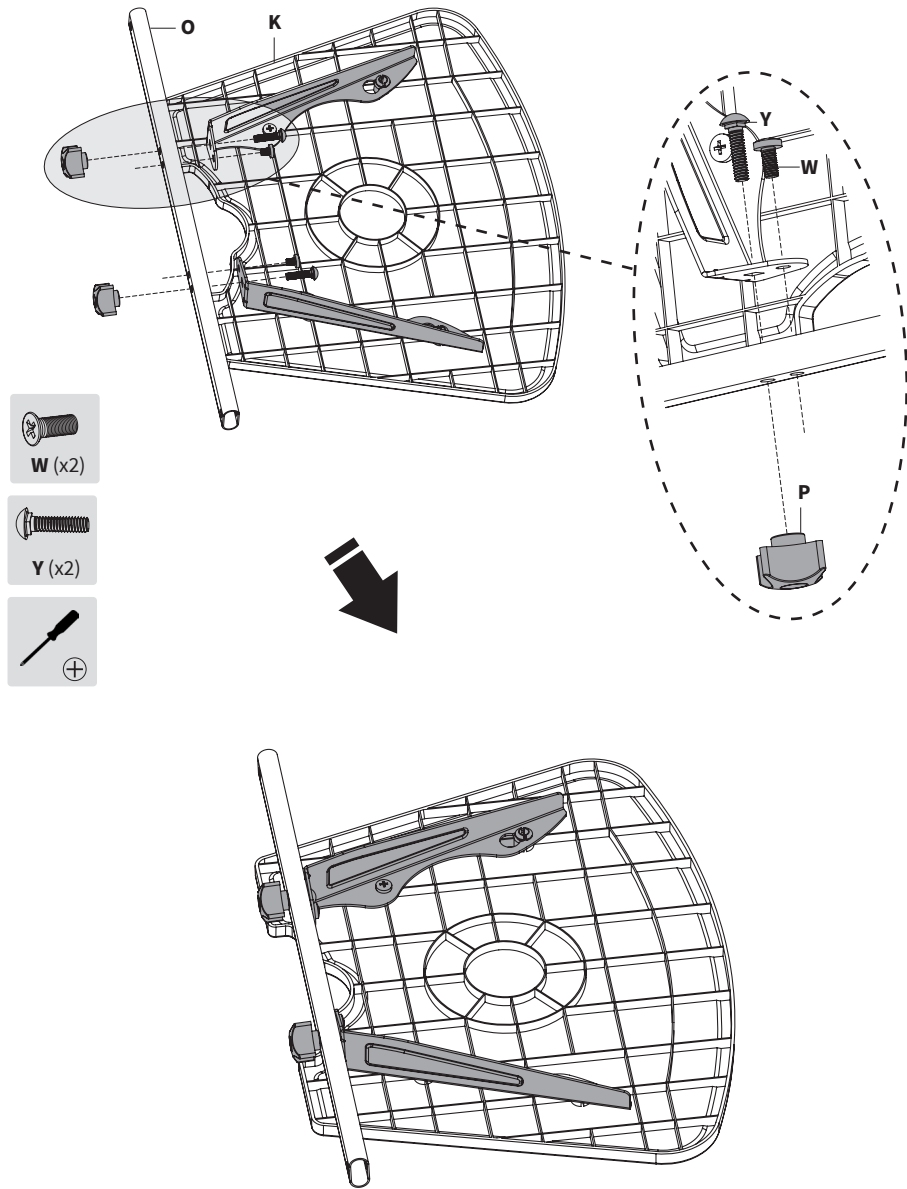


## STEP 10

  Secure Support Bar (O) to Support Blocks on Columns with M6x25 Screws (V) and Allen Wrench (B1).

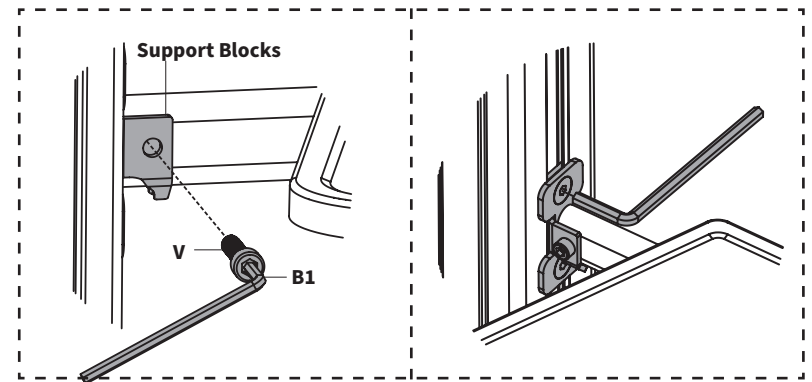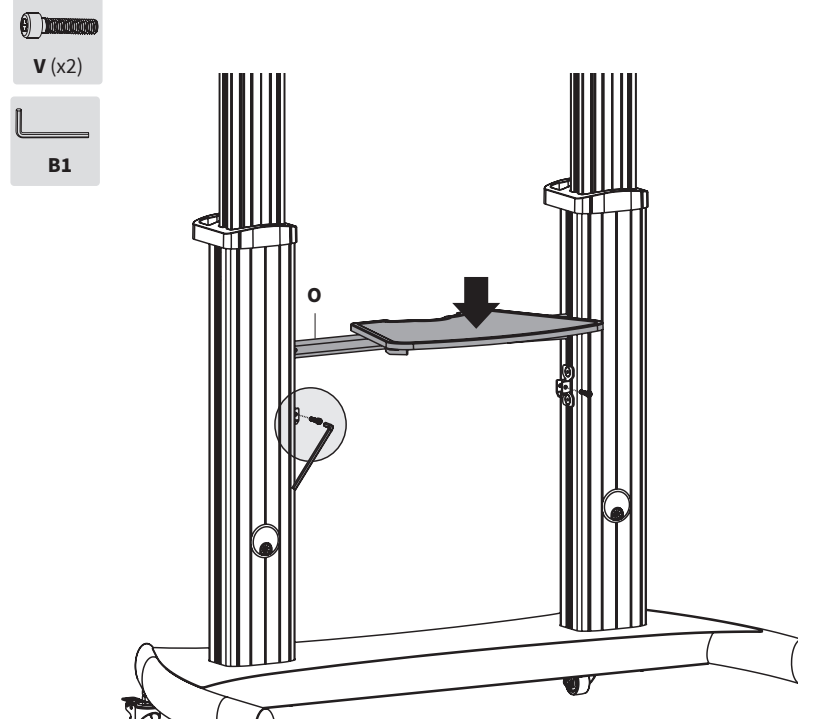

## STEP 11


 
Adjust the Shelf (K) to the desired height using the Allen Wrench (B1) before installing the displays to the stand.

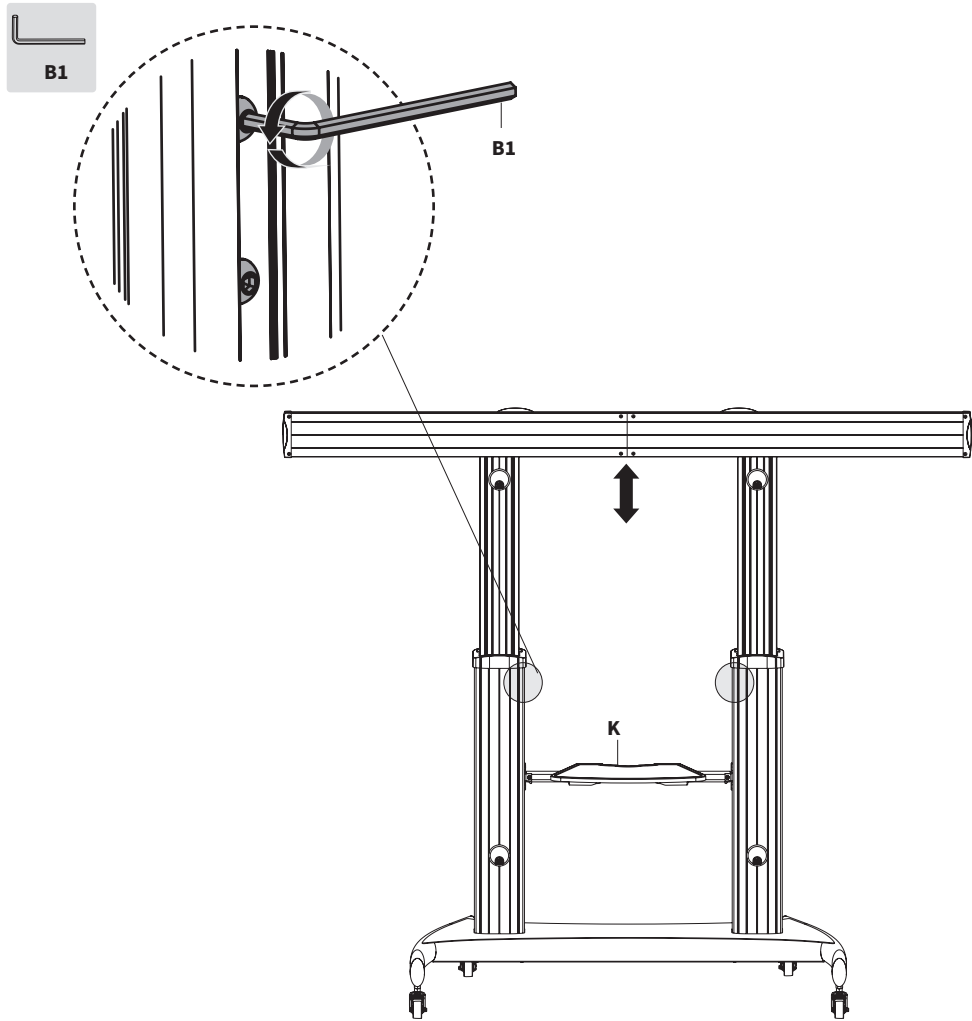

## STEP 12


### Curved Back Screens

  Install Adapter Brackets (G, H) to back of each display using appropriate Screws (M-C, M-D, M-E), Washers (M-F) and Spacers (M-G, M-H), as shown in the diagrams.

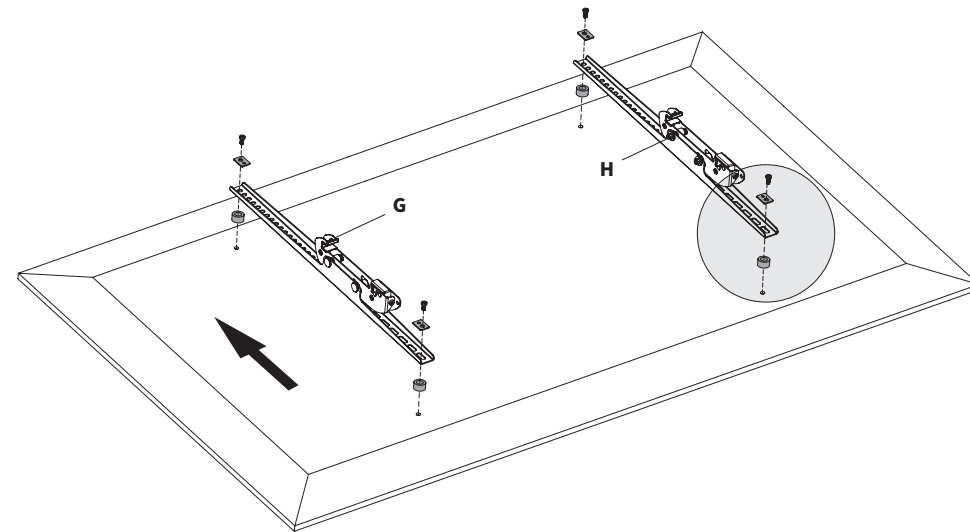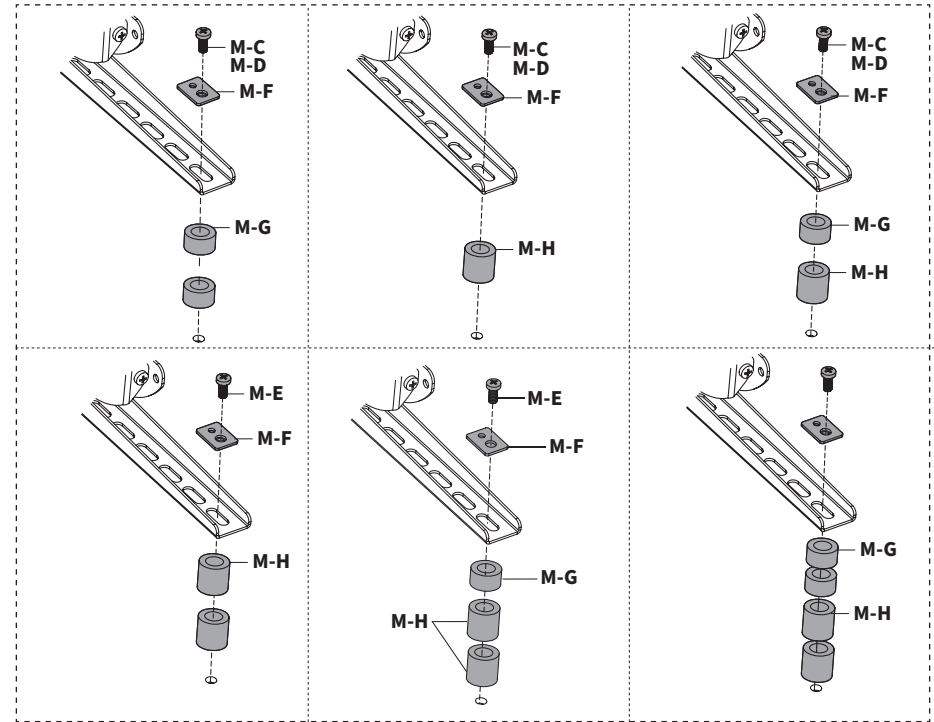


## Flat Back Screens

 Install Adapter Brackets (**G, H**) to back of each display using appropriate Screws (**M-A, M-B**) and Washers (**M-F**).

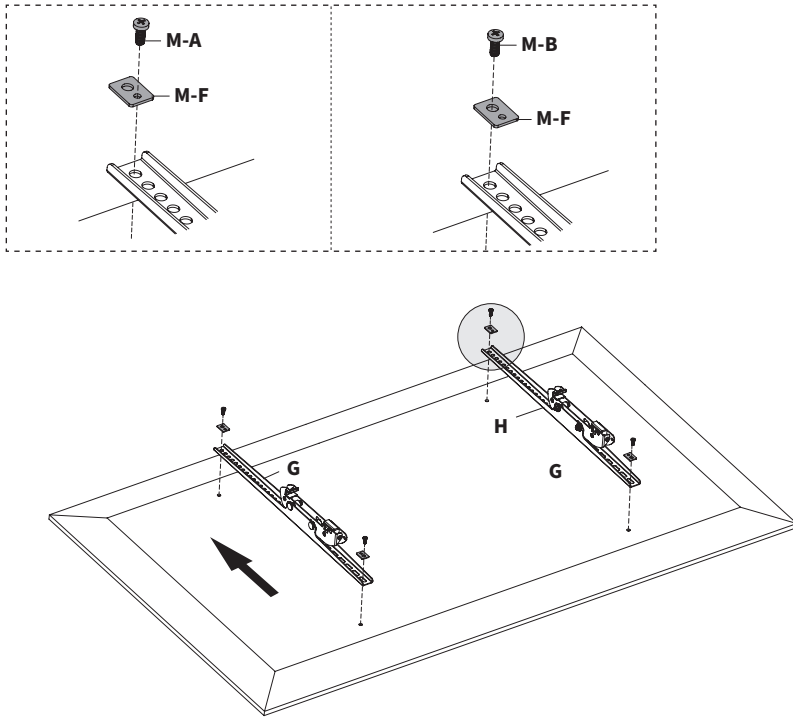



## STEP 12

 Hang TV onto the Universal Plate (**C**).

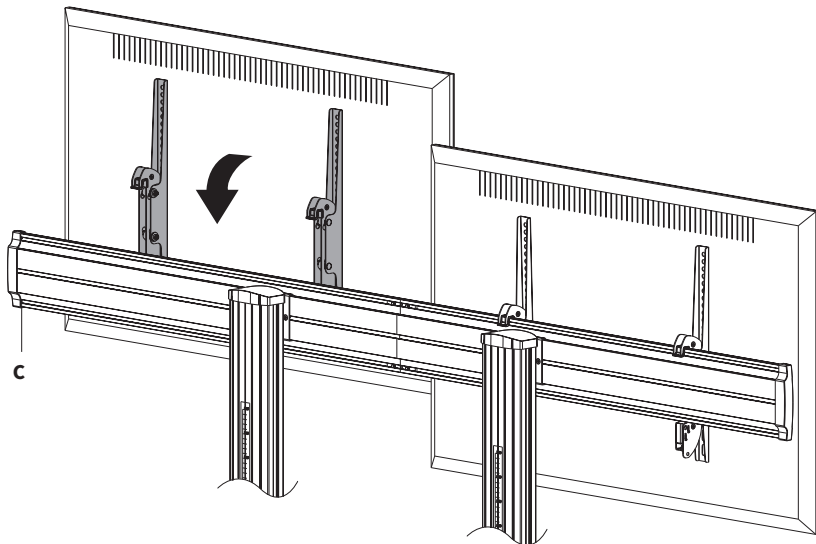

## STEP 13

 
 
Turn the screws on the underside of Adapter Brackets counter-clockwise to lock screens in place. Turn the bolts clockwise to unlock and remove the displays. Padlocks (not included) can be used to prevent the displays from being stolen.

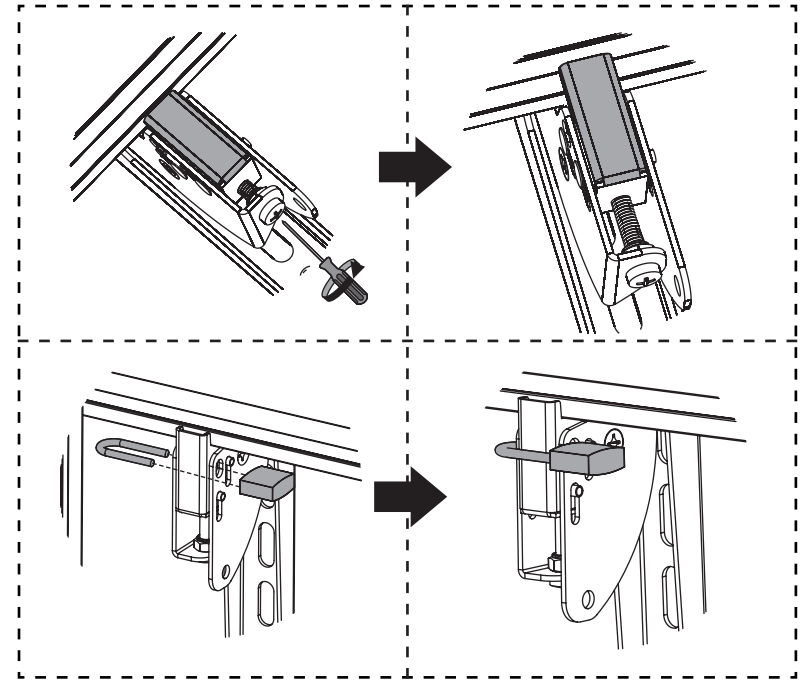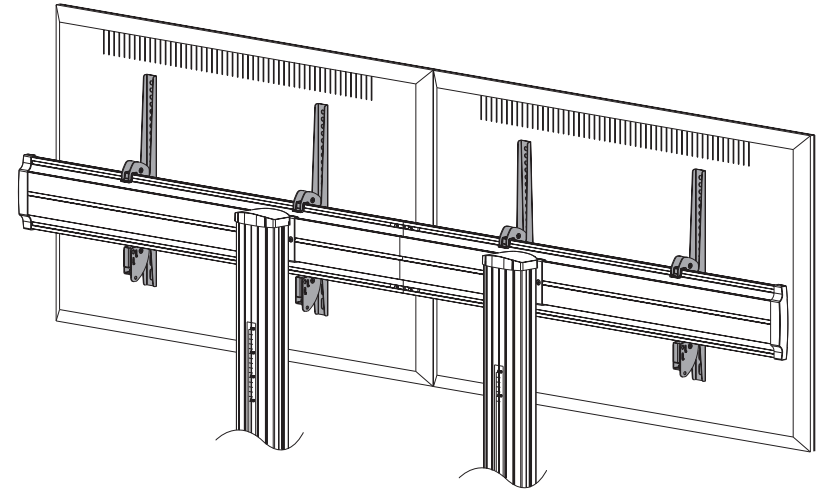





## STEP 14

  Manage cables using the cable grommets in the columns.

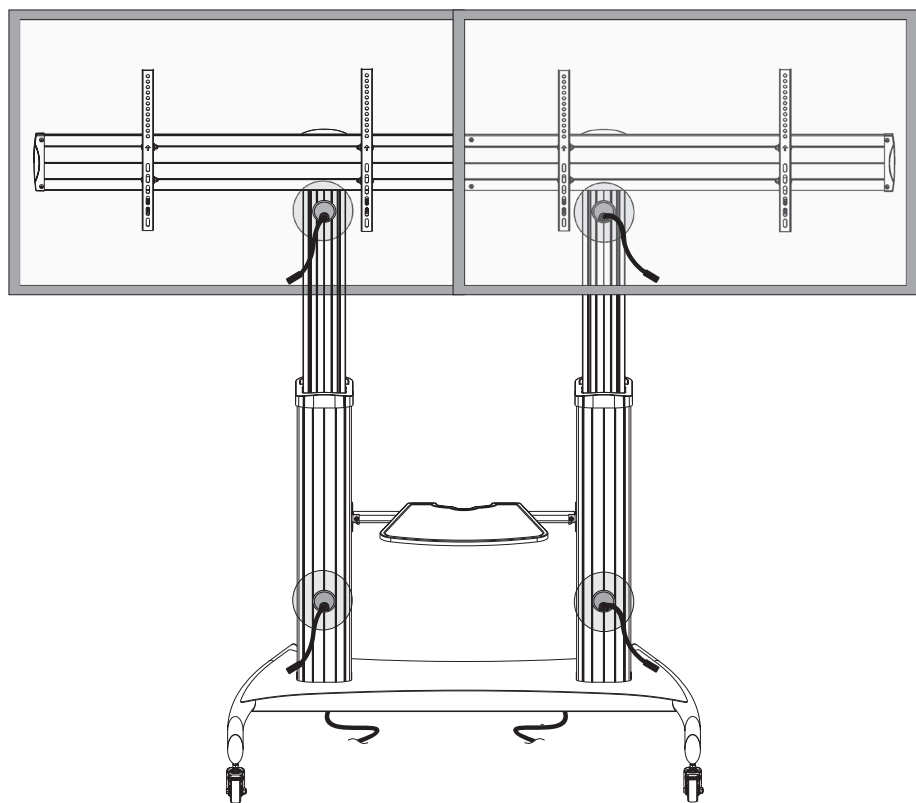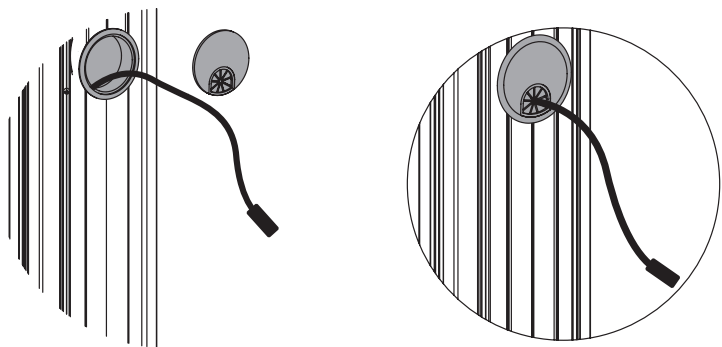

## STEP 15

  Attach Camera Shelf (**M**) to Connecting Plate (**L**) using M4x6mm Flat Head Screws (**T**) on top and M4x6mm Dome Head Screws (**U**) in back, and a Phillips screwdriver.

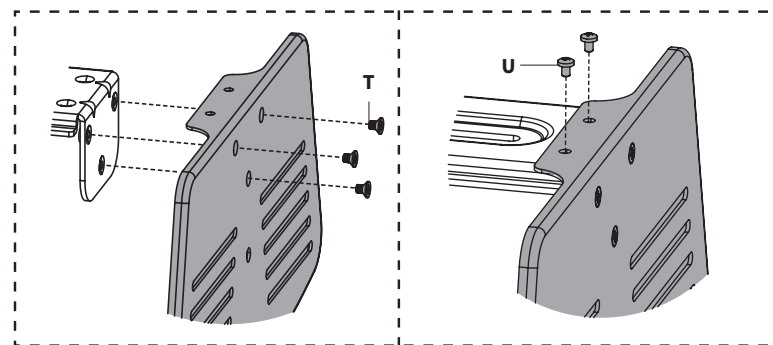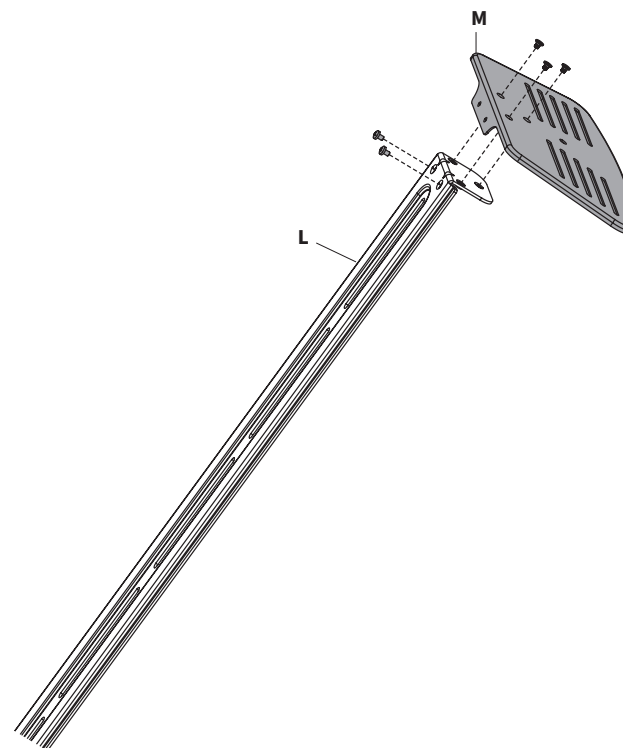

## STEP 14

Secure Connecting Plate (**L**) to the center holes in Fixing Plates (**N**) using M6x25mm Phillips Head Screws (**R**), M6 Washers (**A1**), Spacers (**Z**), and a Phillips screwdriver.



**R** (x2)



 
 
**A1** (x4)



**Z** (x2)





+

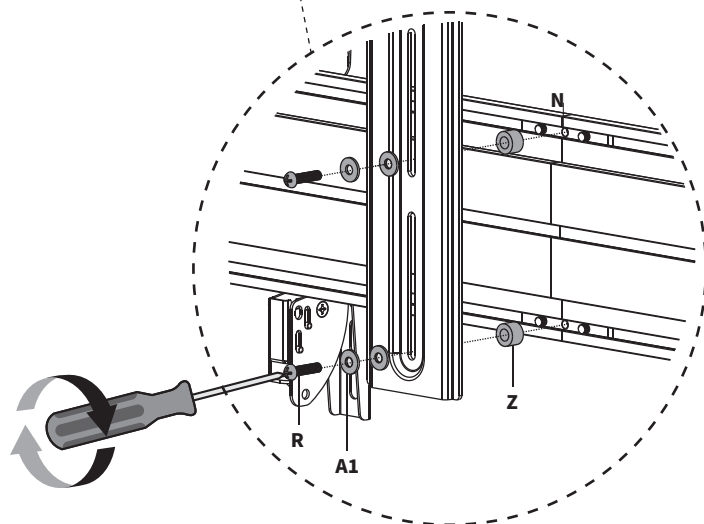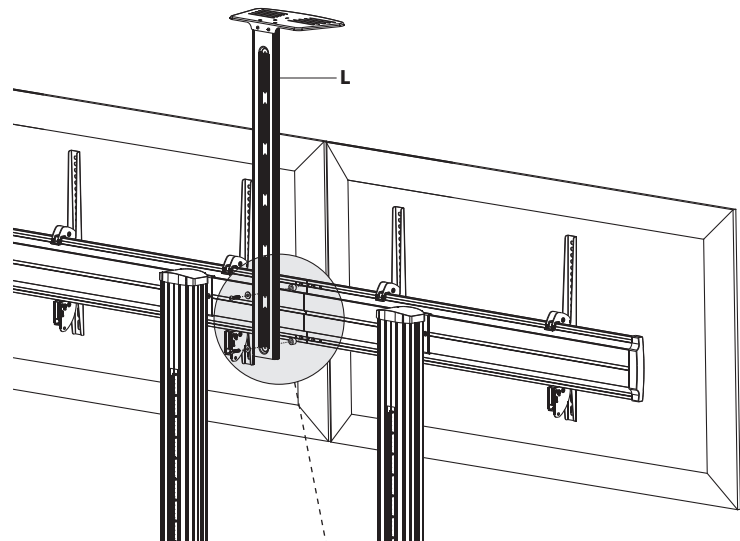

## STEP 15

  Adjust the height of the camera shelf and tighten bolts.

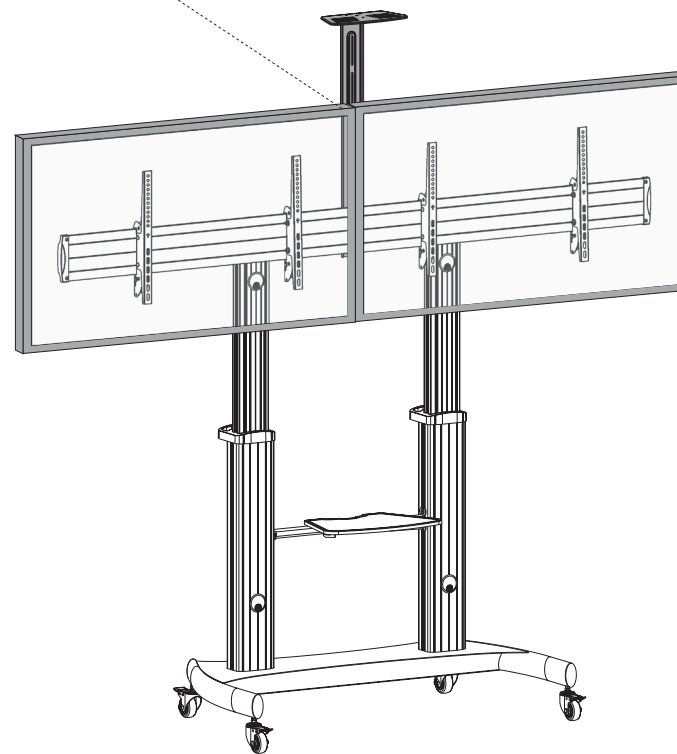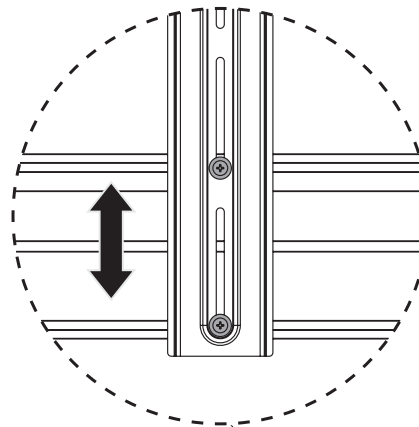



## Need Help? Get In Touch

Monday-Friday from 7:00am-7:00pm CST



[help@vivo-us.com](mailto:help@vivo-us.com)



[www.vivo-us.com](http://www.vivo-us.com)

*Chat live with an agent!*



309-278-5303



VIVO-us



@vivo\_us