

Black Steel Easel Studio TV Stand

Instruction Manual



SKU: STAND-TV86B



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-tv86b

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com Chat live with an agent!



309-278-5303

🔥 WARNING!


If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

🖄 TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER: NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TV OR TV STAND. USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

A CAUTION!

DO NOT INSTALL INTO DRYWALL ALONE. VERIFY YOUR WALL CONSTRUCTION. USE WOOD STUDS TO MOUNT. We include mounting hardware for brick and concrete walls. If unsure, please contact us at vivo-us.com, email at help@vivo-us.com, or call us at 309-278-5303.

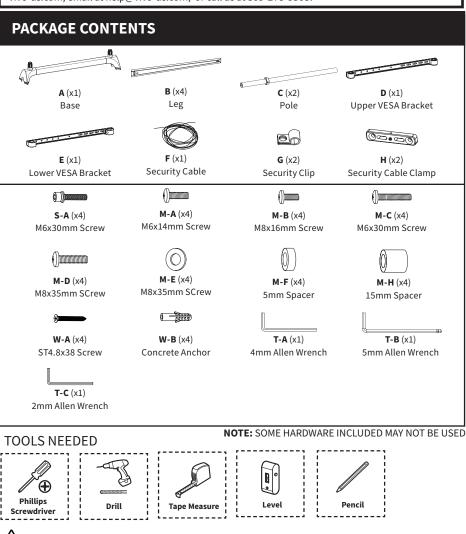

WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

DO NOT EXCEED WEIGHT CAPACITY.


. 132lbs (60kg)

Failure to do so may result in serious injury.


ASSEMBLY STEPS

STEP 1


Remove the cable management covers from Legs (B).

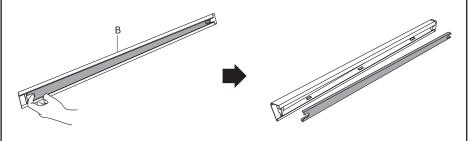


STEP 2

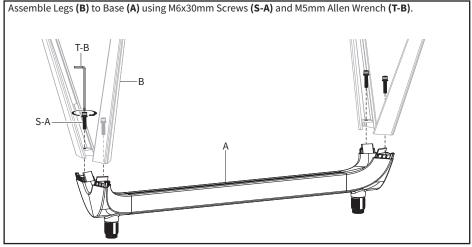

STEP 3

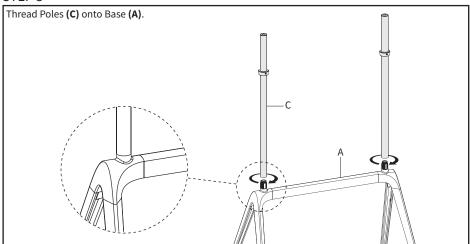


STEP 4

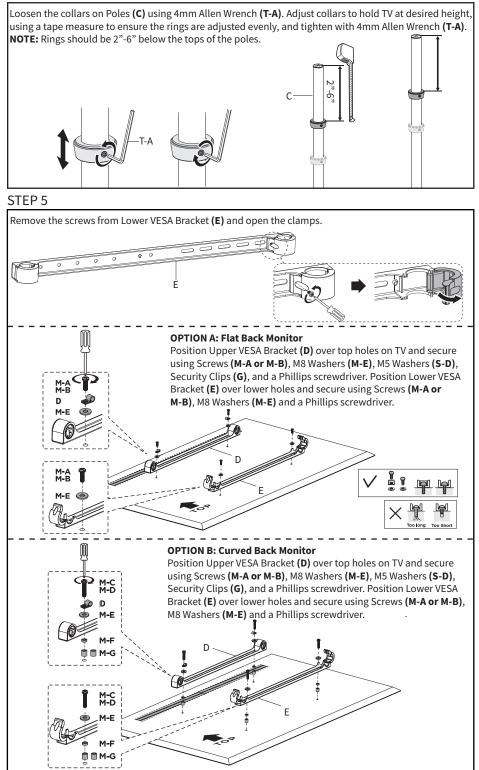


STEP 6

Slide the TV with Upper VESA Brackets (**D**) and Lower VESA Bracket (**E**) onto Poles (**C**). Close the clamps on Lower VESA Bracket (**E**) around Poles (**C**) and secure with previously removed screws. **NOTE:** Make sure the TV does not touch Base (**A**).

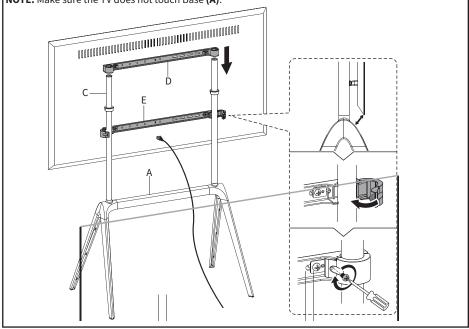


STEP 7

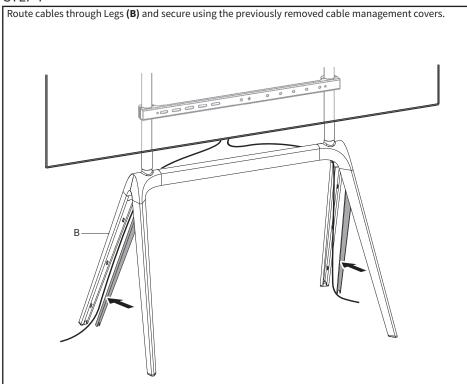

STEP 8 (Option A)

Wood Stud Wall:


Using Security Cable Clamps (H) as guides, mark drilling locations on wall at the same height as Upper VESA Bracket (D). Use of a stud finder is recommended. Drill holes at least 1.6" (40mm) deep using a 1/8" (3.5mm) drill bit. Mount clamps to wall using ST4.8x38 Screws (W-A). Thread Security Cable (F) through Security Clips (G) on TV and center holes in Security Cable Clamps (H) as shown, then tighten clamps using the 2mm Allen wrench (T-C).

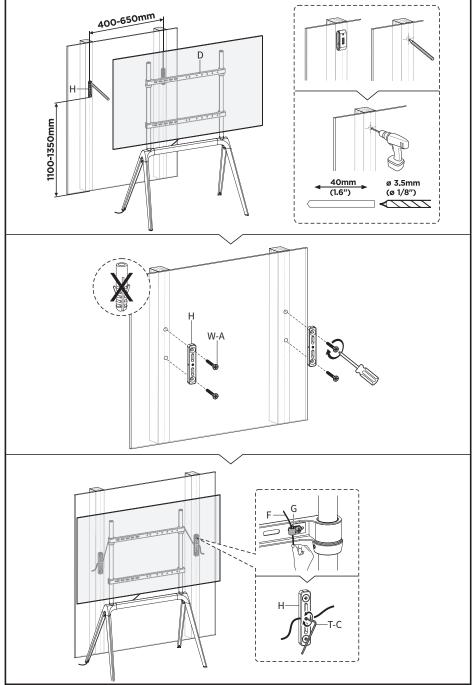

STEP 8 (Option B)

Concrete/Brick Wall:

Using Security Cable Clamps (H) as guides, mark drilling locations on wall at the same height as Upper VESA Bracket (D), spaced 16" - 26" (400mm - 650mm) apart. Drill holes at least 1.6" (400mm) deep using a 9/32" (7mm) drill bit. Insert Concrete Anchors (W-B) into holes and mount Security Cable Clamps (H) to wall using ST4.8x38 Screws (W-A). Thread Security Cable (F) through Security Clips (G) on TV and center holes in Security Cable Clamps (H) as shown, then tighten clamps using the 2mm Allen Wrench (T-C).

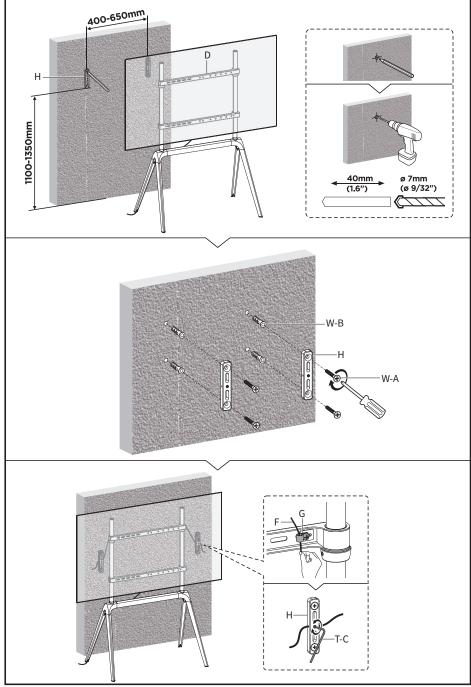



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

