



HUUM



OF SAUNA

VEESÄRK

Veesärgi paigalduseks peab olema HUUM HEAT/WOOD keris paigas. Samuti ei tohi kerises olla kivid.

- ◆ Aseta Veesärk sinu valitud küljele (tagaserv või külgmised servad).
- ◆ Veesärk peab istuma kolmnurkse vinkli peale, tihkelt kerise vastu.
- ◆ Veesärgi ühendamisel veega ja täites võret kividega tuleb jälgida, et soojusvaheti jääks tihedalt vastu küttekollet.
- ◆ Veesärgi töötamise eelduseks on veemahuti asetsemine kõrgemal kui soojusvaheti toruühendus. Veetoru minimaalne läbimõõt $\frac{3}{4}$ ". Toru kalded ei tohi võimaldada "õhumullide" kinni jäämist tsiruklatsiooni.

Garantii 24 kuud, ostutseki alusel. Garantii kehtib puudulikule tootele, ei kehti kasutamisest tekkinud kulumisele ja rooste.

HEAT EXCHANGER

The HUUM HEAT/WOOD heater must be in place to install the Heat exchanger. Also, make sure there aren't any stones placed in the heater.

- ◆ Place the Heat exchanger on the side of your choice (back side or sides edges).
- ◆ The Heat exchanger must sit on a triangular angle, firmly against the heater.
- ◆ When connecting the Heat exchanger to the water and filling the heater with stones, make sure that the Heat exchanger fits snugly against the stove.
- ◆ The Heat exchanger works only if the water tank is placed higher than the Heat exchanger pipe connections. Minimum diameter of the water pipe is $\frac{3}{4}$ ". The inclination of the pipe must prevent the air bubbles to get stuck in circulation.

The purchase receipt gives the product a warranty of 24 months. Warranty applies to a defective product and does not apply to wear and rust caused by natural use.



#huumsauna



www.huum.eu