

Narvi 30 / 50 Door Configuration Guide

This is a Quick User-Guide for removal or replacement of the door hinge on a Narvi 30 / 50 Wood Burning Sauna Heater. Using this method, you can also flip the orientation of the door to swing open from the opposite side.


For more information, please contact our Technical Support team at: technicalsupport@finnmarksauna.com.

Removing The Hinge Pin

Step 1:


WARNING: Ensure that the heater is cool to the touch before proceeding.

For ease of access, you can remove the door frame from the stove and lay it down on a flat surface. It is fixed by one cross-head screw in each corner. The door frame is extremely heavy, so it is recommended for two people to remove it.

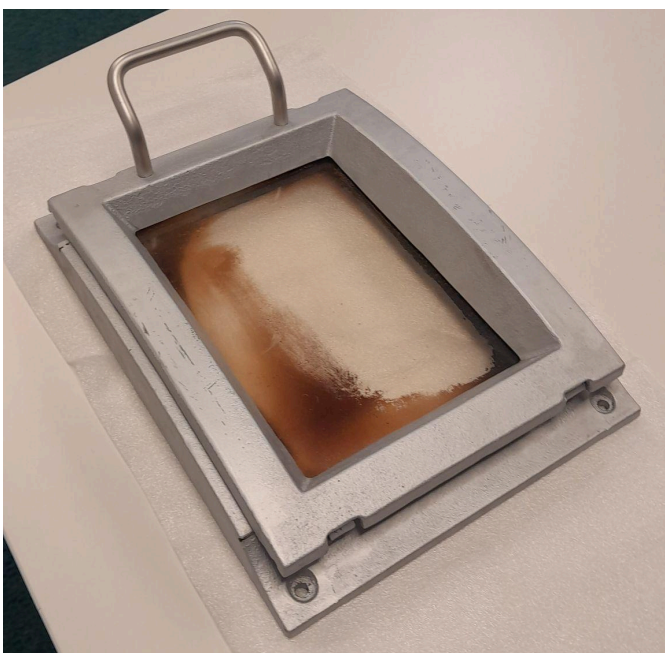

Step 2:


With the door closed, using a screwdriver or pin-punch and a small hammer, gently tap the bottom of the hinge pin through the first two holes.

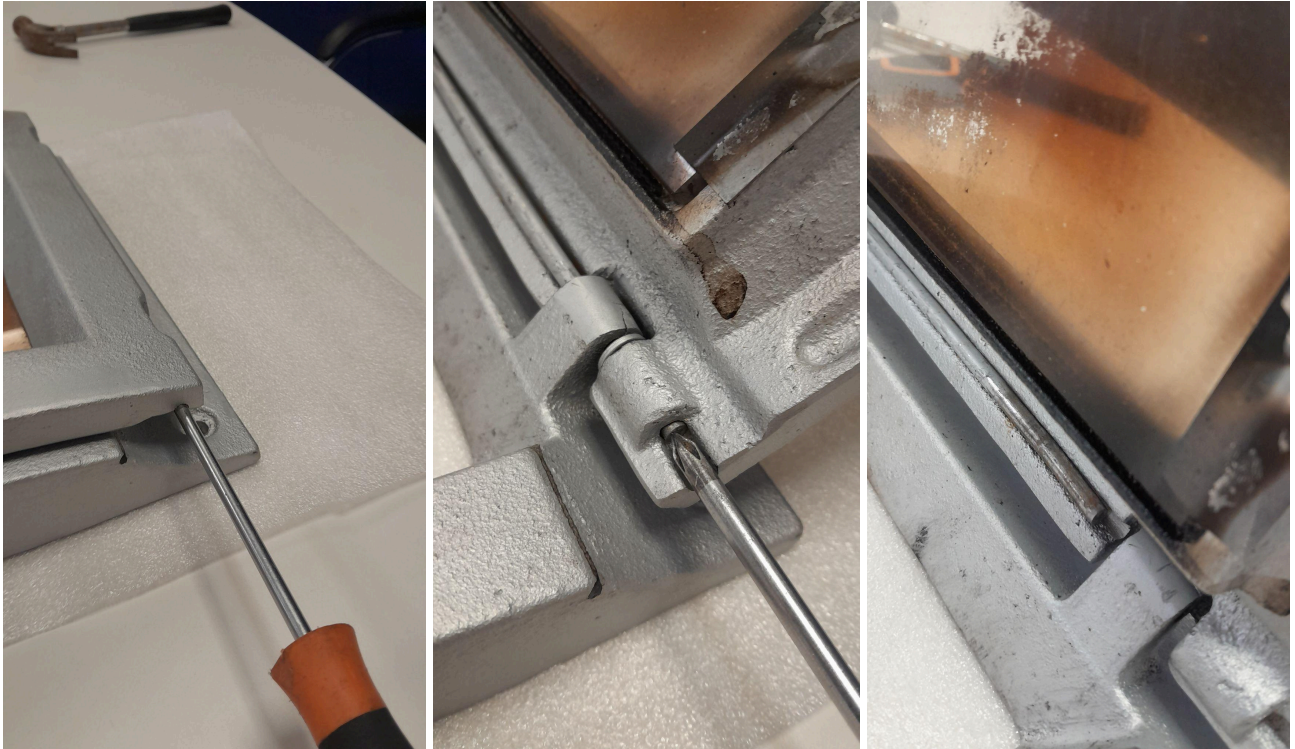

Step 3:

WARNING: Do not allow the door to rest fully open. The weight can put pressure on the hinge holes, this can cause them to crack.

Holding the door open, slide the pin out through the two remaining holes. If it becomes stuck, try twisting the pin and/or holding the door at different angles as you pull. Ensure a firm grip on the door, so as not to let it fall. Retain the washers for refitting.

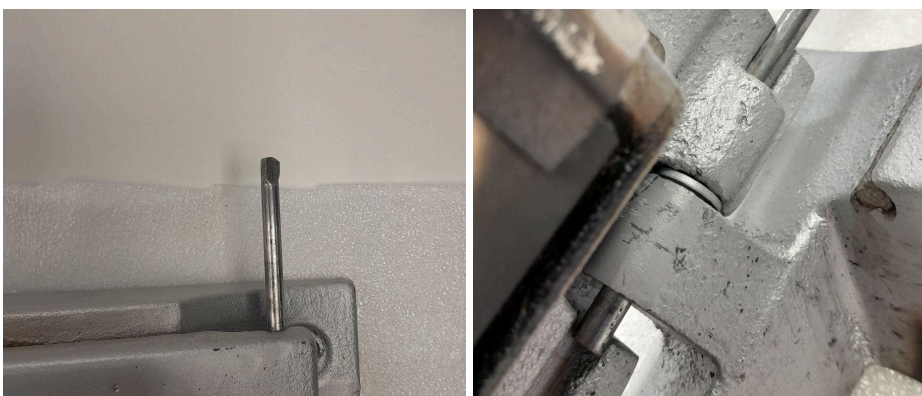

Step 4:

Using the screwdriver and hammer, remove the pan-head pin and washer from the opposite side of the door frame. This secures the door when in its closed position.



Refitting The Hinge Pin

Step 1:

The hinge hole on the opposite side may be too tight for the hinge pin to fit easily. Place the door to one side. Using the hammer, gently tap the hinge pin into the hole that held the retaining pin, then knock it back out with the screwdriver or pin-punch. This should loosen the fitment. Take care not to bend the hinge pin.




Alternatively, you can simply flip the bare frame 180 degrees. This will guarantee a loose fit without risk of bending the pin. However, if already used, any scorch marks from will now be located at the top of the frame.

Step 2:

Holding the door upright on a flat surface, insert the pin through the first hole, with approximately 5mm protruding from the bottom. Hold open the door and hang a washer on the pin. Line up the holes and slide the pin through the second hole.

Due to its weight, we recommend you ask for assistance to hold the door in position.

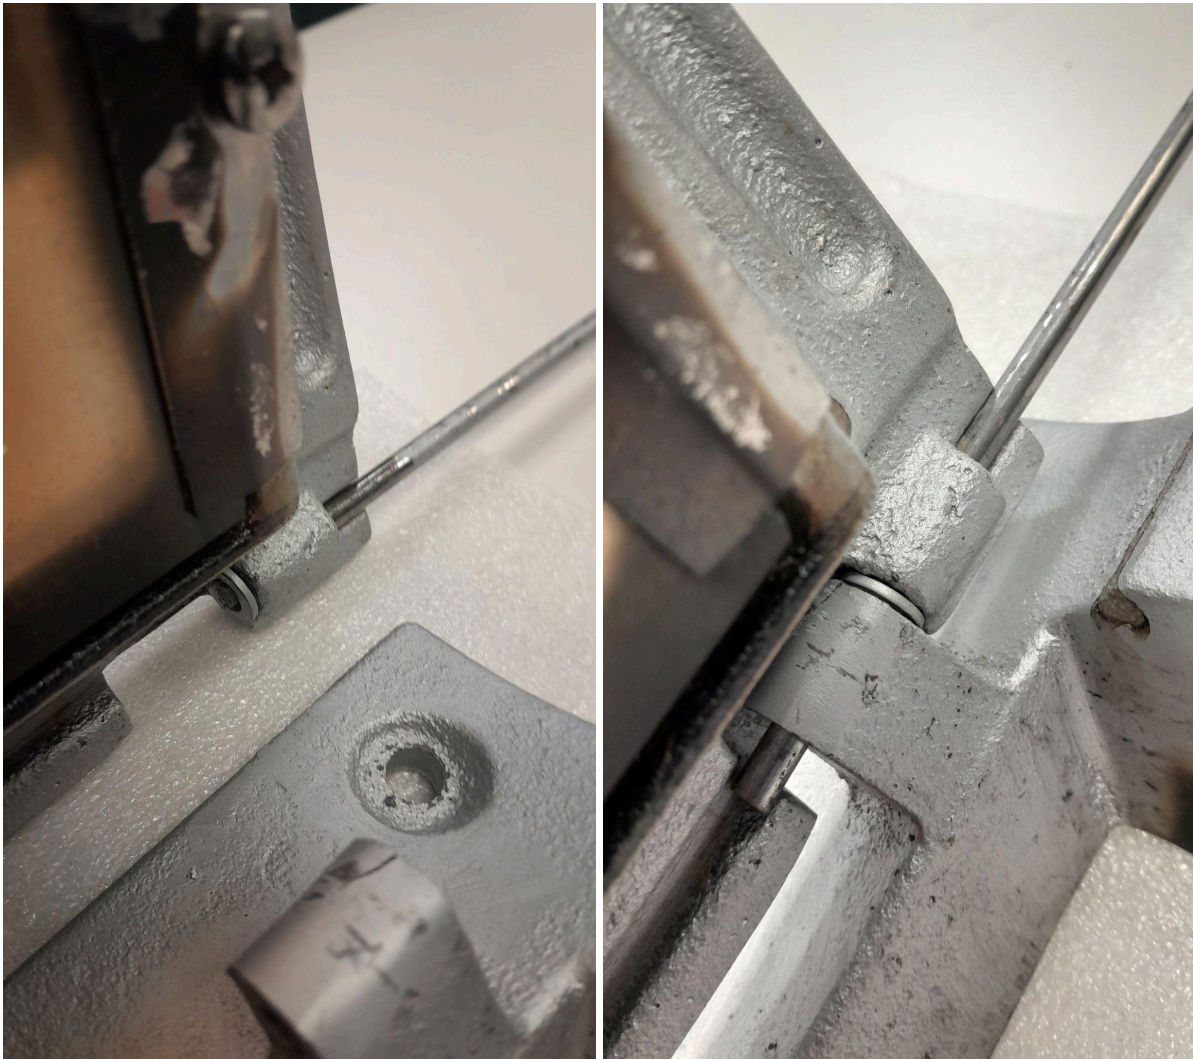

Step 3:

Repeat the previous step with the bottom two holes. Ensure the flat end of the pin is roughly parallel to the door, otherwise the pin will not insert all the way. Gently tap the top of the pin with the hammer until it is positioned as pictured.



Step 4:

Re-insert the locating pin in the top hole on the closing side, opposite the hinge. Test that the door opens and closes securely, then refit the door onto the wood burner.

It is advisable for two people to refit the door frame.

