



12 Bottle Dual Zone

Touchscreen

INSTRUCTION MANUAL

To ensure proper use of this appliance and your safety, please read the following instruction completely before operating this appliance.

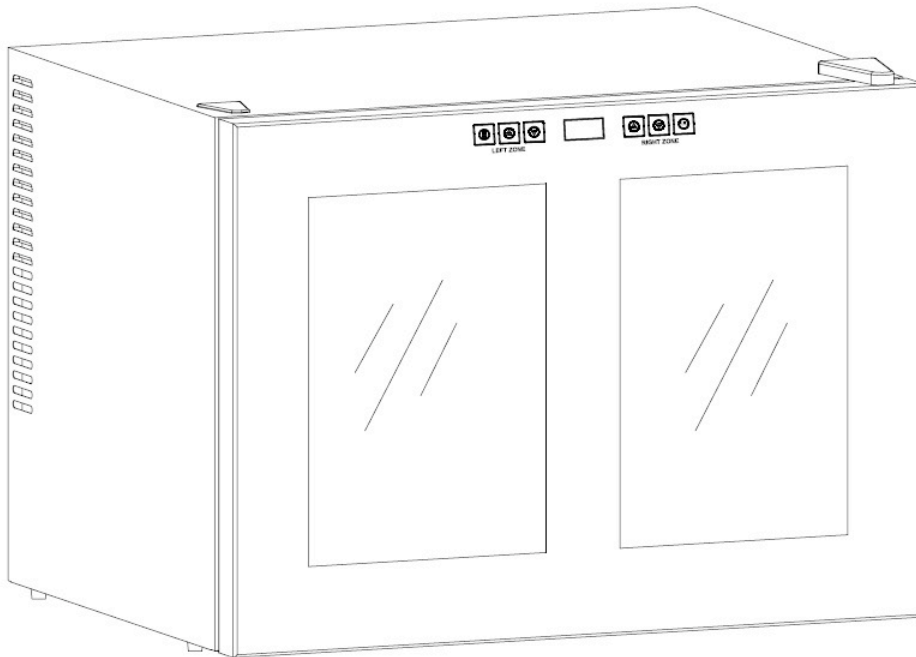 


TABLE OF CONTENTS

1. Important Safety Guidelines.....	3
2. Parts and Features.....	4
3. Important Safety Instructions.....	5
4. Installation Instructions.....	5
5. Operating Your Wine Cellar.....	7
6. Care and Maintenance.....	7
7. Troubleshooting Guide.....	8
8. Wiring Diagram.....	9
9. Warranty.....	9

IMPORTANT SAFETY GUIDELINES

Before the wine cellar is used, it must be properly positioned and installed as described in this manual. To reduce the risk of fire, electrical shock or injury when using the wine cellar, follow basic precautions, including the following:

DANGER

 
- ∞ Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- ∞ It is recommended that a separate circuit, serving only your wine cellar be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- ∞ Never clean wine cellar parts with flammable fluids. These fumes can create a fire hazard or explosion. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- ∞ Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- ∞ Do not connect or disconnect the electric plug when your hands are wet.
- ∞ Unplug the wine cellar or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- ∞ Do not attempt to repair or replace any part of your wine cellar unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.

WARNING

FOLLOW WARNING CALL OUTS BELOW ONLY WHEN APPLICABLE TO YOUR MODEL

- ∞ Use two or more people to move and install wine cellar. Failure to do so can result in back or other injury.
- ∞ To ensure proper ventilation for your wine cellar, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 90°F (32°C). This unit must be installed in an area protected from the elements, such as wind, rain, water spray or drips.
- ∞ The wine cellar should not be located next to ovens, grills or other sources of high heat.
- ∞ The wine cellar must be installed with all electrical connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances is required.
- ∞ Do not kink or pinch the power supply cord of wine cellar.
- ∞ The fuse (or circuit breaker) size should be 15 AMPS.
- ∞ It is important for the wine cellar to be leveled in order to work properly. You may need to make several adjustments to level it.
- ∞ Never allow children to operate, play with or crawl inside the wine cellar.
- ∞ Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- ∞ Do not use this apparatus for other than its intended purpose.

PARTS & FEATURES

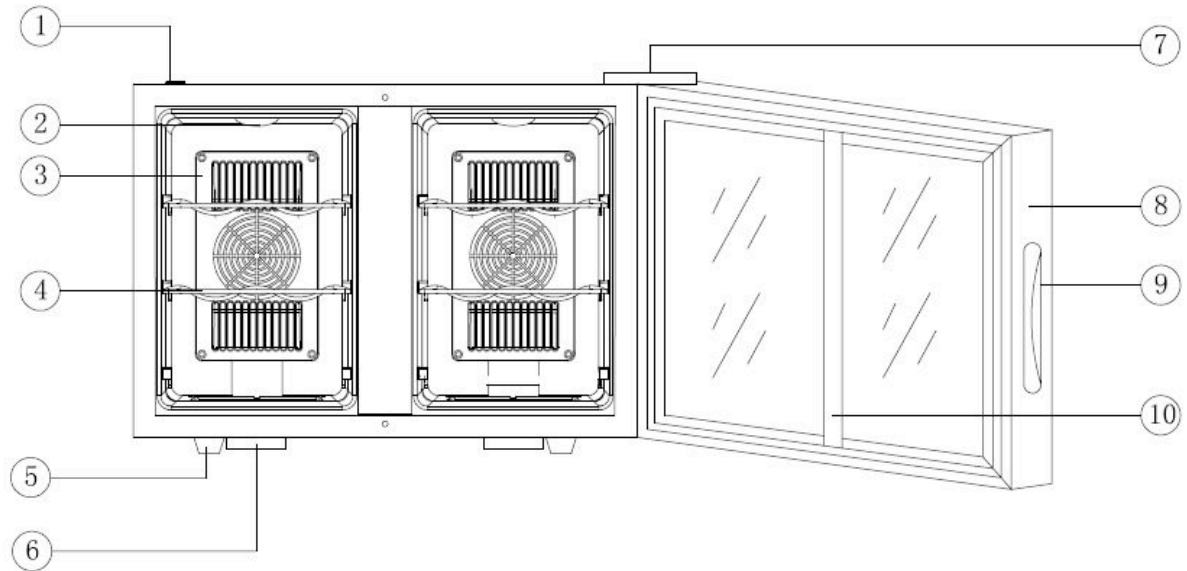

1. Hinge Hole Cover
2. LED Light
3. Cold Sink Fan Cover
4. Shelves (4)
5. Leveling Leg

6. Water Drip Tray(2)
7. Upper Hinge Cover
8. Double Panel Glass Door
9. Recessed Handle
10. Door Seal

IMPORTANT SAFETY INSTRUCTIONS

⚡ WARNING ⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<ul style="list-style-type: none">∞ Read all instructions before using the Wine Cellar.∞ DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous . . . even if they will “just sit in the garage a few days”.∞ Before you throw away your old wine cellar: Take off the door. Leave the shelves in place so that children may not easily climb inside.∞ Never allow children to operate, play with, or crawl inside the appliance.∞ Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.∞ Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.∞ Do not repair or replace any part of the wine cellar or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions. Replace the fuse with the same type. <p style="text-align: center;">-Save these instructions-</p>	

INSTALLATION INSTRUCTIONS

➤ **Before Using Your Wine Cellar**

- ∞ Remove the exterior and interior packing.
- ∞ Check to be sure you have all of the following parts:
 - ∞ 4 Shelves
 - ∞ 1 Instruction Manual
- ∞ Clean the interior surface with lukewarm water using a soft cloth.

➤ **Installation of Your Wine Cellar**

- ∞ This appliance is designed to be free standing installation only, and should not be recessed or built-in (fully recessed).
- ∞ Place your wine cellar on a floor or countertop that is strong enough to support it when it is fully loaded.
- ∞ Allow 5 inches of space between the back and sides of the wine cellar, which allows the proper air circulation for proper cooling.
- ∞ Locate the wine cellar away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- ∞ This wine cellar uses thermoelectric refrigeration technology (no compressor) and is not designed for storage in hot areas like garages, warehouses or outdoors since it is designed to operate at a maximum of 30 degrees below the ambient temperature.
- ∞ Avoid locating the unit in moist areas.
- ∞ Plug the wine cellar into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.
- ∞ After plugging the appliance into a wall outlet, allow the unit to cool down for 2-3 hours before

placing any items in the compartment.

➤ **Electrical Connection**

⚡ Warning ⚡

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized service center.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.

This appliance requires a standard 115/120 Volts A.C. ~/60Hz electrical outlet with three-prong ground.

 
The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

Do not use an adapter plug with this appliance.




 


Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

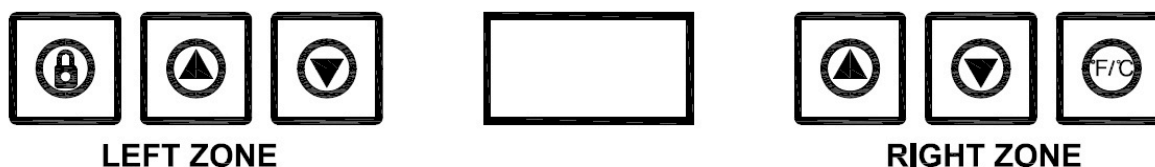OPERATING YOUR WINE CELLAR

➤ Temperature Control



➤ Setting the Temperature Control

- ∞ Your wine cellar has two controls for regulating the temperature of two zones. The temperature controls are located on the upper portion of the glass door.
- ∞ The temperature will range from 46-65 Fahrenheit degree for both zones. When initially turned on, the LCD will display the ambient temperature, then the internal cabinet temperature.
- ∞ You can set the temperature for each zone (Left and Right) as you desire by pushing the  or  button on the control panel for each zone. The temperature that you desire to set will increase 1°F or 1°C if you push  button once, on the contrary the temperature will decrease 1°F or 1°C if you push  button once.
- ∞ After you set your desired temperature, the set temperature numerals will flash for 5 seconds and then revert to the internal cabinet temperature.
- ∞ You could touch  to turn ON / OFF the interior light, and  to change the display between Fahrenheit and Celsius.

NOTICE:

You cannot adjust the temperature while the display is flashing. Wait until the flashing stops to change temperatures.

➤ Storage Capacity

NOTE: You can place 12 standard bottles in this Wine Cellar.

Many bottles may differ in size and dimensions. As such the actual number of bottles you may be able to store may vary. Bottle capacities are approximate maximums when storing traditional Bordeaux 750ml bottles and include bulk storage.

CARE AND MAINTENANCE

➤ Cleaning Your Wine Cellar

- ∞ UNPLUG the wine cellar, and remove all items including shelves.
- ∞ Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- ∞ Wash the shelves with a mild detergent solution.
- ∞ Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- ∞ Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

CAUTION

Failure to unplug the wine cellar could result in electrical shock or personal injury.

➤ Power Failure

- ∞ Most power failures are corrected within a few hours and should not affect the temperature of

your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

➤ **Vacation Time**

- ∞ **Short vacations:** Leave the wine cellar operating during vacations of less than three weeks.
- ∞ **Long vacations:** If the appliance will not be used for several months, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

➤ **Moving Your Wine Cellar**

- ∞ Remove all bottles.
- ∞ Securely tape down all loose items (shelves) inside your appliance.
- ∞ Tape the door shut.
- ∞ Protect outside of appliance with a blanket, or similar item.

➤ **Energy Saving Tips**

- ∞ The wine cellar should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- ∞ One characteristic of thermoelectric units is the length of time it requires to recover from having the door opened and shut frequently. It may be necessary to wait longer for the temperature to return to its former level once the door has been opened for too long. This is normal for the type of unit.
- ∞ Thermoelectric technology costs just pennies to operate. It is environmentally friendly due to the lack of CFC's.

PROBLEMS WITH YOUR WINE CELLAR?

You can solve many common wine cellar problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine Cellar does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Wine Cellar is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The wine cellar does not have the correct clearances. Abnormal voltage.
The light does not work.	Not plugged in. The circuit breaker tripped or a blown fuse. Push light button again properly.
Vibrations.	Check to assure that the Wine Cellar is level.
The door will not close properly.	The wine cellar is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

WIRING DIAGRAM

Warranty

Please speak to your Retailer before calling Wine Enthusiast if you did not purchase your Wine Cellar directly from Wine Enthusiast.

Limited Warranty – 1 year, on all parts and labor from the date of shipment. For customer service, please contact Wine Enthusiast by e-mail (custserv@WineEnthusiast.net) or by phone (800.648.6058).

The limited warranty does not cover: Damage due to such things as accident, misuse, abuse, mishandling, neglect, unauthorized repair or any other cause beyond the control of the seller whether similar or dissimilar to the foregoing.