



76222 - TELESCOPING GRILL BRUSH

To Use:

Grasp the large handle with one hand and the head of the brush with another. Turn the handle counter-clockwise about a ¼ turn to loosen and allow for expansion or contraction. When you have reached the desired length, turn the handle in a clockwise direction until tight or about a ¼ turn.

To Remove and Replace Cleaning Head:

Expand the grill brush until the narrower aluminum tube that connects to the head is widely exposed. Grasp the narrower aluminum tube with one hand and the head of the brush with another. Turn the aluminum tube clockwise ¼ turn until the OPEN arrow on the tube aligns with the arrow on the cleaning head. Slide head outward to remove. Replace with a new cleaning head. Grasp the narrower aluminum tube with one hand and the head of the brush with another. Turn the aluminum tube counter-clockwise ¼ turn until the CLOSED arrow on the tube aligns with the arrow on the cleaning head.

