


76356 - BEACH GRILL

Instructions:

1. Unfold flat chimney starter and set upright into square formation.
2. Secure inner grate (smaller grate) by pushing down and securing into the 4 tabs on the inside of the chimney starter.
3. Rotate orange nylon handle until it locks into place at a 90 degree angle from the chimney starter.
4. Hook helper handle to chimney starter.
5. If using as a grill, have the cooking grate (larger grate) ready for use and follow the "TO USE AS GRILL" portion of these instructions.

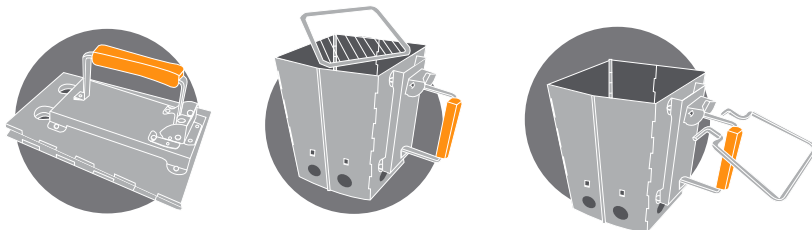

To Use as a Grill:

1. Assemble product fully.
2. Place crumpled newspaper in bottom of chimney, under the charcoal grate.
3. Place chimney on a non-combustible surface such as a dirt surface or beach.
4. Fill with desired amount of charcoal. Start with 15 briquettes & experiment with the proper amount for your cooking needs. You can easily add or remove charcoal based on the temperature you are achieving at the grill grate surface.
5. Light crumpled newspaper through holes in bottom of device.
6. Place cooking grate on top of device so that it heats up.
7. Allow coals to heat 7-15 minutes, depending on how much charcoal you are using.
8. You are ready to grill when coals are glowing and are evenly coated with a layer of gray ash.

