



Your B6070 - BACnet/IP to Utility Meters must be configured before use!

Access the B6070 configuration screen using your browser. Here is an explanation of how to do this. Connect the B6070 Ethernet connector to an Ethernet hub, and run another Ethernet cable from that hub to your laptop or PC. Make sure that the laptop or PC is the *only* other unit in this small LAN. **NOTE:** If you do not have a hub, you can use a "crossover cable" to connect between the B6070 and your laptop.

Set your PC's IP address to **192.168.88.90** with a subnet mask of **255.255.255.252**. Open your browser and enter the following URL: <http://192.168.88.89/admin>

You will be prompted to login:
User = admin password = admin

For improved access security, you should change your password from the default values. **Make sure you SAVE your new password!** When you click on "Save and Reboot" and "confirm" the configuration process is completed. If you lose your password, Cimetrics **DOES NOT** have a default password.

Now disconnect your laptop and connect the B6070 into your BACnet networks.

Please note that the B6070 device is always available (does not matter if you have changed the IP address in the TCP/IP and BACnet Configuration page) at the above-mentioned IP address.

