 


CLEANING & MAINTENANCE

 
TAPER BLADE CLEANING



1 Clear the blade with the cleaning brush.

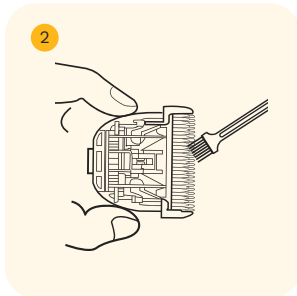

2 The blade can be removed for cleaning.

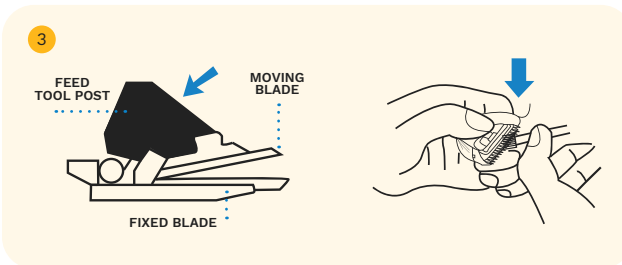

3 The white moving blade can be clicked down, and then you can clean the hair between the moving blade and the fixed blade

PRECAUTIONS & WARRANTY

⚠ WARNING: This product is forbidden for use on genital hair. We are not responsible for any physical injury caused by this product. This product is forbidden to trim the hair of pets. We are not responsible for pet injury or equipment failure.

- Please do not disassemble product.
- Product is IPX6 washable and can be rinsed under a faucet. Do not submerge in water.
- Please do not use alcohol/petrol/toluene to clean or maintain it.
- Do not charge in extreme temperatures above 104°F or below 30°F.
- The product can produce a little heat during use or charging.
- Please remove the battery safely and recycle or dispose properly when the battery runs out. Never discard casually.

PRODUCT RETURNS

1. RETURN POLICY

We take pride in The Cut Buddy™ products and want you to be happy using them. All of our products carry a 30-day return policy. If you are not satisfied with a product you purchased from THECUTBUDDY.com, you can return it for a refund within 30 days of your receipt of the product.

Please note, if you ordered a kit or bundled package, such as the 35 Piece Beginners Kit or the 3 Step Ingrown Hair Shave Bundle, it must be returned in its entirety. We are unable to accept partial returns for individual products within a package.

For products purchased from an authorized dealer, their return policy applies — please contact them directly for more information. To the extent allowed by applicable law, products purchased from an unauthorized retailer are not covered by our return policy.

2. RETURNS PROCESS.

Refunds will be returned to the original form of payment. For exchanges, return your product for a refund and place a new order on THECUTBUDDY.com for the correct item. For warranty claims, see the PRODUCT LIMITED WARRANTY section below.

To initiate your refund request, please visit our Contact Us page, select "Returns" from the page, and complete the rest of the form with your order details. Alternatively, you can contact our customer support team via email at: info@thecutbuddy.com. In your email, be sure to include: (1) your name, (2) Order Number, (3) the product(s) you wish to return, and (4) a brief summary of your reason for return. If your request is timely, complete, and not rejected for suspected fraud, abuse, or other reasons described below, we will issue you a Return Material Authorization (RMA) tracking number.

We reserve the right to limit returns, and to track returns initiated from the same name, email address, billing address, mailing address, or IP address. If we believe that a customer or potential customer has been or is likely to take advantage of our return policy, or otherwise purchase products for reasons other than personal use, we reserve the right to deny sales or returns to any customer.

PRODUCT LIMITED WARRANTY

1. LIMITED WARRANTY.

We warrant solely to the person who originally purchased the products listed below, that those products will be free from defects in workmanship and materials for their applicable Warranty Period, subject to these conditions. The warranty does not cover (i) normal wear and tear, (ii) defects caused by third-party modifications, repairs, replacement parts, or accessories, (iii) misuse, misapplication, negligence, or failure to maintain or use in accordance with the product's instructions, or (iv) purchased,

delivered, or used outside of the United States.

To approve your warranty claim, the following conditions must be met: (a) you must have purchased the product from THECUTBUDDY.com or an authorized THE CUT BUDDY™ dealer; (b) you must provide proof of your product purchase date; (c) if requested, you must return the product to THE CUT BUDDY™; and (d) you must have used the product only as intended and in accordance with the product's instructions.

If a defect occurs under these circumstances and during the Warranty Period, we will repair or replace, at our discretion, the defective product or part, as the sole and exclusive remedy for any approved warranty claim. We may not be able to replace discontinued products. If not, we will replace these products with an equivalent model based on availability. We may make changes to products and designs in the time you purchased your product and submitted a warranty claim. Products repaired or replaced under this warranty may or may not incorporate these changes.

2. WARRANTY PERIODS.

1 YEAR WARRANTY PERIOD FROM DATE OF PURCHASE

3. WARRANTY CLAIM PROCESS.

To initiate a warranty claim, please visit our Contact Us page, select "Warranty/Replacement" from the page, and complete the rest of the form with all requested details. Alternatively, you can contact our customer support team at: info@thecutbuddy.com and provide at least the following information: (a) product purchased, (b) Order Number (if you purchased directly from THECUTBUDDY.com), (c) name of seller (if product was purchased from an authorized THE CUT BUDDY™ dealer), (d) proof of product purchase date, (e) whether the package is opened or unopened, and (f) a brief description of the problem you are experiencing. If your claim information is confirmed as complete and timely, we will issue you a Return Material Authorization (RMA) tracking number. If requested to return your product to THE CUT BUDDY™,

we will provide a prepaid shipping label to you. Once we receive and inspect your returned product, we will send you an email to let you know that we have received your product and are processing your request. We generally will notify you of our decision regarding your warranty claim within 5 to 7 business days after receiving your product.

4. WARRANTY DISCLAIMER.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THE LIMITED WARRANTY PROVIDED ABOVE. IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. UNDER NO CIRCUMSTANCES OR ANY THEORY OF RECOVERY, WHETHER FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, OR OTHER TORT, OR ANY STRICT LIABILITY THEORY, WILL THE CUT BUDDY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No THE CUT BUDDY™ reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty. This warranty does not apply if you purchased your product other than directly from our website or an authorized retailer.



If you have any questions about the product, please feel free to contact us and we will reply to you within 24 hours.



Let's Connect
@thecutbuddy



BEGINNERS CLIPPER

CORDLESS HAIR & BEARD CLIPPER

 


USER MANUAL

Model – 2006

COMPONENTS

- Ceramic blade with acute angle
- 5-speed fine-tuning for the blade
- Switch/lock function
- 3-speed regulating switch
- LCD battery display (00-99)
- USB Plug

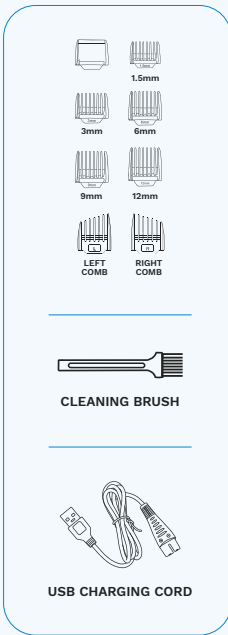

PARAMETERS

Professional Hair Clipper	Motor	Operating voltage: 3.7V Centering material: anti-wear brass
	Battery	1200 mA Li-ion battery Charging time: about 2 hours Operating time on full charge: 220 minutes
		USB Charging

FEATURES

- REMAIN POWER 99** Battery percentages display (00-99)
- CHILD PROTECTIVE LOCKS** Press 3 seconds to automatically lock, then press 3 seconds to open directly

HOW TO CHARGE

 
The product will lock automatically by pressing the switch 3 seconds, and it can be opened directly after pressing the switch 3 seconds. The button below switch is used to adjust speed. High, middle and low speeds are included.

- 1 Plug the charging cable into the clipper, plug usb into 5V1A usb adapter (computer/PC/power bank/car charger).
- 2 The digital LCD dynamically displays charging status.
- 3 Plug the adapter plug into an electrical outlet after confirming that the clipper power is off.



FIXED LENGTH FUNCTION

SELECT APPROPRIATE GUIDE COMB

The different sized attachments work as guide combs which can meet all your requirement of different haircut length (the left and right combs can help you control the trimming orientation and make your hair stylish). The attachments also work as guard combs which make cutting your hair safe and easy.

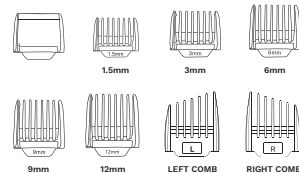

  Multiple sizes to get the job done right!

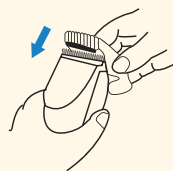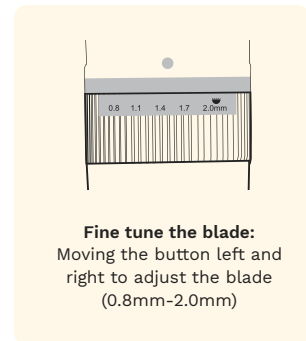


Guards installation: As pictured, hold both sides and push until grooves align and pop into position.


Guards dismantle: Remove the butted positions with hands on its both sides and then remove the comb.

BLADE REMOVAL & INSTALLATION

 BLADE REMOVAL

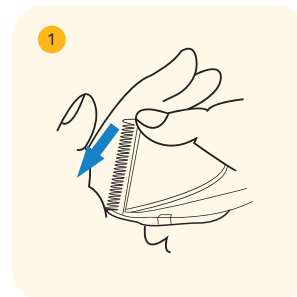


 Press down the moving blade with the thumb and then remove the blade.

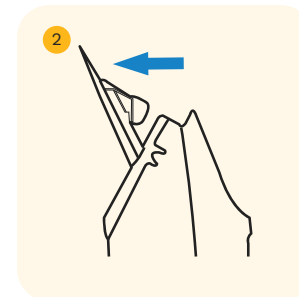


Make sure to hold with the other hand to avoid the blade falling off.

 
BLADE INSTALLATION

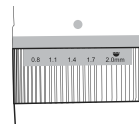

 Set the adjustable ring to 2.0mm before installing the blade.

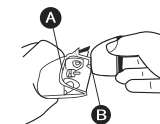

 Direct the blade (B) at the hair clipper's slot (A) and plug in.

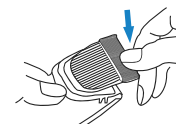

Push the blade down until it clicks.

RETURNS & WARRANTY

PRODUCT RETURNS

1. RETURN POLICY

We take pride in The Cut Buddy™ products and want you to be happy using them. All of our products carry a 30-day return policy. If you are not satisfied with a product you purchased from THECUTBUDDY.COM, you can return it for a refund within 30 days of your receipt of the product.

Please note, if you ordered a kit or bundled package, such as the 35 Piece Beginners Kit or the 3 Step Ingrown Hair Shave Bundle, it must be returned in its entirety. We are unable to accept partial returns for individual products within a package.

For products purchased from an authorized dealer, their return policy applies—please contact them directly for more information. To the extent allowed by applicable law, products purchased from an unauthorized retailer are not covered by our return policy.

2. RETURNS PROCESS

Refunds will be returned to the original form of payment. For exchanges, return your product for a refund and place a new order on THECUTBUDDY.COM for the correct item. For warranty claims, see the PRODUCT LIMITED WARRANTY section below.

To initiate your refund request, please visit our Contact Us page, select “Returns” from the page, and complete the rest of the form with your order details. Alternatively, you can contact our customer support team via email at: info@thecutbuddy.com. In your email, be sure to include: (1) your name, (2) Order Number, (3) the product(s) you wish to return, and (4) a brief summary of your reason for return. If your request is timely, complete, and not rejected for suspected fraud, abuse, or other reasons described below, we will issue you a Return Material Authorization (RMA) tracking number.

We reserve the right to limit returns, and to track returns initiated from the same name, email address, billing address, mailing address, or IP address. If we believe that a customer or potential customer has been or is likely to take advantage of our return policy, or otherwise purchase products for reasons other than personal use, we reserve the right to deny sales or returns to any customer.

PRODUCT LIMITED WARRANTY

1. LIMITED WARRANTY

We warrant solely to the person who originally purchased the products listed below, that those products will be free from defects in workmanship and materials for their applicable Warranty Period, subject to these conditions. The warranty does not cover (i) normal wear and tear, (ii) defects caused by third-party modifications, repairs, replacement parts, or accessories, (iii) misuse, misapplication, negligence, or failure to maintain or use in accordance with the product’s instructions, or (iv) purchased, delivered, or used outside of the United States.

To approve your warranty claim, the following conditions must be met: (a) you must have purchased the product from THECUTBUDDY.COM or an authorized THE CUT BUDDY™ dealer; (b) you must provide proof of your product purchase date; (c) if requested, you must return the product to THE CUT BUDDY™; and (d) you must have used the product only as intended and in accordance with the product’s instructions.

If a defect occurs under these circumstances and during the Warranty Period, we will repair or replace, at our discretion, the defective product or part, as the sole and exclusive remedy for any approved warranty claim. We may not be able to replace discontinued products.

If not, we will replace these products with an equivalent model based on availability. We may make changes to products and designs in the time you purchased your product and submitted a warranty claim. Products repaired or replaced under this warranty may or may not incorporate these changes.

2. WARRANTY PERIODS

1 YEAR WARRANTY PERIOD
FROM DATE OF PURCHASE

BALD BUDDY REPLACEMENT HEAD
SUBSCRIPTION MEMBER WARRANTY PERIOD

Bald Buddy Replacement Head members are eligible for a special Warranty, subject to the conditions below. If you are an: (a) active Replacement Head Subscription member who has (b) received a replenishment box within 90 days of submitting a warranty claim, we will honor up to one warranty claim in any 12-month period on the following products: The Bald Buddy® Shaver

3. WARRANTY CLAIM PROCESS

To initiate a warranty claim, please visit our Contact Us page, select “Warranty/Replacement” from the page, and complete the rest of the form with all requested details. Alternatively, you can contact our customer support team at: info@thecutbuddy.com and provide at least the following information: (a) product purchased, (b) Order Number (if you purchased directly from THECUTBUDDY.COM), (c) name of seller (if product was purchased from an authorized THE CUT BUDDY™ dealer), (d) proof of product purchase date, (e) whether the package is opened or unopened, and (f) a brief description of the problem you are experiencing. If your claim information is confirmed as complete and timely, we will issue you a Return Material Authorization (RMA) tracking number.

If requested to return your product to THE CUT BUDDY™, we will provide a prepaid shipping label to you. Once we receive and inspect your returned product, we will send you an email to let you know that we have received your product and are processing your request. We generally will notify you of our decision regarding your warranty claim within 5 to 7 business days after receiving your product.

4. WARRANTY DISCLAIMER

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THE LIMITED WARRANTY PROVIDED ABOVE. IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. UNDER NO CIRCUMSTANCES OR ANY THEORY OF RECOVERY, WHETHER FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, OR OTHER TORT, OR ANY STRICT LIABILITY THEORY, WILL THE CUT BUDDY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No THE CUT BUDDY™ reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty. This warranty does not apply if you purchased your product other than directly from our website or an authorized retailer.

Last Updated: July 21, 2022



IPX4

Model: V-806

Power: Dc 5V 5W

Lithium battery: 1200mAh

Charging time: 2 hours

info@thecutbuddy.com

©2022 The Cut Buddy

THECUTBUDDY.COM



Let's Connect
[@thecutbuddy](https://www.thecutbuddy.com)



TRIM BUDDY

ADJUSTABLE HAIR & BEARD TRIMMER



USER MANUAL

RoHS CE

MADE IN CHINA

TRIM BUDDY

ADJUSTABLE HAIR & BEARD TRIMMER



ON/OFF

BLADE

SHAPING GUIDE



USB POWER CORD

POWER PORT

FOUR GEAR POSITIONS

- 0.2mm
- 0.9mm
- 1.6mm
- 2.3mm

LCD DISPLAY

HOW TO USE THE TRIM BUDDY

- 1 Make sure hair or beard are clean and dry when being cut
- 2 Let the trimmer run for a short time before starting to trim
- 3 Align guard comb teeth with trimmer blades and then pop guard into place
- 4 Slide the cutting head with a slight tilt over your skin without applying pressure to trim your hair or beard
- 5 Only cut small amounts of hair at a time (the cutting head will jam if you try to work too quickly or try to cut too much hair at one time)
- 6 Cut the hair progressively until you reach the desired length
- 7 Finely trim hair by using cutting head without attachment



CARING FOR YOUR TRIMMER

CLEANING

- Disconnect the power cord from the trimmer
- Remove the comb attachment
- Clean the main body of the beard trimmer with a damp cloth
- Brush the hair from the main body of the device and from around the blade

STORING

- Store the trimmer and power cable in a dry area with low humidity and away from direct sunlight and other heat sources
- Keep the oil and brush away from children

OILING

- Oil the trimmer head from time-to-time if you use the trimmer regularly
- Use non-corroding oil, such as sewing machine oil
- Remove the comb attachment
- Apply 1-2 drops of oil between the cutting teeth
- Turn the trimmer briefly on and off to distribute the oil
- Remove any excess oil by wiping with a cloth

BATTERY DISPOSAL

The battery used in this device contains materials that will pollute the environment. If you need to dispose, please dismantle the battery and turn it in to a government-designated collection place.

Before dismantling the battery, ensure the trimmer is unplugged and does not retain any electricity (turn on the shaver until the motor stops.)

To remove the battery, loosen the rear cover with a screwdriver and dismantle the battery with an electric iron. After dismantling the battery, do not connect the shaver and its charging plug to the AC outlet.



SAFETY INSTRUCTIONS

⚠️ TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE, OR INJURY

- Children over 8 years of age and people without the necessary knowledge or experience or those with physical, mental, or sensory disabilities can use this device if they have received proper instructions and are supervised and understand the dangers involved in their use. Children should be supervised so they do not play with the device. Cleaning and maintenance should not be carried out by children, unless they are over 8 years old and supervised. Keep the trimmer and its accessories out of the reach of children under 8 years of age. Do not leave plastic bag or packaging items within reach of children.
- This device is only intended for clipping human scalp hair and for trimming and grooming the human beard, mustache, sideburns, nose hair and ear hair. Do not use it for another purpose. Never use on eyelashes.
- The device must only be supplied with a very low safety voltage indicated in the technical specifications and marked on the device. Otherwise, you may damage the device. Check if the voltage indicated on the device corresponds to the voltage of the local network before connecting the device.
- Do not use or recharge trimmer near bathtubs, showers, buckets, or other containers of water, as the proximity of the water can be dangerous even if it is not running. Never immerse the trimmer or charging cable in liquid or rinse it under the tap. Do not plug in or unplug the trimmer with wet hands. Do not use trimmer if it has fallen into water, or try to catch the trimmer if it has fallen into water—unplug it immediately from the socket. Make sure that the plug, power cord, and trimmer do not get wet. Place and use the trimmer on a surface that is resistant to liquids.
- Keep the trimmer, plug, and power cord away from hot surfaces.
- Charge, use, and store the trimmer in a place between 60° and 95° F (15°-35° C) or it will not charge efficiently. If the trimmer is subjected to a major change in temperature, pressure, or humidity, let it acclimatize for 30 minutes before using.
- Do not use the trimmer, power cable, or any other component if damaged. It must be replaced by the manufacturer, by its after-sales service or by similar qualified personnel in order to avoid danger. Do not use the trimmer when one of the attachments or combs is damaged or broken as this may cause injury. Only use the USB line supplied to charge the appliance. If the USB line is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Place the appliance and its charger on a stable surface while charging. Do not twist or wrap the cable around the device. Do not leave the trimmer unattended when it is plugged into an outlet, unless it is charging, and keep it out of reach of children especially during charging. Do not over-charge the device, as this may damage the battery.
- Do not disassemble the unit as this may cause serious injury. The battery must be disposed of correctly (see section regarding battery disposal).
- Place the trimmer and its charger on a stable surface while charging. Do not twist or wrap the cord around the device.
- Ensure the trimmer is switched off, unplugged, and removed from the charging cable before cleaning. Do not touch the moving parts of the trimmer in operation.

CLEANING & CARING FOR YOUR SHAVER

AFTER USE OF SHAVER

- Clean the shaver heads regularly by removing the loose stubble by rinsing under the faucet, or in a cup of rotary and foil cleaner solution.
- Clean whole unit with a soft damp cloth, do not use strong detergents or chemicals.
- To dry, wipe clean with a dry towel.
- Do not use hair dryer or heater to dry shaver.

CLEANING YOUR SHAVER

- When cleaning your shaver, make sure charging cable is disconnected from the unit.
- Cleaning the shaver heads after each use could extend blade & appliance life.
- This shaver's waterproof design can be rinsed under running water, but do not soak it under water for a long period as this will damage the shaver.
- Once finished shaving, it is recommended to rinse shaver heads while running after each use under running water to clean away stubble. Do not use very scalding hot water to wash heads. You can also deep clean in a cup of Rotary and Shaver cleaner solution. Just turn on shaver and dip only the shaver heads in a small cup filled with the solution, or, if you just

want to just quickly rinse the shaver, you can use just water. It is recommended to use rotary and foil shaver cleaner to disinfect blades properly. These cleaners can be found on Amazon.

- IPX5 Rating

IMPORTANT: When the shaver blade load reaches to limitation, the unit will turn off with three indicators flashing for 10 seconds. Click the button to restart the unit. It's time to clean or replace the shaver head.

SUBSCRIBE TO SAVE MONEY & TIME

Save up to 20% by signing up to our Replacement Blade Subscription Plan.

Replacement Blade subscription extends your shavers warranty for as long as you are a subscription member!

We recommend always having an extra blade replacement on hand. The blades usually stay sharp for up to 3 months, sometimes longer, depending on how it is used.

SUBSCRIBE AT
THECUTBUDDY.COM

REPLACING SHAVING HEAD

1. The blades usually stay sharp for up to 3 months, sometimes longer, depending on how it is used.
2. To replace the head simply hold the head tightly with one hand and the shaver handle with the other hand.
3. Detach the head by tugging the head out of the shaver handle. Do not twist or squeeze head to remove.
4. Push new replacement head by aligning the groove with the shaver and pushing inwards until you hear a click.

IMPORTANT: When the shaver blade load reaches to limitation, the unit will turn off with three indicators flashing for 10 seconds. Click the button to restart the unit. It's time to clean or replace the shaver head.



Let's Connect
@thecutbuddy



PRODUCT RETURNS

1. RETURN POLICY

We take pride in The Cut Buddy™ products and want you to be happy using them. All of our products carry a 30-day return policy. If you are not satisfied with a product you purchased from THECUTBUDDY.COM, you can return it for a refund within 30 days of your receipt of the product.

Please note, if you ordered a kit or bundled package, such as the 35 Piece Beginners Kit or the 3 Step Ingrown Hair Shave Bundle, it must be returned in its entirety. We are unable to accept partial returns for individual products within a package.

For products purchased from an authorized dealer, their return policy applies — please contact them directly for more information. To the extent allowed by applicable law, products purchased from an unauthorized retailer are not covered by our return policy.

2. RETURNS PROCESS

Refunds will be returned to the original form of payment. For exchanges, return your product for a refund and place a new order on THECUTBUDDY.COM for the correct item. For warranty claims, see the PRODUCT LIMITED WARRANTY section below.

To initiate your refund request, please visit our Contact Us page, select "Returns" from the page, and complete the rest of the form with your order details. Alternatively, you can contact our customer support team via email at: info@thecutbuddy.com. In your email, be sure to include:

(1) your name, (2) Order Number, (3) the product(s) you wish to return, and (4) a brief summary of your reason for return. If your request is timely, complete, and not rejected for suspected fraud, abuse, or other reasons described below, we will issue you a Return Material Authorization (RMA) tracking number.

We reserve the right to limit returns, and to track returns initiated from the same name, email address, billing address, mailing address, or IP address. If we believe that a customer or potential customer has been or is likely to take advantage of our return policy, or otherwise purchase products for reasons other than personal use, we reserve the right to deny sales or returns to any customer.

PRODUCT LIMITED WARRANTY

1. LIMITED WARRANTY

We warrant solely to the person who originally purchased the products listed below, that those products will be free from defects in workmanship and materials for their applicable Warranty Period, subject to these conditions. The warranty does not cover (i) normal wear and tear, (ii) defects caused by third-party modifications, repairs, replacement parts, or accessories, (iii) misuse, misapplication, negligence, or failure to maintain or use in accordance with the product's instructions, or (iv) purchased, delivered, or used outside of the United States.

To approve your warranty claim, the following conditions must be met: (a) you must have purchased the product from THECUTBUDDY.COM or an authorized THE CUT BUDDY™ dealer; (b) you must provide proof of your product purchase date; (c) if requested, you must return the product to THE CUT BUDDY™; and (d) you must have used the product only as intended and in accordance with the product's instructions.

If a defect occurs under these circumstances and during the Warranty Period, we will repair or replace, at our discretion, the defective product or part, as the sole and exclusive remedy for any approved warranty claim. We may not be able to replace discontinued products. If not, we will replace these products with an equivalent model based on availability. We may make changes to products and designs in the time you purchased your product and submitted a warranty claim. Products repaired or replaced under this warranty may or may not incorporate these changes.

2. WARRANTY PERIODS

1 YEAR WARRANTY PERIOD FROM DATE OF PURCHASE

BALD BUDDY REPLACEMENT HEAD SUBSCRIPTION MEMBER WARRANTY PERIOD

Bald Buddy Replacement Head members are eligible for a special Warranty, subject to the conditions below. If you are an: (a) active Replacement Head Subscription member who has (b) received a replenishment box within 90 days of submitting a warranty claim, we will honor up to one warranty claim in any 12-month period on the following products: The Bald Buddy® Shaver

3. WARRANTY CLAIM PROCESS

To initiate a warranty claim, please visit our Contact Us page, select "Warranty/Replacement" from the page, and complete the rest of the form with all requested details. Alternatively, you can contact our customer support team at: info@thecutbuddy.com and provide at least the following information: (a) product purchased, (b) Order Number (if you purchased directly from THECUTBUDDY.COM), (c) name of seller (if product was purchased from an authorized THE CUT BUDDY™ dealer), (d) proof of product purchase date, (e) whether the package is opened or unopened, and (f) a brief description of the problem you are experiencing. If your claim information is confirmed as complete and timely, we will issue you a Return Material Authorization (RMA) tracking number. If requested to return your product to THE CUT BUDDY™, we will provide a prepaid shipping label to you. Once we receive and inspect your returned product, we will send you an email to let you know that we have received your product and are processing your request. We generally will notify you of our decision regarding your warranty claim within 5 to 7 business days after receiving your product.

4. WARRANTY DISCLAIMER

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THE LIMITED WARRANTY PROVIDED ABOVE. IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. UNDER NO CIRCUMSTANCES OR ANY THEORY OF RECOVERY, WHETHER FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, OR OTHER TORT, OR ANY STRICT LIABILITY THEORY, WILL THE CUT BUDDY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No THE CUT BUDDY™ reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty. This warranty does not apply if you purchased your product other than directly from our website or an authorized retailer.



BALD BUDDY™

Rechargeable C-type plug • Wet/Dry

Model – SKU4000 Bald Buddy

Contact: info@thecutbuddy.com

©2022 The Cut Buddy

THECUTBUDDY.COM



BALD BUDDY™

ERGONOMIC • WET & DRY SHAVER



THE CUT BUDDY

USER MANUAL

Model – SKU4000

NEED MORE INFORMATION? Tutorials on how to use, clean and replace heads of your products are on the "HOW TO" page on THECUTBUDDY.COM

Last Updated: July 21, 2022

BALD BUDDY™

ERGONOMIC • WET & DRY SHAVER

The Bald Buddy shaver allows you to shave every inch of your head, even those hard-to-reach areas you can't see (the back of your head) with ease! The patented ergonomic grip provides control for a smooth and enjoyable shaving experience. Some other Bald Buddy features include:

STAINLESS FOIL
Dual precision foil with slots to trap stubble and protect skin



5-BLADE ROTARY HEAD
3D contouring shaving system adjusts to your skin

SOFT-TOUCH ON/OFF SWITCH
Designed for your hand with a convenient power button

ERGONOMIC HANDLE
Designed for comfort and easy handling

BATTERY INDICATOR
Know when your battery power is getting low

 
C-TYPE PLUG/USB
Charge the shaver any place, any time

ⓘ If one of these CB circular caps fall out, do not panic! Your shaver works the exact same without them.

FOR BEST SHAVING EXPERIENCE

While The Bald Buddy is designed for both wet and dry shaving, understand that **NOT ALL PEOPLE SHOULD DRY SHAVE!**

If you are interested in dry shaving, please see our suggestions:

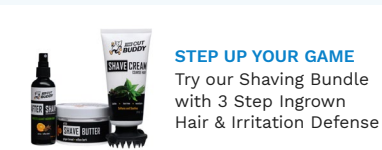

STEP UP YOUR GAME
Try our Shaving Bundle with 3 Step Ingrown Hair & Irritation Defense

	DRY SHAVING (NO WATER OR SHAVING CREAM) CAN WORK WELL FOR YOU IF...	WET SHAVING (WITH WATER OR SHAVING CREAM) IS RECOMMENDED FOR YOU IF...
Hair Type	Thinner hair	Thick, curly, coarse, tough
Head Shape	Rounder head shape	Different contours
Ingrown Hairs	You don't suffer from ingrown hairs	Frequent ingrown hairs
Skin	You have hydrated skin	Dryer skin
Frequency	You shave daily	You shave every 2 days or less
Rotary Shaving Experience	You usually only need 1 pass of shaver to finish the job	You usually need 2 passes of shaver. Small circular patterns as you shave

IMPORTANT:

- Do not use on thickened head hair (ex: eyebrows); only recommended for use on clean, lotion-free skin. It is highly recommended to exfoliate your skin before shaving.
- Do not disassemble unit to avoid breaking seals and allowing moisture to enter the shaver.
- Use this shaver only for the purposes described in this manual.
- Do not use unit in the bathtub or pool. The unit's waterproofing is suitable only for shower use, rinsing, and cleaning of unit.
- For hygienic reasons, the blades should only be used by one person.

If more than one person is using shaver, **purchasing extra blades is highly recommended.**

- Disposable blade replacement is **recommended every 3 months.**
- To prevent damage or injuries when using the shaver, **use the unit away from your eyebrows, eye lashes, clothes, threads, and all loose objects.**
- Do not use unit if you see any damage to the shaver head** or if it appears to be broken. This may cause injury. Always order a new blade if you drop or damage the shaver head.
- Do not use the appliance on irritated skin or skin with varicose veins, rashes, spots, moles or wounds** without consulting a doctor first.

HOW TO USE YOUR BALD BUDDY™



USE ON HEAD & BODY

- Remove protective cap.
- Press the on/off switch to turn on.
- Place the shaving head on desired area and shave in a short circular motion.
- Keep all heads touching the skin with equal light pressure. For tougher spots (back left or right side of head), concentrate only 1 or 2 blades in small circular patterns.
- Shave as fast or slow as you desire.
- Rinse shaver after every full pass of head or body area for best performance.



USE ON FACE

- Remove protective cap.
- Press the on/off switch to turn on.
- Place the shaver at a right angle to the skin so all heads are touching skin with equal pressure.
- Puff up skin (making cheeks flat) to give shaver easier glide surface.
- Use short circular strokes and apply light pressure to shave the face.
- Rinse shaver after every full pass of face area for best performance.



- Trim down longer hairs before using on facial hair.**
- Do not use very scalding hot water to wash heads.** You can also deep clean in a cup of Rotary and Shaver cleaner solution. Just turn on shaver and dip only the shaver heads in a small cup filled with the solution, or, if you just want to just quickly rinse the shaver, you can use just water.
- It is recommended to use rotary and foil shaver cleaner to disinfect blades properly.** These cleaners can be found on Amazon.
- We recommend to rinsing shaver heads after each use** to clean away stubble.



CHARGING ⚡

- Fully charge the product before using the appliance for the first time, or if it has not been used in quite a while. (2-hour charging time)
- If fully charged, you can use the appliance for ~75 minutes.
- Insert the C-plug into the waterproof charging port of the shaver and the USB end to your charging source (such as a USB device or using the USB wall adaptor) and the light ⚡ will come on to indicate that the appliance is charging.
- Charge the appliance for 2 hours until the battery indicator light turns off. Once the battery indicator light turns off, the unit is fully charged.
- When the unit is fully charged, the battery 🔋 and light ⚡ symbols are on all the time.
- When a customer charges the unit with the wrong voltage (over 5V), three indicators will quickly flash for 10 seconds. Unit will not be charged because of battery protection.

TRAVEL LOCK 🔒

To switch to off-state, push the on/off switch for 3 seconds until light flashes 🔒 2 times and goes into the locked state. If you try to turn on, the light will just flash indicating the unit is locked. To unlock: same instructions, push and hold down the on/off switch for 3 seconds.

Note: Only extended USB-C type adaptors will charge shaver. Normal USB-C (android, phone etc.) will not charge shaver.

The unit can usually be used right out of the box because it comes partially-charged. It takes 2 hours to fully charge the appliance. Each full charge gives you approximately 75 minutes of shaving time. If it takes you 5 minutes every time to shave, then you should get about 15 shaves from a full charge.

It is recommended to let the unit battery fully drain before recharging as this will extend battery life of the shaver. If shaver battery life is getting low while using the unit, you can plug it in to finish shaving.

