



Quick Start Guide

Your 3 easy steps

PLAYBULB

candle

Step 1

Insert 3 AA batteries into PLAYBULB candle



Step 2

Turn the light ON.



Download PLAYBULB X App



Step 3

Enjoy color and light control with Smart App



Replacing the Scent Chip




1) Open the white cover.

2) Take the scent chip out.



Replacing the Scent Chip

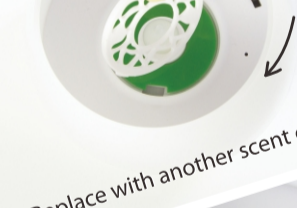

3) Replace with another scent chip.

4) Put the cover back and DONE!



1-Year

Warranty Programme

Thank you for your purchase of MIPOW's product. MIPOW warrants that the product is at the time of its original purchase free of defects in workmanship and material. This Limited Warranty for the product shall last for twelve (12) months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided. This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damages or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme temperatures; unauthorized modifications; unauthorized opening or repair; forces of nature; or other actions beyond the reasonable control of MIPOW. In case of when the warranty does not apply, a repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service centre.

NB: MIPOW reserves the right to interpret the Terms and Conditions contained herein; and the right for any change without prior notice.

CUSTOMER SERVICE

For FAQs and more information on this product, please go to www.mipow.com.