



Outdoor Light Control Instructions

LC120C

1. **DISCONNECT POWER TO BRANCH CIRCUIT.**
2. Carefully turn counter-clockwise to unlock and remove old light control.
3. Line up the 3 prongs on Light Control unit and gently press down and turn clockwise to lock into position. **DO NOT INSTALL THE LIGHT CONTROL WITH THE PHOTOCELL FACING ARTIFICIAL OR REFLECTED LIGHT.** This will cause the unit to cycle on and off at night.
4. Turn power "ON". Allow a few minutes for unit to adjust to lighting conditions.

NOTE: Fits fixtures with NEMA 3 prong receptacles.

1 Year Warranty

AmerTac™ warrants this product to be free from defects in material and workmanship for a period of 1 year from the date of purchase. AmerTac's obligations are limited to repairing or replacing any defective units and are effective only if such units are returned within 1 year of the purchase date, to AmerTac, 250 Boulder Drive, Breinigsville, PA 18031. Warranty void if damage is due to accident, negligence, misuse, alteration or improper installation. In no circumstance will AmerTac be liable for consequential or incidental damages relating in any way to this product.

Questions, ¿Preguntas?, La question? 1-800-777-0802

©2007 AmerTac™
250 Boulder Drive
Breinigsville, PA 18031
www.amertac.com

Made in China / Hecho en China / Fabriqué en Chine
I07-0025-A

