 


LED UMBRELLA LIGHT

LPL1040BX Owner's Manual

Location of Controls

1. 32 Super Bright LEDs
(8 LEDs in each light head - 5 White LEDs & 3 Amber LEDs)
2. Pivoting Light Heads
3. Quick Release Button: for mounting unit
4. ON/OFF Switch with Selectable Dimmer
5. Light Mode Switch: Downlight or Uplight + Downlight
6. LED Color Selector Switch
7. 8 LED Uplights
8. Self Adjusting Mounting Brackets
9. Battery Compartments

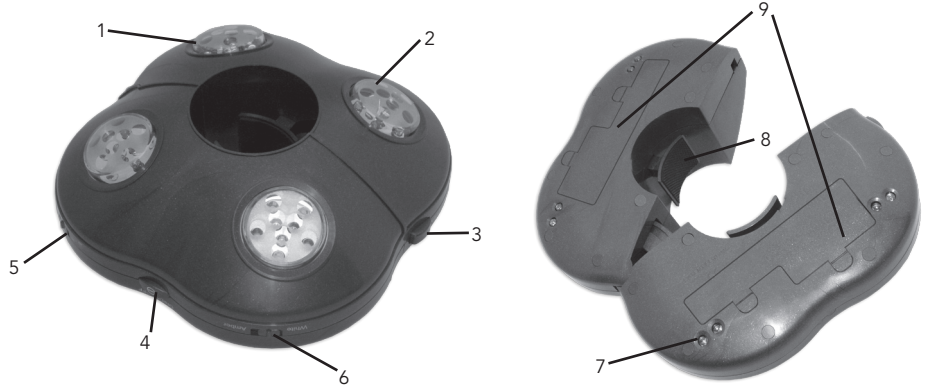

Installation


Light Positioning

This innovative light allows you to mount the light onto an umbrella pole. To do so, simply:

- (1) Press the Quick Release Button to separate the light.
- (2) Place the light around the pole (Fig 1) and re-connect the light. Be sure it clicks closed securely (Fig 2).
- (3) Self Adjusting Mounting Brackets will grip umbrella pole securely when light clicks closed around pole.

Each of the four light heads may be positioned independently. They can pivot 30° in any direction to direct light where you need it.

NOTE: Each light head can only pivot 30°. To prevent damage to the unit, do NOT force the light heads. Doing so may damage the unit and will void the warranty.

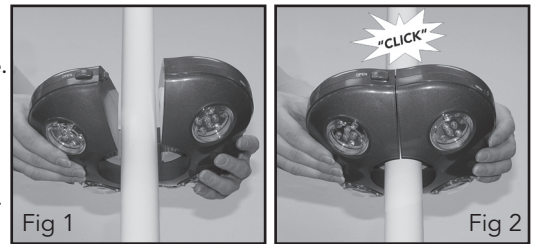

Operating Directions For ON/OFF Switch With Selectable Dimmer

1. Press once for full brightness.
2. Press and hold for desired brightness.
3. Press a third time to turn the light OFF.

Dual-Color Light Output

Each light head contains 5 Super Bright White LEDs and 3 Super Bright Amber LEDs (Amber light will reduce the attraction of insects). To select the color you desire simply, switch the Light Color Selector Switch to the desired light color.

NOTE: Both white & amber downlight LEDs cannot be on at the same time.

Light Mode

This light can be used in one of 3 configurations:

- (1) Downlights Only: White LEDs
- (2) Downlights Only: Amber LEDs
- (3) Uplights & Downlights: White LEDs only

Inserting/Replacing the Batteries

If the LEDs appear to be dim this is an indication that your batteries need to be replaced.

To Replace the Batteries


1. Remove cover to both battery compartments.
2. Remove old batteries (if replacing batteries) from both battery compartments.
3. Replace each compartment with three (3) new AA batteries.
4. Make sure to follow battery polarity guide when installing new batteries.
5. Replace battery compartments.

NOTE: This unit is designed to operate using either 6 AA or 3 AA batteries.

When using only 3 AA batteries, be sure to place all three batteries in one battery compartment.

The unit's output/brightness will be the same whether using

6 AA or 3 AA batteries. However, the run time from 3 AA batteries will be less.

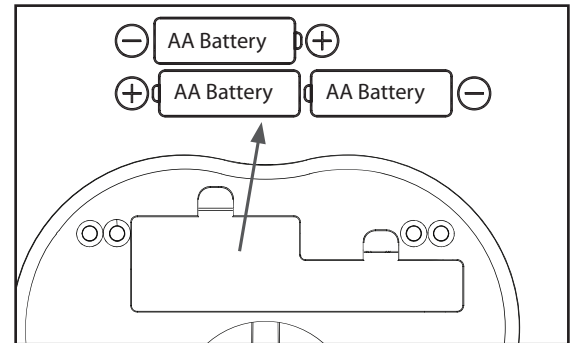

Battery Precautions:

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.

Customer Service

Answers to the most commonly asked questions can be found at www.amertac.com

Limited 2 Year Warranty

If you recently purchased the item the quickest option is to return the product to the retailer where the item was purchased. Return policies vary by retailer. If returning the item to the retailer is not possible visit www.amertac.com for warranty details and directions on how to have the product repaired or replaced.