 



1. Remove the skid from the vehicle
2. Release the tension of the torsion spring by unbolting the mounting block.



3. Remove the retaining clip and unbolt the upper link arm.

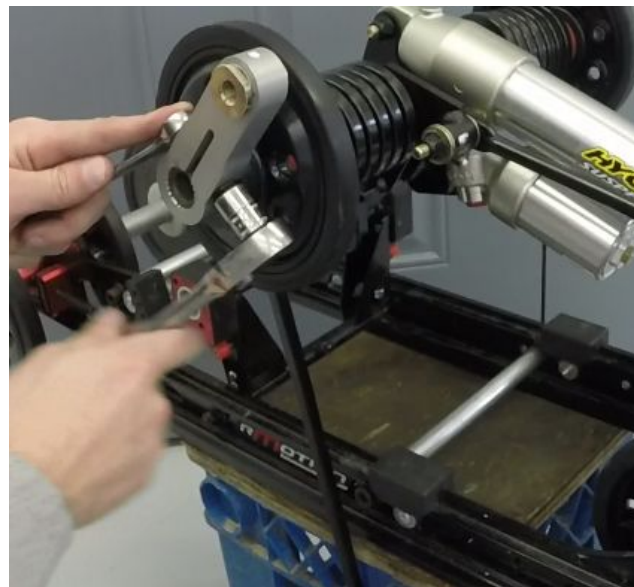

 4. Slide the link arm, plastic cover, axle spring, idler wheel, back spacer, and torsion spring off. Make note of the order of these parts as you will need to reinstall them once your new torsion spring spacers are installed.

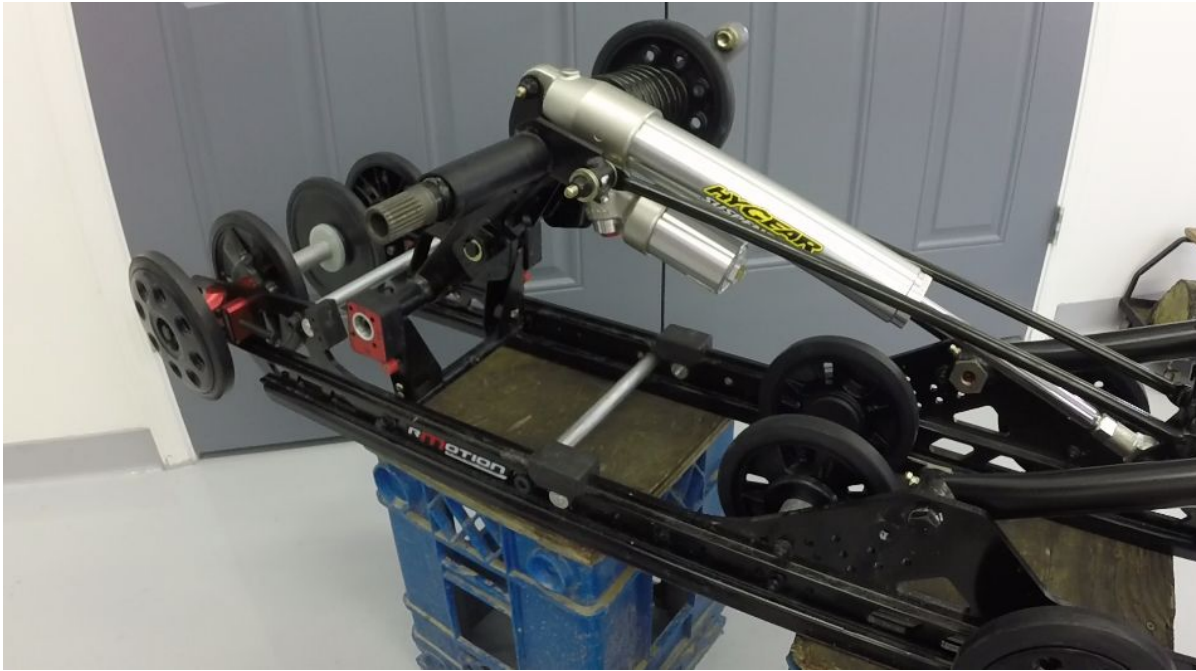

5. Remove the stock plastic wear sleeve




308 Peruville Rd. Freeville, NY 13068

*If in doubt, just ask !*


info@hygearsuspension.com 607.533.7434



6. Install the new torsion spring spacer with the tapered edge toward the center of the skid.

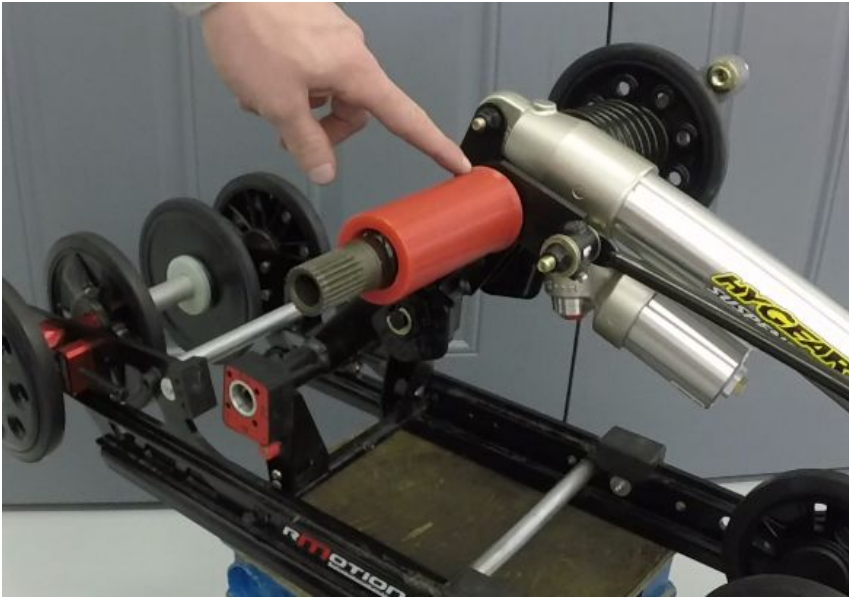

7. Re-install the original components

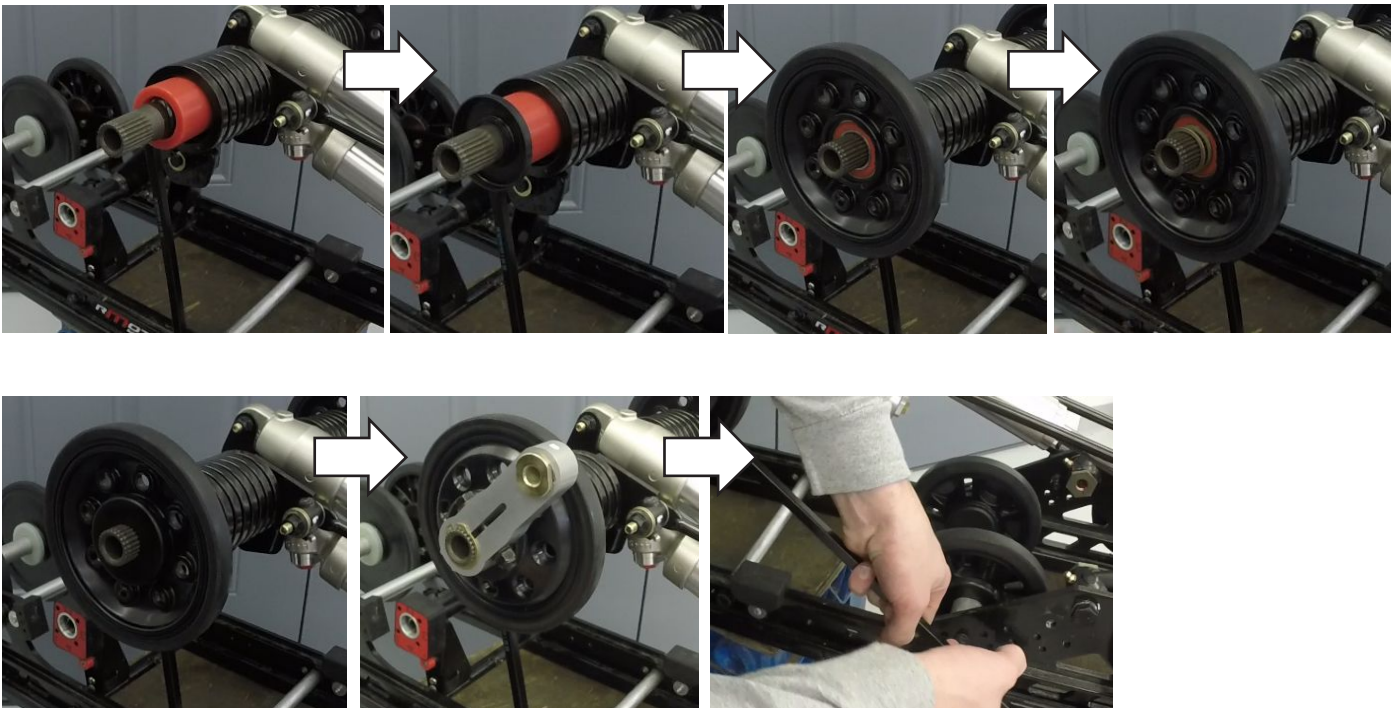

308 Peruville Rd. Freeville, NY 13068

*If in doubt, just ask !*

info@hygearsuspension.com 607.533.7434