




Do not place your hands near the strut during adjustment .
The angle of the strut joints will change during the adjustment
of the desktop height and it may hurt you.

Warning!




Please make sure all the devices are stably
placed on the desktop. Do not exceed the edge
of the desktop to prevent property damage or
personal injury.

Caution!

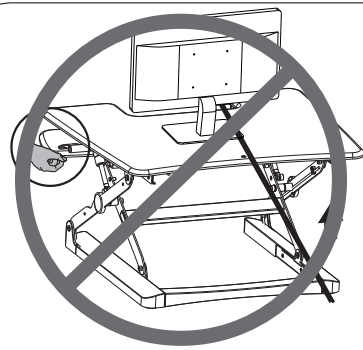

Do not tie the cable too tight. Allow the devices
to move vertically to prevent property damage
or personal injury.

Caution!

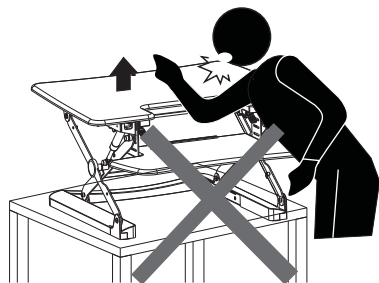

Lift the desktop to the top position before taking
off the computer devices in order to prevent
property damage or personal injury.

Warning!



The product must be moved by at least two
people to avoid collision of moving parts and
prevent property damage or personal injury.

Warning!

LOCTEK INC.

Address: 6475 Las Positas Rd, Livermore, CA 94551 United States
4290 Concorde Rd, Memphis, TN 38118 United States

Tel: 1-855-421-2808



Website: www.loctek.us

Loctek®



— E R G O N O M I C —

Model No.: LX30

Installation Guide

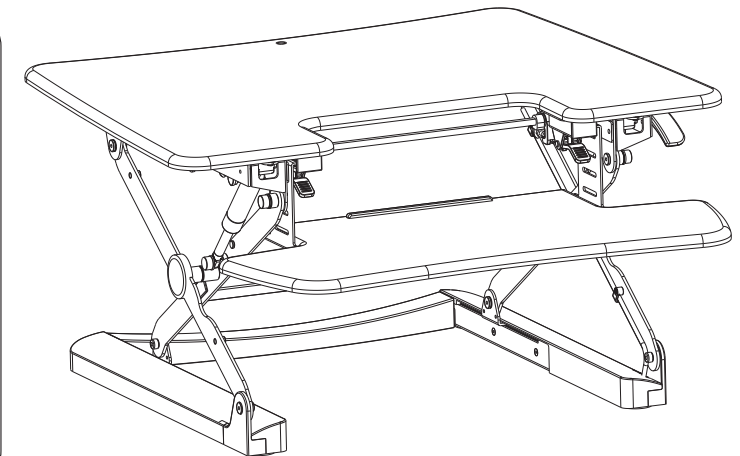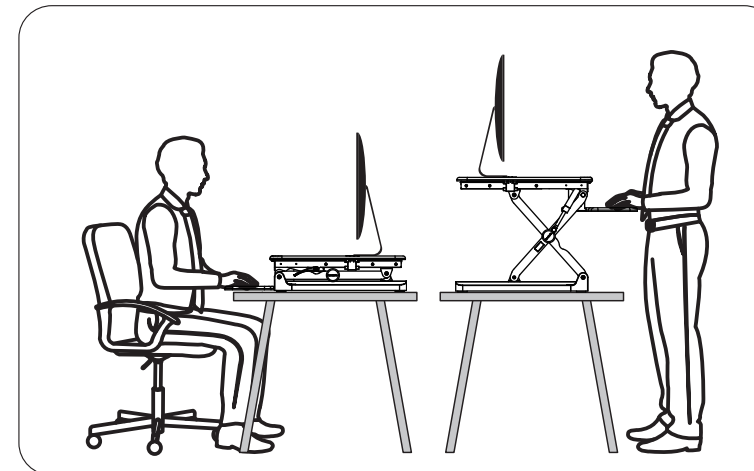

Specifications

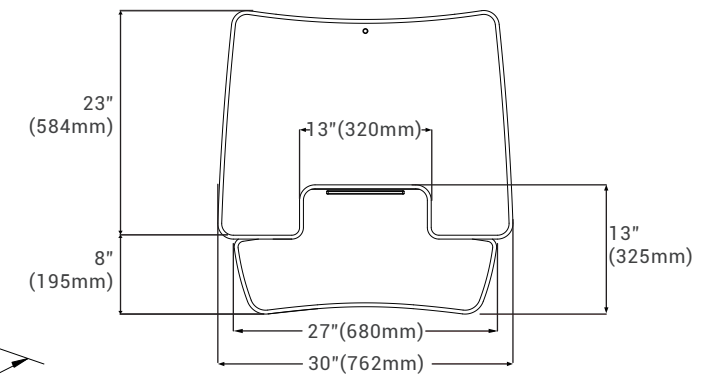
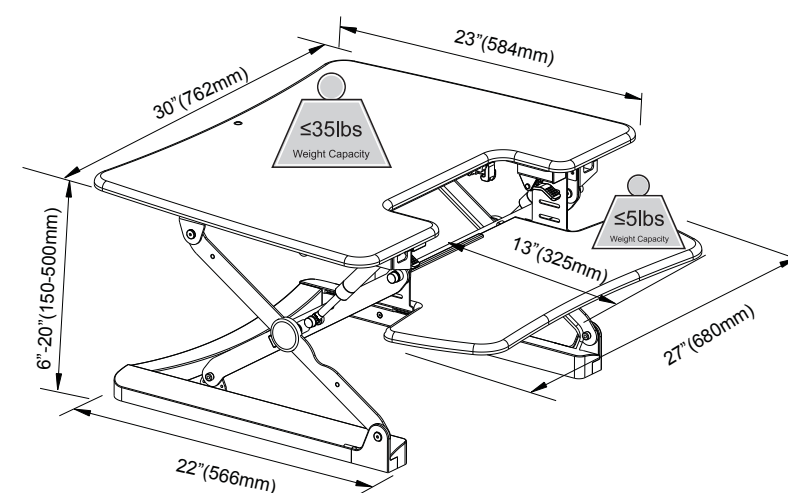





Do not exceed the
max loading capacity
as shown.


Weight Capacity	≤40lbs
Height Adjusted	6"-20" (150mm-500mm)

Parts Included

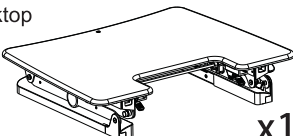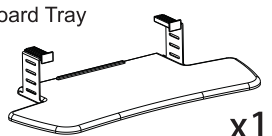


A Desktop  x1	B Keyboard Tray  x1	C Cable Ties  x4
D Decorative Covers  x2	E Cable Organizer  x1	


Step 1

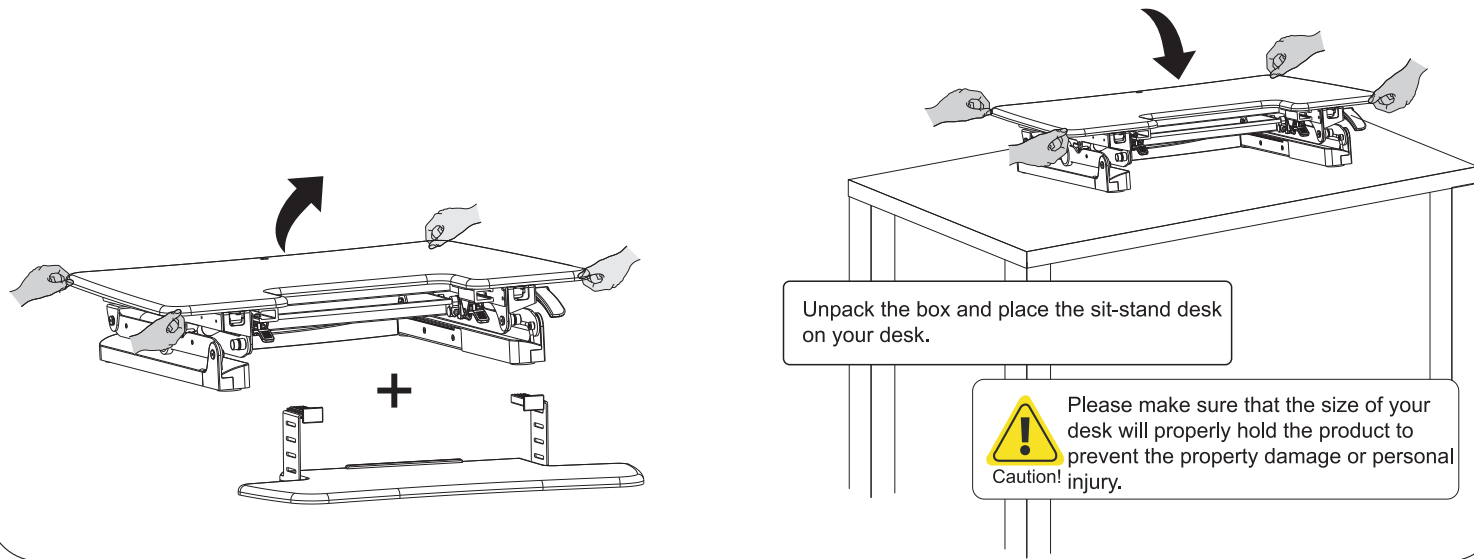


Step 2

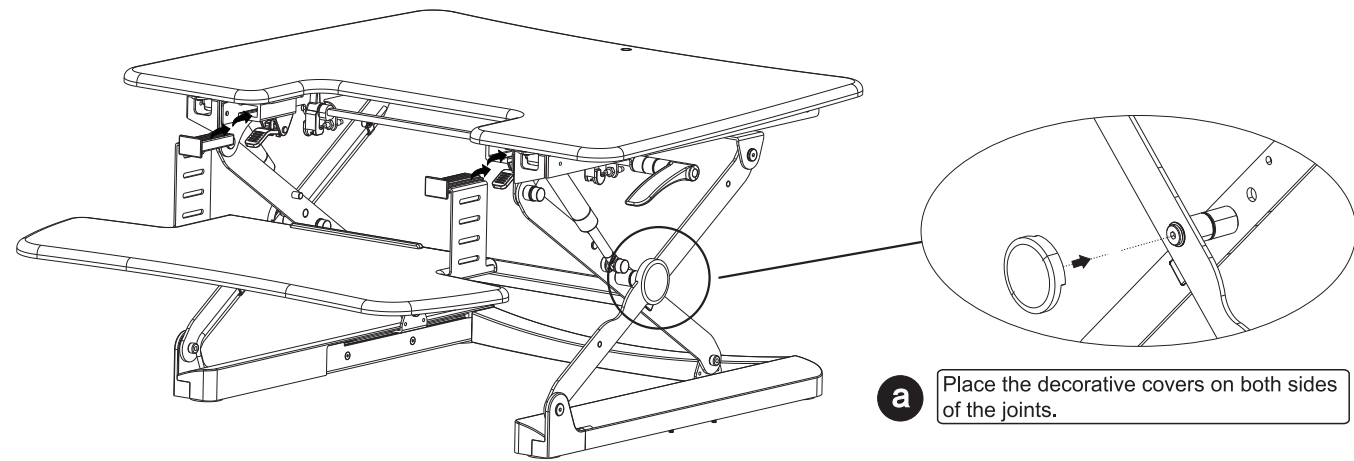


Install the connecting plates to the corresponding slide, and lock the levers.

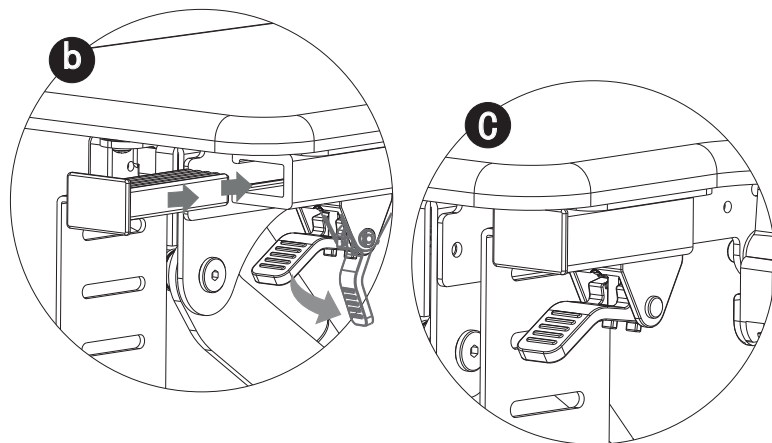


To remove the keyboard tray, unlock the levers.

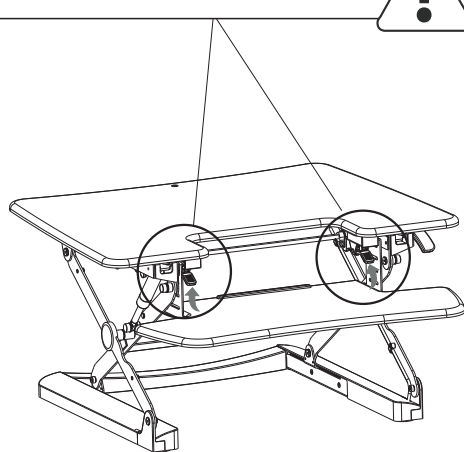

Step 3

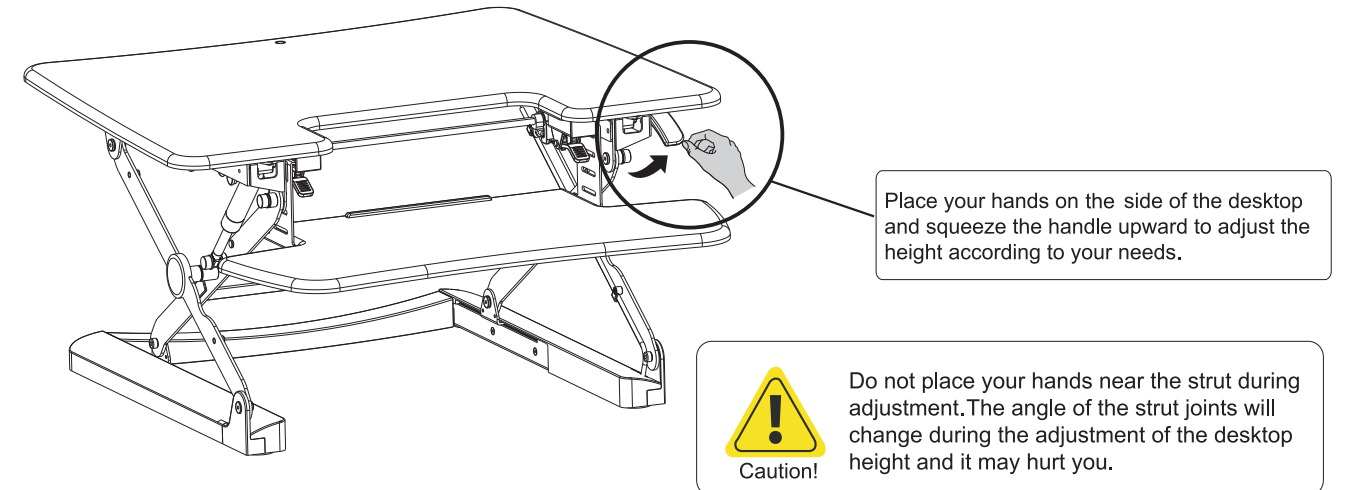

Step 4

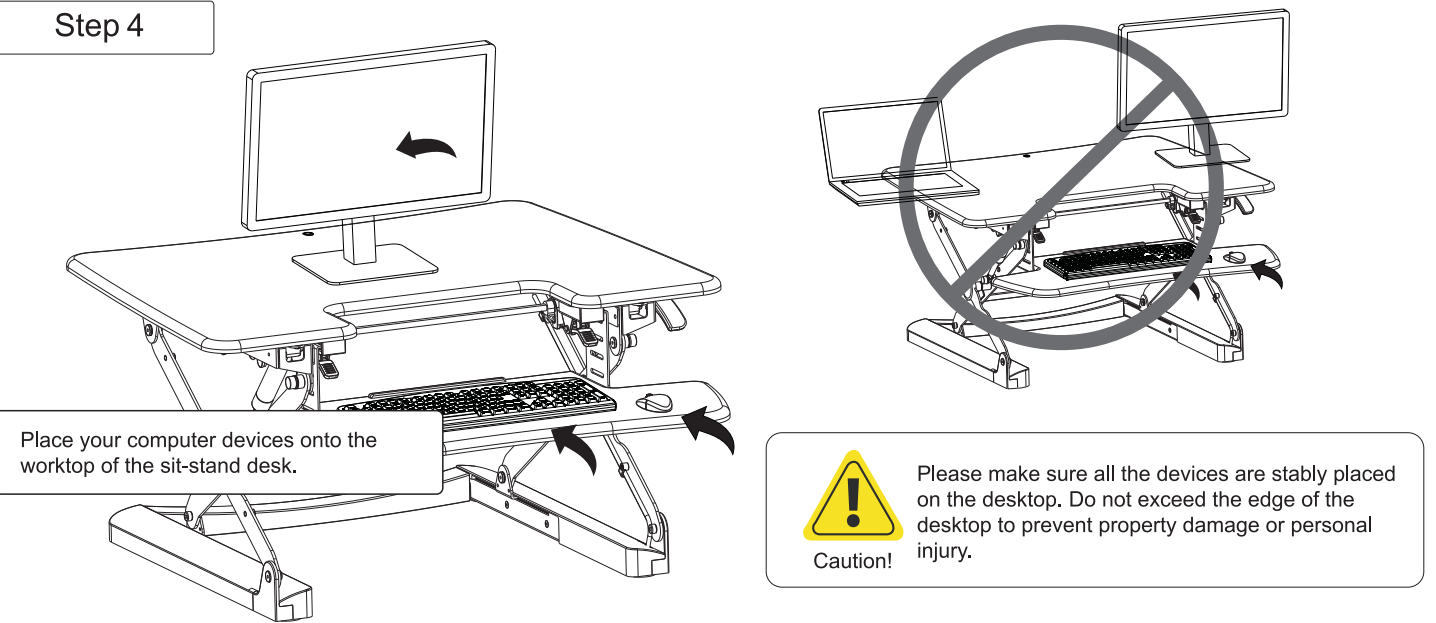

Step 5

