



## DEFY™ HEIGHT-ADJUSTABLE DESK

### PROGRAMMABLE PRESET INSTRUCTIONS

#### INITIALIZATION:

Follow the below steps before using your desk.

1. Press and hold Down Button until RST appears on the display
2. Desk will go to the lowest position, then rise slightly and stop
3. Release the Down Button
4. Desk is ready to use

#### PROGRAM POSITION PRESETS:

1. Use Up and Down Buttons to move desk to your desired position
2. Press SETTING button and one of the four Preset Position buttons simultaneously
3. Repeat for all preset buttons, up to four
4. Panel displays 1CF, 2CF, 3CF and 4CF for each reset when set

#### UP/DOWN BUTTON:

Press the UP Button, the legs will move up; Press Down Button, the legs will move down; release to stop movement.

SEE MORE ON BACK



## DEFY™ HEIGHT-ADJUSTABLE DESK PROGRAMMABLE PRESET INSTRUCTIONS CONTINUED

### **PROGRAM HEIGHT LIMITS:**

If you want to program height limits, always do it before you program preset.

#### Setting Upper Height Limit:

1. Press the Setting Button and UP Button simultaneously for one second
2. Upper limit is set when HI is displayed
3. To cancel, press same buttons again
4. Upper limit is cancelled when HCL is displayed.

#### Setting Lower Height Limit

1. Press Setting Button and Down Button simultaneously for one second
2. Lower limit is set when LO is displayed
3. To cancel, press the same buttons again
4. Lower limit is cancelled when LCL is displayed

### **DISPLAY INCH or CM:**

1. Press the Setting Button for 7 seconds until SET is displayed
2. Press the first Preset Button
3. LED will show the default unit of measurement
4. Press Up Button or Down button to change

### **RESET:**

Please note the desk may need to be reset if it is not working properly because of sudden power outage and other events that disrupt power. First try to power-off and then power-on the desk. If that does not work, power-off the desk and unplug the power cord for 20 seconds. Plug the desk back in, power-on and follow the initialization procedure.

### **OVERHEATING:**

To avoid overheating, do not move the desk up and down continuously for over two minutes within any 20-minute period. If the desk overheats, LED will display OH. Stop using the desk for 18 minutes and leave the desk cool down.