



- Pull tab on back off the CTRL Loader out and push up .The top shell will come off.
- 2. To remove lid, open it and press tab inside the Lid Hinge while at the same time pulling the lid out.
- The Tray come out by simply lifting it. It's secured by magnets.
- 4. Paddle can be removed by pulling it out. Its held by a magnet
- 5. To Remove ball tray disconnect battery wire and then pull apart. It is also held in place by magnets.

### POWER BUTTON AND SETTING THE AIM ANGLE INDICATOR

- Hold power button for 1 second and release when led turns on. If you keep holding, the loader will turn off in 5 seconds (to prevent loader going on in gear bag by accident)
- 2. When the CTRL loader and Aim Angle Indicator (AAI) are turned ON, tapping the power button once will set new angle for the AAL Note that for the new angle setting to happen the loader has to be between 0 degrees (horizontal) and 90 degrees (pointing to the Sky) and be held steady (not moving). Flashing green light will indicate that the new angle was accepted and flashing red will indicate that it was rejected. Pointing loader towards ground and tapping the power button once, will reset AAI to factory default
- Tapping power button twice, will force feed for 2 seconds. If AAI is off, tapping once will activate the force
- 4. Turn loader OFF by long pressing the power button



### CONFIG MODE:

To enter config mode, press config mode button for 1 second. To exit, tap the power button. To cycle menus, tap config mode button. To select a setting, press and hold config mode button.

When setting is selected, the loader will flash back the current value. Tap the config mode button X times to set a new value. The CTRL loader has user adjustable settings:

- Aim Angle Indicator Sensitivity, setting values 1-4. Default #2
  - #1 1 degree for each indicator light step
- #2 2 degree for each indicator light step
- #3 3 degree for each indicator light step
- #4 Aim Angle Indicator is turned OFF (led always green)
- 2. N-Charge or Batteries. Default #1
  - #1 Batteries
  - #2 N-Charge

(affects low battery indicator and pressure setting)

Changing this setting, will also change pressure setting. When batteries are selected, the pressure will be set to max. When N-Charge is selected, pressure will be halved.

- 3. Shot Sensor Sensitivity, Setting values 1 to 7, Default #5.
  - #1 is least sensitive
  - #7 is most sensitive.

Default is very sensitive and should work on any gun but lowering the value 1-2 steps will reduce extra spinning on guns with higher recoil.

- 4. LED ON/OFF. Setting values 1 to 2. Default #1
- #1 LED is ON
- #2 LED is OFF.
- 5. Pressure/Torque, Setting values 1 to 8. Default with batteries #8; Default with N-Charge #4.
- #1 is least Pressure/Torque
- #8 is most Pressure/Torque

- 1. If Aim Angle Indicator (AAI) is on, led shows the loader angle. Red if not close to the set angle, yellow if it is close and green when it is dead on.
- 2. If AAI is off, led lights green.
- 3. When barrel/loader is pointed towards ground, led shows low battery indicator.

## LOW BATTERY INDICATOR:

- 1. When you turn on the CTRL Loader current battery status is shown with the LED.

  - b. YELLOWish=used but still ok (voltage is between 3.9V-4.2V)
- c. RED=change batteries
- 2. Note that if you are using the N-Charge re-charhable battery pack you need to set config mode battery type to N-Charge for low battery indicator to work correctly.
- 3. Battery status is also shown when you point barrel towards ground.

# **WEKILL SUCKERS**

US/WORLD:WWW.BUNKERKINGS.COM EU:WWW.BUNKERKINGS.EU INSTA BUNKERKINGS | FB BNKRKINGS





GIRLS ENGRS